

## Multimedia System

Multimedia system .....	4-2
AUX, USB and iPod® port .....	4-2
Antenna .....	4-2
Steering wheel audio controls .....	4-3
<i>Bluetooth</i> ® Wireless Technology hands-free .....	4-4
Audio / Video / Navigation system (AVN) .....	4-4

### MULTIMEDIA SYSTEM

#### **i** Information

- If you install an aftermarket HID headlamp, your vehicle's audio and electronic devices may malfunction.
- Prevent chemicals such as perfume, cosmetic oil, sun cream, hand cleaner, and air freshener from contacting the interior parts because they may cause damage or discoloration.

#### AUX, USB and iPod® port



You can use an AUX port to connect audio devices and an USB port to plug in an USB and an iPod®.

To use the AUX, USB and iPod®, open the front console cover by slightly pressing the lower part of the cover (1).

After use, to close the cover, slightly pull down the cover.


#### **i** Information

When using a portable audio device connected to the power outlet, noise may occur during playback. If this happens, use the power source of the portable audio device.

\* iPod® is a trademark of Apple Inc.

#### Antenna

##### Roof antenna

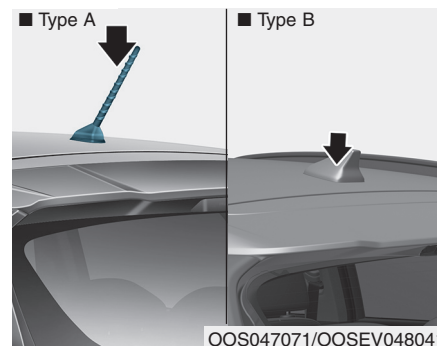

The roof antenna receives transmitted data. (For example : AM/FM, DAB, GPS/GNSS)

- For antenna type A


Rotate the roof antenna in a counterclockwise direction to remove it. Rotate it in a clockwise direction to reinstall it.

#### **NOTICE** - For antenna type A


- Before entering a place with low height clearance or a car wash, remove the antenna by rotating it counterclockwise. If not, the antenna may be damaged.
- When reinstalling your antenna, it is important that it is fully tightened and adjusted to the upright position to ensure proper reception.

## Steering wheel audio controls (if equipped)


■ Type A

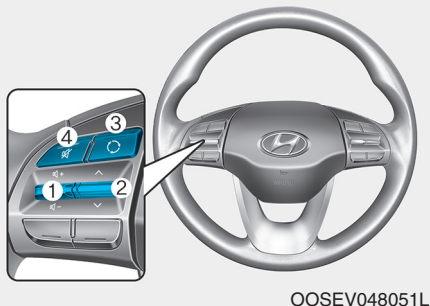


■ Type B

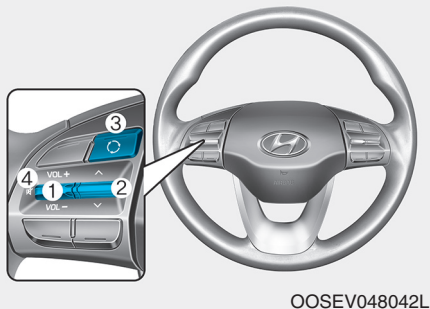

■ Type C

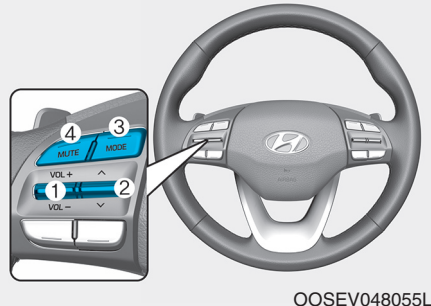

■ Type D

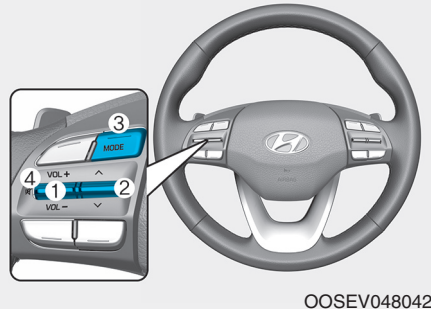

The steering wheel audio control switches are installed for your convenience.

### NOTICE

**Do not operate audio remote control buttons simultaneously.**

### VOLUME (VOL + / - ) (1)

- Move the VOLUME toggle switch up to increase volume.
- Move the VOLUME toggle switch down to decrease volume.

### SEEK/PRESET ( ^ / v ) (2)

If the SEEK/PRESET toggle switch is moved up or down and held for 0.8 seconds or more, it will function in the following modes.

#### RADIO mode

It will function as the AUTO SEEK select switch. It will SEEK until you release the switch.

#### MEDIA mode

It will function as the FF/REW switch.

If the SEEK/PRESET toggle switch is moved up or down, it will function in the following modes.

### **RADIO mode**

It will function as the PRESET STATION UP/DOWN switch.

### **MEDIA mode**

It will function as the TRACK UP/DOWN switch.

### **MODE (Ⓢ) (3)**

Press the MODE button to select Radio, Disc, or AUX.


### **MUTE (🔇) (4)**

- Press the button to mute the sound.
- Press the button again to activate the sound.

### **i Information**

Detailed information is described in a separately supplied manual.

## **Bluetooth® Wireless Technology hands-free**

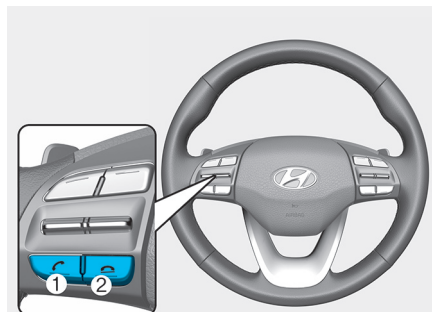

OOSEV048043



OOSEV048050L

- (1) Call / Answer button
- (2) Call end button
- (3) Microphone  
(RHD vehicle : Right side)

- Audio : For detailed information, refer to “AUDIO” in this chapter.
- AVN : Detailed information for the Bluetooth® Wireless Technology hands-free is described in the manual supplied separately.

## **Audio / Video / Navigation system (AVN) (if equipped)**

Detailed information for the AVN system is described in a separately supplied manual.

You can use the phone wirelessly by using the Bluetooth® Wireless Technology.