

Index

A

AC Inverter3-200

Accessing Your Vehicle3-4

 Immobilizer System3-14

 Remote Key3-4

 Smart Key3-8

Air Bag - Advanced Supplemental Restraint System.....2-56

 Additional Safety Precautions2-78

 Air Bag Warning Label2-79

 Curtain air bags2-61

 Driver's front air bag2-58

 Driver's knee air bag2-58

 How Does the Air Bag System Operate?2-62

 Occupant Classification System (OCS)2-67

 Passenger's front air bag2-58

 Side air bags2-59

 SRS Care2-77

 What to Expect After an Air Bag Inflates2-66

 Where Are the Air Bags?2-58

 Why Didn't My Air Bag Go Off in a Collision?2-72

Air Bag Warning Label2-79

Air Cleaner7-23

 Filter Replacement7-23

Air Conditioning System8-6

All Wheel Drive (AWD).....5-43

 AWD Operation5-45

 Emergency Precautions5-49

 LCD display message5-48

 Multi Terrain Control5-43

Antenna4-2

Anti-lock Brake System (ABS)5-33

Appearance Care7-70

 Exterior Care7-70

 Interior Care7-75

Audio (Display Audio)/Video/Navigation System (AVN)4-4

Auto Hold5-29

Automatic Climate Control System3-173

 Automatic Temperature Control Mode3-174

 Manual Temperature Control Mode3-175

 Rear climate control3-181

 System Maintenance3-186

 System Operation3-184

Automatic Transmission5-15

 Automatic transmission operation5-15

 Good driving practices5-20

 LCD display message5-19

 Paddle Shifter (Manual Shift Mode)5-22

 Parking5-18

Automatic Ventilation3-193

B

Basic troubleshooting guide	6-26
Battery	7-30
Battery Recharging	7-31
For Best Battery Service	7-31
Reset Features	7-33
Before Driving	5-5
Before Entering the Vehicle	5-5
Before Starting	5-5
Blind-Spot Collision Warning/Blind-Spot Collision-Avoidance Assist	5-79
Detecting Sensor (Camera and Radar)	5-85
Limitations of the System	5-88
System Description	5-79
System Setting and Operation	5-80
Warning and System Control	5-83
Blind-spot View Monitor system	3-152
<i>Bluetooth</i> [®] Wireless Technology	4-4
Brake Fluid	7-22
Checking the Brake Fluid Level	7-22
Braking System	5-23
Anti-lock Brake System (ABS)	5-33
Auto Hold	5-29
Disc Brakes Wear Indicator	5-24
Downhill Brake Control (DBC)	5-39
Electronic Parking Brake (EPB)	5-24

Electronic Stability Control (ESC)	5-35
Good Braking Practices	5-42
Hill-Start Assist Control (HAC)	5-39
Power Brakes	5-23
Trailer Stability Assist (TSA)	5-42
Vehicle Stability Management (VSM)	5-38
Bulb Wattage	8-3

C

Cargo Security Screen	3-207
Center Console Storage	3-194
Child Restraint System (CRS)	2-45
Children Always in the Rear	2-45
Installing a Child Restraint System (CRS)	2-49
Selecting a Child Restraint System (CRS)	2-47
Child-Protector Rear Door Locks	3-22
Climate Control Additional Features	3-193
Automatic Ventilation	3-193
Cluster ionizer	3-193
Sunroof Inside Air Recirculation	3-193
Climate Control Air Filter	7-25
Filter Inspection	7-25
Clock	3-205
Cluster ionizer	3-193
Coat Hook	3-205
Conversation mirror	3-198
Cup Holder	3-196
Curtain air bags	2-61

D

Daytime Running Light Replacement	7-62
Dimensions	8-2
Door Locks	3-17
Automatic Door Lock and Unlock Features	3-21
Child-Protector Rear Door Locks	3-22
Electronic Child Safety Lock System	3-22
Operating Door Locks from Inside the Vehicle	3-18
Operating Door Locks from Outside the Vehicle	3-17
Rear Occupant Alert (ROA) System	3-25
Safe Exit Assist (SEA) System	3-23
Downhill Brake Control (DBC)	5-39
Drive Mode Integrated Control System (2WD)	5-56
Drive Mode	5-56
Drive Mode Integrated Control System (AWD)	5-60
Drive Mode	5-60
Driver Assist System.....	3-150
Blind-spot View Monitor system	3-152
Parking Distance Warning (Reverse) System	3-154
Parking Distance Warning(Reverse/Forward) System	3-157
Rear View Monitor.....	3-150
Surround View Monitoring	3-151
Driver Attention Warning (DAW) System.....	5-118
Resetting the System	5-119
System Malfunction	5-120
System Setting and Operation	5-118
System Standby	5-120

Driver Position Memory System	3-29
Easy Access Function.....	3-31
Recalling Positions from Memory	3-30
Resetting the Driver's Seat Memory System	3-30
Storing Positions into Memory	3-29
Driver's front air bag.....	2-58
Driver's knee air bag	2-58

E

Electronic Child Safety Lock System.....	3-22
Electronic Parking Brake (EPB).....	5-24
Electronic Stability Control (ESC).....	5-35
Emission Control System	7-78
Crankcase Emission Control System	7-78
Evaporative Emission Control System Including Onboard Refueling Vapor Recovery (ORVR)	7-78
Exhaust Emission Control System	7-79
Engine	8-2
Engine compartment.....	1-6, 7-3
Engine Coolant	7-19
Changing Engine Coolant	7-21
Checking the Engine Coolant Level	7-19
Engine Number	8-11
Engine Oil.....	7-17
Checking the Engine Oil and Filter	7-18
Checking the Engine Oil Level.....	7-17

Engine Start/Stop Button	5-10
Explanation of scheduled maintenance items.....	7-14
Exterior Features.....	3-55, 3-211
Fuel Filler Door.....	3-68
Hood	3-55
Non-Powered Tailgate.....	3-56
Power Tailgate.....	3-58
Roof Side Rails.....	3-211
Smart Tailgate.....	3-64
Exterior Lights	3-134
Exterior Overview.....	1-2

F

Floor Mat Anchor(s)	3-206
Forward Collision-avoidance Assist (FCA) System.....	5-64
FCA Sensor (Front Radar/Front Camera).....	5-69
FCA Warning Message and Brake Control.....	5-67
Limitations of the System	5-73
System Malfunction	5-71
System Setting and Operation.....	5-64
Front Air Ventilation Seats.....	2-27
Front Seats	2-6
Fuel Filler Door	3-68
Fuses	7-49
Engine Compartment Panel Fuse Replacement.....	7-51
Fuse/Relay Panel Description	7-52
Instrument Panel Fuse Replacement.....	7-50

G

Glove Box.....	3-194
----------------	-------

H

Hazard Warning Flasher	6-2
Head Restraints	2-21
Head Up Display (HUD)	3-132
Headlamp Replacement	7-62
Heated Steering Wheel	3-34
High Mounted Stop Lamp Bulb Replacement	7-67
Highway Driving Assist (HDA) System	5-122
System Setting and Operation.....	5-122
Warning Message	5-125
Hill-Start Assist Control (HAC)	5-39
Hood.....	3-55
Horn	3-33

I

If the Engine Overheats6-6

If the Engine Will Not Start.....6-3

 If the Engine Doesn't Turn Over or
 Turns Over Slowly6-3

 If the Engine Turns Over Normally but
 Doesn't Start6-3

If You Have a Flat Tire6-14

 Changing Tires6-16

 Jack and Tools6-14

 Removing and Storing the Spare Tire.....6-15

Ignition Switch.....5-7

 Engine Start/Stop Button.....5-10

 Key Ignition Switch5-7

Immobilizer System.....3-14

Important Safety Precautions.....2-2

 Air Bag Hazards2-2

 Always Wear Your Seat Belt.....2-2

 Control Your Speed2-3

 Driver Distraction.....2-2

 Keep Your Vehicle in Safe Condition2-3

 Restrain All Children.....2-2

In Case of an Emergency While Driving6-2

 If the Engine Stalls at a Crossroad or Crossing6-2

 If the Engine Stalls While Driving.....6-2

 If you Have a Flat Tire While Driving.....6-3

Infotainment System4-2

 Antenna4-2

 Audio (Display Audio)/Video/Navigation System
 (AVN).....4-4

 Bluetooth® Wireless Technology.....4-4

 Steering Wheel Audio Controls.....4-3

 USB Port4-2

Inside Rearview Mirror.....3-35

Instrument Cluster.....3-71

 Gauges and Meters3-73

 Instrument Cluster Control.....3-73

 LCD Display Messages.....3-92

 Transmission Shift Indicator3-78

 Warning and Indicator Lights.....3-78

Instrument Panel Overview1-5

Interior Features.....3-196

 AC Inverter.....3-200

 Cargo Security Screen3-207

 Clock3-205

 Coat Hook3-205

 Conversation mirror3-198

 Cup Holder3-196

 Floor Mat Anchor(s).....3-206

 Luggage Net Holder.....3-207

 Power Outlet.....3-199

 Side Curtain.....3-209

 Sunvisor.....3-198

 USB Charger3-202

 Wireless Cellular Phone Charging System3-203

Interior Light Bulb Replacement	7-68
Interior Lights	3-141
Interior Overview	1-4
ISG (Idle Stop and Go) System	5-51
Battery Sensor Deactivation.....	5-55
ISG System Malfunction.....	5-54
To Activate the ISG System	5-51
To Deactivate the ISG System	5-54

J

Jump Starting	6-4
---------------------	-----

K

Key Ignition Switch.....	5-7
--------------------------	-----

L

Lane Following Assist (LFA) System	5-104
LFA Setting and Operation.....	5-105
Limitations of the System	5-108
Warning Message	5-106
Lane Keeping Assist (LKA) System.....	5-110
Limitations of the System	5-115
LKA System Function Change.....	5-117
LKA System Operation	5-111
Warning Light and Message.....	5-113

LCD Display (Cluster Type A and Type B).....	3-98
LCD Display Control	3-98
LCD Display Modes	3-99
LCD Display (Cluster Type C)	3-116
LCD Display Control	3-116
View Modes.....	3-117
Leading Vehicle Departure Alert	5-147
System Setting and Operation.....	5-147
License Plate Light Bulb Replacement	7-67
Light Bulbs	7-62
Headlamp, Parking lamp, Daytime Running Light, Turn signal lamp and Side marker	7-62
High Mounted Stop Lamp Bulb Replacement.....	7-67
Interior Light Bulb Replacement	7-68
License Plate Light Bulb Replacement.....	7-67
Rear combination lamp light replacement	7-65
Side Repeater Lamp Replacement	7-65
Lighting.....	3-134
Exterior Lights.....	3-134
Interior Lights.....	3-141
Welcome System	3-144
Luggage Net Holder	3-207
Luggage Tray	3-195

M

Maintenance services7-4
 Owner Maintenance Precautions.....7-4
 Owner's Responsibility.....7-4
 Manual Climate Control System3-161
 Heating and Air Conditioning3-162
 Rear climate control3-166
 System Maintenance3-171
 System Operation3-169
 Mirrors3-35
 Inside Rearview Mirror3-35
 Reverse Parking Aid Function3-43
 Side View Mirrors3-41
 Multi Terrain Control.....5-43

N

Non-Powered Tailgate3-56

O

Option Menu (Cluster Type C).....3-121
 Owner maintenance7-5
 Owner Maintenance Schedule.....7-6

P

Parking Distance Warning (Reverse) System.....3-154
 Parking Distance Warning(Reverse/Forward) System ..3-157
 Parking lamp Replacement7-62
 Passenger's front air bag2-58
 Power Outlet3-199
 Power Tailgate3-58

R

Rear combination lamp light replacement.....7-65
 Rear Cross-traffic Collision Warning (RCCW)/
 Rear Cross-traffic Collision-avoidance Assist
 (RCCA).....5-93
 Detecting Sensor5-99
 Limitations of the System5-100
 System Description5-93
 System Setting and Operation.....5-94
 Warning and System Control5-96
 Rear Occupant Alert (ROA) System3-25
 Rear Seats2-13
 Rear View Monitor3-150
 Rear Window Defroster3-192
 Recommended Lubricants and Capacities.....8-7
 Recommended SAE Viscosity Number8-9
 Remote Key3-4
 Reverse Parking Aid Function.....3-43
 Roof Side Rails3-211

S

Safe Exit Assist (SEA) System.....	3-23
Scheduled maintenance services.....	7-7
Maintenance Under Severe Usage Conditions (3.8 GDI).....	7-12
Normal Maintenance Schedule (3.8 GDI)	7-8
Seat Belts	2-29
Additional Seat Belt Safety Precautions	2-41
Care of Seat Belt	2-44
Seat Belt Restraint System.....	2-33
Seat Belt Safety Precautions	2-29
Seat Belt Warning Light.....	2-30
Seat Warmers	2-26
Seats	2-4
Front Air Ventilation Seats.....	2-27
Front Seats.....	2-6
Head Restraints	2-21
Rear Seats.....	2-13
Safety Precautions.....	2-5
Seat Warmers.....	2-26
Side air bags.....	2-59
Side Curtain	3-209
Side marker Replacement	7-62
Side Repeater Lamp Replacement.....	7-65
Side View Mirrors.....	3-41

Smart Cruise Control With Stop & Go System.....	5-129
Adjusting the Sensitivity of Smart Cruise Control ..	5-130
Limitations of the System	5-141
Sensor to Detect Distance to the Vehicle Ahead.....	5-139
Smart Cruise Control Speed.....	5-132
Smart Cruise Control Switch	5-130
Smart Cruise Control Vehicle-to-Vehicle Distance..	5-136
To Convert to Cruise Control Mode	5-131
Smart Key	3-8
Smart Tailgate	3-64
Special Driving Conditions.....	5-149
Driving at Night	5-150
Driving in Flooded Areas	5-151
Driving in the Rain.....	5-150
Hazardous Driving Conditions.....	5-149
Highway Driving.....	5-151
Reducing the Risk of a Rollover.....	5-152
Rocking the Vehicle	5-149
Smooth Cornering	5-150
Steering Wheel.....	3-32
Electric Power Steering (EPS)	3-32
Heated Steering Wheel.....	3-34
Horn.....	3-33
Tilt Steering/Telescopic Steering.....	3-33
Steering Wheel Audio Controls	4-3

Storage Compartment	3-194
Center Console Storage	3-194
Glove Box	3-194
Luggage Tray	3-195
Sunroof	3-48
Dual wide sunroof	3-48
Resetting the rear sunshade	3-53
Resetting the Sunroof	3-52
Sliding the Sunroof	3-50
Sunroof	3-48
Sunroof Open Warning	3-54
Sunroof Opening and Closing	3-50
Sunshade	3-49
Tilting the Sunroof (Front)	3-51
Sunroof Inside Air Recirculation	3-193
Sunvisor	3-198
Surround View Monitoring	3-151

T

Theft-Alarm System	3-28
Tilt Steering/Telescopic Steering	3-33
Tire Pressure Monitoring System (TPMS)	6-8
Changing a Tire with TPMS	6-12
Check Tire Pressure	6-8
Low Tire Pressure LCD Display with Position Indicator	6-10
Low Tire Pressure Telltale	6-10
Tire Pressure Monitoring System	6-9
TPMS Malfunction Indicator	6-11
Tire Specification and Pressure Label	8-11
Tires and Wheels	7-34, 8-5
All Season Tires	7-47
Check Tire Inflation Pressure	7-36
Radial-Ply Tires	7-47
Recommended Cold Tire Inflation Pressures	7-35
Snow Tires	7-47
Tire Care	7-34
Tire Maintenance	7-40
Tire Replacement	7-38
Tire Rotation	7-36
Tire Sidewall Labeling	7-40
Tire Terminology and Definitions	7-44
Tire Traction	7-39
Wheel Alignment and Tire Balance	7-37
Wheel Replacement	7-39

Towing	6-22
Emergency Towing.....	6-24
Removable Towing Hook.....	6-23
Towing Service.....	6-22
Trailer Stability Assist (TSA)	5-42
Trailer Towing.....	5-156
Driving with a trailer.....	5-159
If you decide to pull a trailer.....	5-156
Maintenance when trailer towing	5-162
Trailer towing equipment	5-158
Trip Computer (Cluster Type A and Type B)	3-112
Turn signal lamp Replacement	7-62

U

USB Charger.....	3-202
USB Port.....	4-2

V

Vehicle Certification Label	8-10
Vehicle Identification Number (VIN).....	8-10
Vehicle Load Limit	5-164
Tire Loading Information Label.....	5-165
Vehicle Stability Management (VSM).....	5-38
Volume and Weight.....	8-6

W

Washer Fluid	7-23
Checking the Washer Fluid Level.....	7-23
Welcome System.....	3-144
Windows	3-44
Power Windows.....	3-45
Windshield Defrosting and Defogging.....	3-188
Auto Defogging System (Additional Feature with Automatic Temperature Control System)	3-190
Rear Window Defroster.....	3-192
Winter Driving.....	5-153
Snow or Icy Conditions.....	5-153
Winter Precautions	5-153
Wiper Blades.....	7-27
Blade Inspection.....	7-27
Blade Replacement.....	7-27
Wipers and Washers.....	3-146
Front Windshield Washers.....	3-148
Front Windshield Wipers.....	3-146
Rear Window Wiper and Washer	3-149
Wireless Cellular Phone Charging System.....	3-203