

IONIQ 6

To access the **online manual** for Car Infotainment System, scan the **QR code**.



- This guide covers specifications for all vehicle models, including optional specifications, and is based on the latest version of system software.
- The design and specification of the system may change without prior notice for performance improvement.
- In order to improve the product performance, the functions and services in this manual are subject to change without notice. In case of software update, the screens in this manual may differ from actual ones on the product.
- For more information about the functions and services updated for performance improvement, access the online user's manual.
- Functions and services in this manual may differ from those in the actual vehicle. For more details, refer to the owner's manual or brochure of your vehicle.
- I Your system is not compatible with the system software and map data for regions outside of the country of purchase.


Reading the manual on web with the QR code

You can access the online user's manual of the system by scanning the QR code with your smartphone.

/ Warning


Park the vehicle at a safe place and scan the QR code. To ensure your safety, the system does not provide QR codes while driving.

- 1 Scan the QR code by using any of the following methods:
 - On the All Menus screen, press **User's Manual**.
 - On the All Menus screen, press **Setup** ▶ **General** ▶ **System Info** ▶ **User's Manual on** Web (QR Code).
- 2 Scan the QR code after installing the QR code reader App from App Store (A) or Google Play Store ().

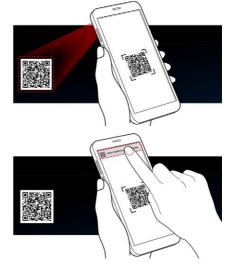

- 3 Press the URL for User's Manual on Web from the smartphone display.
 - The online user's manual of the system appears in the Internet browser App on the smartphone.
- Depending on how you scan the QR code, the online manual may open without pressing the URL.
- With a camera App of your iPhone or Android smartphone, the QR code can also be scanned. Depending on the Android smartphone model, the QR code scanning may not be supported for the provided App. For more details, see the smartphone's manual.
- When you scan the QR code on each function menu, you can see the usage of the function running (except for several functions).
 - Run the desired function on the system and then press User's Manual on Web (OR Code) from the menus on the screen.
- Without scanning the QR code, you can directly enter the URL address to see User's Manual on Web. (http://webmanual.hyundai.com/STD_GEN5_WIDE/AVNT/CAN/English/ index.html)

 Control panel



1 POWER button/VOLUME knob

- Turn on or off the Radio/Media.
- Press and hold the button to turn off the screen and sound.
- Turn the knob to adjust the system volume (except for navigation sound).

2 MAP button

- Returns to the current location on the map.
- While in guidance on the navigation screen, press to repeat the voice guidance.

3 NAV button

- Displays the Navigation Menu screen.
- Press and hold the button to display the Places screen.

(4) MEDIA button

- · Runs the connected media.
- Press and hold the button to display the Radio/Media selection window.

5 Custom button

- Runs the user-defined function.
- Press and hold the button to display the function settings screen.

6 Search lever


- While listening to the radio, adjust the frequency or change the broadcasting channel.
- While playing media, scan music or files.
- During scanning, select the current channel, music or file.
- On the map screen, zoom in or out on the map (if activated).

System Reset button

· Restarts the system.

 ${\cal Z}$ The system shape and menu arrangement may differ depending on the vehicle model and specifications.

Steering wheel remote control

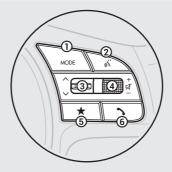

1 MODE button

- Press the button repeatedly to change the system mode (radio, media, etc.).
- Press and hold the button to display the function settings screen.

2 Voice Recognition button

- Press to start voice recognition.
- Press and hold to start voice recognition of a connected smartphone via phone projection. (The button's operation may vary depending on smartphone specifications.)

3 Move lever

- While listening to the radio, switch between the stations on the preset list. Press and hold to search for a station.
- While playing media, change the track/file. Press and hold to rewind or fast forward (except for the Bluetooth audio mode).

4 Volume lever/button

- · Adjust the volume.
- Press the button to mute or unmute the volume (except for navigation sound).
- Press the button to pause or resume playback.

(5) Custom button

- · Runs the user-defined function.
- Press and hold the button to display the function settings screen.

6 Call/End Call button

- Before connection of Bluetooth: Press to display the Bluetooth connection window.
- After connection of Bluetooth: Press to display the recent calls list. To redial the last call number, press and hold the button.
- During a Bluetooth call: Press to end
- When a call comes in: Press to answer the call. To reject the call, press and hold the button.

The system shape and menu arrangement may differ depending on the vehicle model and specifications.

Turning on/off the system

Turning on the system

- 1 Turn on the vehicle.
- 2 When a safety warning message appears, read it and press **Confirm**.
 - To change the display language, press Language.

Turning off the system

To turn off the system while driving, press and hold the Power button on the panel.

The screen and sound will be turned off.

- To use the system again, press the Power button.
- When a specified period of time elapses after turning off the vehicle, the system automatically shuts down. When you open the driver's door, the system immediately shuts down.

/ Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.
- · Some functions may not be active while driving to ensure safety. Those functions run only when the vehicle is stationary. In order to use them, first stop the vehicle.
- When the screen is not displayed, the volume is muted, or other system failures occur, immediately stop using the system. When you use the faulty system continuously, it may cause fire, electric shock, or fatal system failure.

🔼 Caution

- The system can be turned on even when the ignition switch is in "ACC" or "ON." However, when you use the system without turning on the vehicle for a long time, it may cause battery discharge. To use the system for a long time, be sure to turn on the vehicle.
- When you use the system with the vehicle turned off, the battery warning message appears. The warning message disappears as soon as you turn on the vehicle.

How to Update the Map and Software for your Infotainment System

To ensure you are maximizing the full potential of your navigation system, we advise updating the map and software annually. To update, visit the map update website and install the Navigation Updater program onto your PC. Use the program to download and install the latest map, points of interest, and software. Alternatively, you can visit your local dealership to update.

Product specifications

Common specifications

Item	Specifications
External dimensions	AV body - 252 x 61.5 x 150.2 mm (Built-in amplifier)
(W x H x L)	AV body - 252 x 61.5 x 148.2 mm (External amplifier)
Weight	AV body -1 kg

Display

Item	Specifications
Display size	AV body - 12.3 inch (292.03 x 109.51 mm)
Number of pixels	AV body - 1,382,400 pixels (resolution: 1920 x 720)
Drive system	TFT (Thin Film Transistor) active matrix system
Viewing angle	AV body - Left/right, Horizontal/vertical: 89°
Internal lighting	LED

ISED

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter unless authorized to do so by the ISED.

Available materials for operation



Quick Reference Guide

It provides brief information of the system, including basic controls and main functions.



User's Manual on Web

To view related information while using the system, press **User's Manual on Web (QR Code)** from the menus on the screen. By scanning the QR code with your smartphone, you can access the online user's manual.

Symbols in this User's Manual



Warning

Indicates very important information directly related to user safety. Failure to follow instructions may cause serious injury.



Caution

Indicates important information directly related to user safety. Failure to follow instructions may cause minor injury or vehicle damage or breakdown.



Note

Indicates helpful information for operation of the product.

If equipped

Indicates descriptions for optional features, which may not be available on your specific vehicle depending on the model or trim level.

This guide covers specifications for all vehicle models, including optional specifications. It may include descriptions for features that are not equipped in your vehicle or are unavailable for your vehicle model.

HEV only

Displays only the functions that can be used in a hybrid vehicle.

PHEV only

Displays only the functions that can be used in a plug-in hybrid vehicle.

EV only

Displays only the functions that can be used in an electric vehicle.

Safety Warnings

Be sure to keep the following instructions. Otherwise, it may cause serious injury or accident.



/ Driving

Obey all traffic laws while driving.

· Relying solely on the navigation system may cause violation of traffic rules and regulations, resulting in an accident.

In order to check the vehicle speed, see the speedometer first, not the speed on the navigation system.

• The speed on the navigation system may differ from actual vehicle speed.

While driving, refrain from watching the screen.

- · Distracted driving is a leading cause in accidents, avoid using your mobile phone while operating your vehicle.
- To manipulate the screen or buttons requiring multiple steps, be sure to stop your vehicle.

To use your mobile phone, first stop your vehicle.

- Distracted driving is a leading cause in accidents, avoid using your mobile phone while operating your vehicle.
- If necessary, use handsfree (Bluetooth) calling when driving and minimize the call time.

Make sure that the volume of the phone is sufficiently low so that the external sound is audible.

- Driving with high volumes levels could prevent you from hearing external sounds or instructions (ex. emergency vehicle siren, warning sound from other vehicle).
- When you drive for a long time with a loud audio volume, it may affect your hearing.

For emergency services (e.g. hospital, fire station), do not rely solely on the navigation system.

· Some emergency services may not be included in the navigation map. Check relevant information in advance to stay prepared for an emergency.



/ System handling

Do NOT arbitrarily disassemble or modify the system.

• It may cause an accident, fire, or electric shock.

Exercise caution to make sure that no liquid or foreign materials enter the system.

• It may cause smoke generation, fire ignition, or system failure.

When the screen is not displayed, the volume is muted, or other system failures occur, immediately stop using the system.

- Otherwise, it may cause fire, electric shock, or fatal system failure.
- If you experience any problems with the system, contact your authorized Hyundai dealer.

Safety **Precautions**

Be sure to keep the following instructions. Otherwise, it may cause minor injury or system damage.



Operation

Use the system with the vehicle started.

• When you use the system for a long time with the vehicle stopped, it may cause battery discharge.

Do NOT arbitrarily install an unauthorized aftermarket product in your vehicle.

- Using unapproved products may cause an error while using the system.
- · System errors caused by installing unapproved products are not covered under the warranty.



System handling

Do NOT apply excessive force to the system.

• When you apply excessive pressure to the screen, the LCD panel or touch panel may get damaged.

To clean the screen or button panel, first turn off the vehicle and then use a dry, soft cloth to wipe it.

· Do not wipe using a rough or hard cloth, chemical fiber, organic solvent (e.g. alcohol, benzene, thinner), or air freshener. The panel surface may become scratched or damaged due to a chemical reaction.

When you install an air freshener on the air conditioner vent, the surface may be deformed due to leakage.

If you experience any problems with the system, contact your authorized Hyundai dealer.

Contents

1	System overview	
	Turning on/off the system	14
	Using the touch screen	16
	Using the Home screen	19
	Accessing the All Menus screen	21
	Using the split screen	21
2	Useful functions	
	Using the First Run Setup	23
	Using the phone projection function	25
	Viewing the driving assistance screen	30
	Using the climate control function	35
	Using the rear-seat climate control function	39
	Using the memory seat configurations	43
	Using the rear-seat conversation mode	44
	Using the rear-seat quiet mode	45
	Playing Sounds of Nature	46
	Using the HD Radio™ Data	48
	Viewing notifications	51
	Using the Valet mode	51
	Using the Electric Vehicle menu	52
3	Radio	
	Turning on the radio	68
	Listening to HD Radio™	73
	Listening to SiriusXM™ radio	75

4	Media	
	Using media	80
5	Navigation	
	Navigation functions	92
	Various ways to find routes	101
	Using saved favorite places	119
	Searching for gas stations	125
	Searching for EV (Electric Vehicle) charging stations	126
	Viewing traffic Information	127
	END USER LICENSE AGREEMENT	129
6	Phone	
	Using a Phone via Bluetooth	134
	Connecting a Bluetooth device	135
	Making a call via Bluetooth	139
	Accepting an incoming call over Bluetooth	148
	Checking new messages over Bluetooth	150
7	Voice functions	
	Voice recognition	154
	Using the Siri Eyes Free	160
	Voice Memo	161
8	Bluelink	
O	Bluelink service	164
	Running the Bluelink menu	166
	Using safety and security services	174
	Route guidance service	175
	Duties Upon Sale or Transfer of Vehicle	177

9 Settings Configuring the vehicle settings 178 Configuring the EV settings 200 Configuring the device connections settings 204 Configuring the button settings 210 214 Configuring the sound settings Configuring the voice recognition settings 223 224 Configuring the navigation settings Configuring the Bluelink settings 232 234 Configuring the user profile settings 236 Configuring the general system settings Configuring the screen layout or screen theme/layout settings 243 Configuring the display settings 245 How to Update the Map and Software for your 251 Infotainment System 10 Wireless Update Wireless update 254 11 **Appendix** Solutions 257 System status indicator icons 263 FAO 266 **Product specifications** 269 Important information 273 Index 275

Trademarks

Open Source Information

278

279

1 System overview

Turning on/off the system

The following explains how to turn on or off the system. Before using the system, be sure to read the user's manual for safe and convenient manipulation.

Turning on the system

- 1 Turn on the vehicle.
- 2 When a safety warning message appears, read it and press **Confirm**.
 - To change the display language, press Language.



- ${\Bbb Z}$ The screen may differ depending on the vehicle model and specifications.
- To set the user profile, note the following. ► See "Using the First Run Setup."

Turning off the system

To turn off the system while driving, press and hold the Power button on the panel.

The screen and sound will be turned off.

- When a specified period of time elapses after turning off the vehicle, the system automatically shuts down. When you open the driver's door, the system immediately shuts down.

Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.
- Some functions may not be active while driving to ensure safety. Those functions run only when the vehicle is stationary. In order to use them, first stop the vehicle.
- When the screen is not displayed, the volume is muted, or other system failures occur, immediately stop using the system. When you use the faulty system continuously, it may cause fire, electric shock, or fatal system failure.



!\ Caution

- The system can be turned on even when the ignition switch is in "ACC" or "ON." However, when you use the system without turning on the vehicle for a long time, it may cause battery discharge. To use the system for a long time, be sure to turn on the vehicle.
- When you use the system with the vehicle turned off, the battery warning message appears. The warning message disappears as soon as you turn on the vehicle.



- The screen may differ depending on the vehicle model and specifications.
- When you turn off and on the vehicle, the system is turned on with the mode and settings used when the vehicle was turned off.
- To prevent audio from playing loud when you turn on the vehicle, adjust the system volume to an adequate level.
- Zo automatically decrease the system volume, move to the All Menus screen and press
 Setup ▶ Sound ▶ Premium Sound ▶ Start-up Volume Limit to set the function.

Using the touch screen

This system is equipped with a touch-enabled screen. You can use various practices by using this feature.



/ Warning

Do not use the touch screen while driving as this will divert your attention away from the safe operation of the vehicle. You may lose your steering control which could cause an accident and severe bodily injuries.




Caution

- Do not press the touch screen with excessive force or a sharp object. The touch screen may become damaged.
- Do not let any electrically conductive material contact the touch screen, and do not place any objects that generate electromagnetic waves, such as wireless chargers or electronic devices, near the touch screen. The system may work incorrectly due to electromagnetic effects, which may cause the touch screen to malfunction.
- 2 The touch screen does not respond when you are wearing gloves. Take off the gloves or wear electrostatic touch gloves.

"Press" gesture

Lightly press the desired item and release the finger.


The corresponding function is run or the corresponding menu is selected.

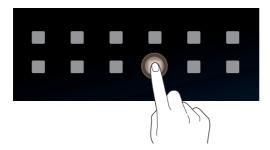

"Press and hold" gesture

Press and hold the desired item.


It is used to fast forward or rewind during playback.

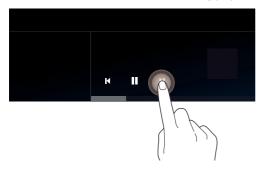

"Slide" gesture

On the media playback screen, press the slide bar to change the playback position.


You can change the playback position during playback.

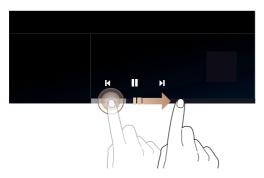

"Drag" gesture

Press and hold the desired item and drag it to another position.


The selected item moves to the new position.

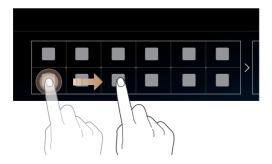

"Swipe" gesture

Lightly swipe the screen in the desired direction.

It is used to move fast vertically or horizontally across the menu screen or options list.

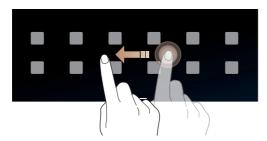

"Spread/pinch" gesture

On the map screen, press and hold the screen with two fingers and spread or pinch the fingers.

It is used to zoom in or out the map.




Using the Home screen

The Home screen is the basic screen provided by the system and displays the current time and other basic information.



Type1

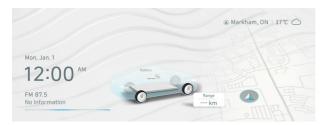

Type2

- To display the map screen, press the map area.
- ∠ If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See
 "Graphic Themes (if equipped)."

Editing the icons on the Home screen

You can see the icon list on the All screen and change the locations for icons.

- 1 At the upper left of the All Menus screen, press **► Edit Home Icons**.
- 2 To change the location of an icon, press and hold, and drag the icon to the desired position.



Type1



Type2

- ${ \ensuremath{ \mathcal{L}}}$ The screen may differ depending on the vehicle model and specifications.
- ${\mathscr Q}$ To initialize the positions of icons, press **Reset**.
- ∠ If the vehicle is type 2, it is possible to change the graphic theme to white or black.


 1. Complete the property of th
 - ► See "Graphic Themes (if equipped)."

Accessing the All Menus screen

You can see all menus on the Home screen.

Press and gently swipe the Home screen to the left as shown below.

The All Menus screen appears. You can see the list of all functions of the system.

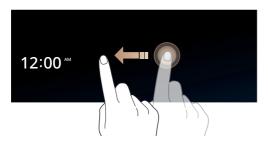


Using the split screen (if equipped)

You can set to display various information such as map, Radio/Media info, driving info, and clock on the split system screen.

Opening the split screen

Press the split screen button.

The split screen appears on the right.

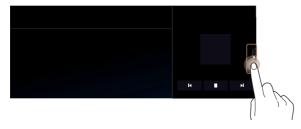


∠ To open split screens, press Split Screen on the menu at the top of the screen.



Editing the split screen

You can change information on the split screen.

Press and hold, and then drag the split screen up or down to select the desired information item.

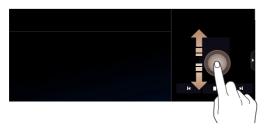

Closing the split screen

Press the split screen button when the split screen is open.

∠ To close split screens, press Split Screen on the menu at the top of the screen.

2 Useful functions

Using the First Run Setup

You can configure the system settings for each driver when multiple people are using the vehicle.

In First Run Setup, you can configure the values to display on the screen such as user name, language.

1 When a safety warning message appears, read it, select the driver image, and then press **Confirm**.



- When you log in as guest, you cannot configure the profile settings. To set a different profile, select another user.
- You can register up to 2 users.
- 2 When the First Run Setup screen appears, press **Start**.
 - ${ \ensuremath{ \mathcal{D}}}$ To use the default settings without changing the environment, press ${\bf Skip}.$



3 Set the language to display on the screen and then press **Next**.



4 To set the driver's name, press **Rename**.

The name change screen appears.



5 When the First Run Setup screen appears, press **OK**. Displays the Home screen.



To set the detailed user information and operation environment, press Profile Settings.

Using the phone projection function

When you connect an Android smartphone or iPhone to the vehicle with a USB cable, you can run and control Apps on the phone through the widescreen using its user-friendly interface.



/ Warning

Do not adjust or set up any phone settings while driving. You may lose your steering control which could cause an accident and severe bodily injuries.



Caution

Using an approved USB cable provided by your smartphone manufacturer is recommended. Using unapproved USB cables may cause a phone projection error or a system malfunction.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- Ø If the vehicle is type 2, it is possible to change the graphic theme to white or black. ▶ See "Graphic Themes (if equipped)."

Pairing to an Android smartphone via Android Auto

When you connect an Android smartphone to the vehicle with Android Auto, you can run and control Apps on the phone through the widescreen using its user-friendly interface.

- 1 To use Android Auto, first check the following.
 - Visit the Android Auto website at https://www.android.com/auto to check the list of countries, device types, and models that support Android Auto.
 - Download and install the Android Auto App from Google Play Store. It is not possible to install Android Auto in countries that do not support the feature.
- 2 On the All Menus screen, press **Setup** ▶ **Device Connections** ▶ **Phone Projection Settings** ► **Android Auto** and select the **Enable Android Auto** checkbox.
 - Select Use Split Screen on Android Auto Screen to show split screen when using Android Auto.
- 3 Connect a smartphone to the USB port on the vehicle by using the provided USB cable.
 - When the connection is made for the first time, the system screen displays a notification window. Check the details and then press **OK**.
 - To end the Android Auto and disconnect from the smartphone, remove the USB cable from the system.



/!\ Caution

Do not repeatedly connect and remove the USB connector within a short time. It may cause device errors or system failures.

4 When the smartphone is locked, unlock it first and then consent to the use of Android Auto.

When the smartphone is recognized successfully, the **Android Auto** menu is activated on the All Menus screen.

Using the Android Auto

- 1 On the All Menus screen, press **Android Auto**.
- Perform the desired function.
 - To run the functions for phone, music, or navigation on the smartphone, press the corresponding app icon.
 - When you are using your smartphone's navigation via phone projection, sounds from both the system's radio/media function and the navigation will be output through your vehicle's speakers. When you use the Volume knob/button while both sounds are being output, the navigation volume is adjusted first.
 - To use the Google voice recognition, press and hold the Voice Recognition button on the steering wheel.
- By pressing the [MODE] button on the steering wheel, you can run the media App on your smartphone as well as the Radio/Media mode of the system.
- To specify which functions to run when the [MODE] button on the steering wheel is pressed, press and hold the [MODE] button to display the settings screen.
- By pressing the Call button on the steering wheel, you can make a call via Bluetooth connection.
- When phone projection is active, you cannot change the phone projection settings. To change the settings, remove the USB cable from your system.
- The icons on the screen are subject to change according to the policy of Google Corporation.
- Apps or functions used through Android Auto are subject to change according to the policy of Google Corporation. For supportable functions, visit the Android website at https://www.android.com/auto.
- \emptyset To use the functions on your smartphone with the minimized system settings, update the smartphone OS to the latest version.
- ∠ The recognition time may differ depending on the device type, firmware, and OS version.
- Charges may apply for any mobile data used while Android Auto is running.
- Some functions may not work properly depending on the network signal strength.
- ${ \ensuremath{ \angle} }$ Avoid interacting with the smartphone while using Android Auto.
- - USB mode
 - Apple CarPlay
 - Searches using the control panel or the steering wheel remote control

Pairing to an iPhone via Apple CarPlay

After you connect an iPhone to the vehicle with Apple CarPlay, you can run and control Apps on the phone through the system screen.

- 1 To use Apple CarPlay, first check the following:
 - For iPhone models that support Apple CarPlay, visit the Apple website at https://www. apple.com/ios/carplay.
 - Make sure Apple CarPlay and Siri are enabled in your iPhone settings. If you do not see options for Apple CarPlay or Siri, update to the latest iOS version.
- 2 On the All Menus screen, press **Setup** ▶ **Device Connections** ▶ **Phone Projection Settings** ► **Apple CarPlay** and select the **Enable Apple** CarPlay checkbox.
 - Select Use Split Screen on Apple CarPlay Screen to show split screen when using Apple CarPlay.
- 3 Connect an iPhone to the USB port on the vehicle by using the provided USB cable.
 - When the connection is made for the first time, the system screen displays a notification window. Check the details and then press **OK**.
 - from the system.



/ Caution

Do not repeatedly connect and remove the USB connector within a short time. It may cause device errors or system failures.

4 When the iPhone is locked, unlock it first and then consent to the use of Apple CarPlay.

When the iPhone is recognized successfully, the Apple CarPlay menu is activated on the All Menus screen.

Using the Apple CarPlay

- 1 On the All Menus screen, press **Apple CarPlay**.
- Perform the desired function.
 - To run any of functions (phone, messaging, navigation, etc.) on your iPhone, press the corresponding function icon.
 - When you are using your smartphone's navigation via phone projection, sounds from both the system's radio/media function and the navigation will be output through your vehicle's speakers. When you use the Volume knob/button while both sounds are being output, the navigation volume is adjusted first.
 - To run the Siri voice recognition, press and hold the Voice Recognition button on the steering wheel.
- By pressing the [MODE] button on the steering wheel, you can run the media App on your smartphone as well as the Radio/Media mode of the system.
- To specify which functions to run when the [MODE] button on the steering wheel is pressed, press and hold the [MODE] button to display the settings screen.
- When you receive a call, press the Call button on the steering wheel to answer it.
- When phone projection is active, you cannot change the phone projection settings. To change the settings, remove the USB cable from your system.
- Apps or functions used through Apple CarPlay are subject to change according to the policy of Apple Corporation. For supportable functions, visit the Apple Corporation website at http://www.apple.com/ios/carplay.
- To use the functions on your smartphone with the minimized system settings, update the smartphone OS to the latest version.
- ${ \ensuremath{ \angle} }$ Charges may apply for any mobile data used while Apple CarPlay is running.
- ${ \ensuremath{ \angle} }$ Some functions may not work properly depending on the network signal strength.
- ${ \ensuremath{ \mathscr{Q}} }$ Avoid interacting with the smartphone while using Apple CarPlay.
- ✓ You cannot use the following functions when Apple CarPlay is in use.
 - Bluetooth phone
 - USB mode
 - Android Auto
 - Browsing using the Search lever/knob on the control panel (if equipped)

Viewing the driving assistance screen

You can see the view around the vehicle through the system screen.



/ Warning

When backing up, make sure to follow the guidelines below:

- Before entering your vehicle, always check the area behind your vehicle.
- Do not solely rely on the rear view camera when backing up. Always ensure that it is safe to back up by checking behind you and looking in the rearview mirrors.
- · Always back up slowly and stop immediately if you suspect that a person, especially a child, might be behind you.




Caution

Objects on the screen may not be as close or far as they appear. Before backing up, always look over both shoulders.

Rear view screen

- 1 Press the "R" (Reverse) button shifter (or move the shift lever to "R" in a previous vehicle model) with the vehicle turned on.
 - The system automatically displays the rear view with parking assist guidelines.
- 2 Safely park your vehicle, checking the rear view and guidelines.

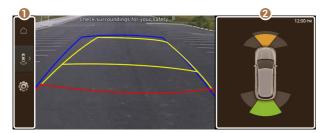

VIEW icon

- (Home icon): Displays the Home screen.
- (Rear view icon): Press the icon to display the desired view.
- **(Settings icon):** Used to adjust the brightness and contrast of camera images.
 - To select the information to display on the screen, press Display Contents (if equipped).

Parking Distance Warning or Split Screen (if equipped)

- Parking Distance Warning: Provides a visual warning in color and an audible warning according to the level of collision risk, based on the distance from an ambient obstacle.
- **Split Screen**: The split screen appears.
- Available settings may differ depending on the vehicle model and specifications.
- Noting the parking assist guide lines based on the steering, you can see the moving direction.



- A warning sound is heard when the vehicle approaches obstacles while parking. When you set to automatically lower the audio volume while parking, it can prevent accidents caused by failure to hear the warning sound. On the All Menus screen, press Setup ▶ Sound ▶ Driver Assistance ▶ Parking Safety Priority.
- When you press the [[P]] button with the shift position in "P" (Park), you can see the rear view (if equipped).

Viewing the rear view (if equipped)

You can see the rear view through the system screen.

- 1 On the rear view screen, press 🧵.
- 2 Press the icon to display the desired view.
 - - Displays the space required to open the trunk (tailgate). After parking, check whether the space is sufficient to open the trunk (tailgate) and there is no obstacle.
 - Displays the extension line from the center of the vehicle. According to the steering direction, the moving direction of the center is displayed on the screen.

Icon	Description
	Displays the rear top view.
	Displays the rear view (default).

Configuring rear view settings (if equipped)

- 1 On the rear view screen, press .
- 2 Select and then change the settings.
 - To select the information to display on the screen, press Display Contents (if equipped).
 - To adjust the brightness and contrast of the rear view screen, press Display Settings.
 To initialize all Rear View screen settings, press Reset.

Surround View Monitor (if equipped)

You can check the surroundings by using multiple cameras on the vehicle.

∠ Use the +/- button on the right of the screen to zoom in or out.

Viewing the surround view while driving

- 1 In order to see the surround view, press the [\square] or [\square] button.
 - The system displays both the front view and surround view.
 - The surround view monitor function operates only when any of the following conditions are met.
 - The driving speed is below 10 km/h or 15 km/h with the shift position in "D" (Drive) (if equipped).
 - The vehicle is stationary and the shift position is in "D" (Drive) or "N" (Neutral).
 - 2 You can use Remote Smart Parking Assist by holding down the [[P]] button. For more information, refer to the owner's manual that is provided separately (if equipped).
- 2 Press the icon to get a view in the desired direction.

Icon	Description
•	Displays the zoom-in front top view and top view.
	Displays the front wide view and top view (default).
	Display the front blind spot view and top view.
	Displays 3D and top views of the vehicle surroundings (if equipped).
0	Displays the surround view settings.

When any door or trunk (tailgate) is open or outside rear view mirrors are folded, an alert icon appears on the screen.

[∠] To turn off the surround view screen, press the [☐] or [☐] button.

Viewing the surround view while reversing

1 Press the "R" (Reverse) button shifter (or move the shift lever to "R" in a previous vehicle model) with the vehicle turned on.

The system displays the rear view of the vehicle.

- The surround view monitor function is not available when you change the shift position to "P" (Park).
- When you press the [P] button with the shift position in "P" (Park), you can see the rear view (if equipped).
- 2 Press the icon to get a view in the desired direction.

Icon	Description
	Displays the zoom-in rear top view and top view.
•	Displays the rear wide view and top view (default).
	Display the rear blind spot view and top view.
	Displays 3D and top views of the vehicle surroundings (if equipped).
Ø	Displays the surround view settings.

Configuring the surround view monitor settings

- 1 On the surround view screen, press .
- 2 Select and then change the settings.
 - To select the information to appear on the video, press Display Contents (e.g. Top View Parking Guidance, Rear View Parking Lines, Parking Distance Warning).
 - To select the default view for top view monitoring, press Top View Default Mode (if equipped).
 - To select the default view for using the surround view monitor function while driving, press Front View Default Mode (if equipped).
 - To adjust the brightness and contrast of the Surround View image, press Display Settings (if equipped).
 - To set the information to display on the Surround View screen and adjust or reset the brightness and contrast of the image, on the All Menus screen, press Setup ➤ Vehicle
 Driver Assistance ➤ Parking Safety ➤ Camera Settings (if equipped).

Using the climate control function (if equipped)

You can view or configure the vehicle climate settings from the System screen.

- Depending on vehicle model or specifications, the screen layout and available options may differ.
- For more information about how to use the heater and air conditioner, refer to Owner's Manual of the vehicle.
- When you manipulate the climate control system while using the product, the climate settings appear on the upper part of the screen (if equipped).
- 1 Perform any of the following methods:
 - Press the [CLIMATE] button on the climate control system.
 - On the All menus screen, press **Climate**.

2 Select and then change the settings.





Type1



Type2

- 1 Shows the set temperature for the seats.
 - When the driver seat-only climate control mode is turned off, the set temperature indicator for the passenger seat turns off (if equipped).
- 2 Adjust the seat temperature.
- 3 Shows the current airflow direction.
- Can adjust the air direction.
- **⑤** Shows the current fan speed.
- **6** Can adjust the fan speed.
- Shows whether AUTO mode is on or off.
- (3) Turn on the AUTO mode. If you change the climate control status using another button, the AUTO mode automatically turns off.

- Turn on or off the driver seat-only climate control function (if equipped).
- ① Shows whether the air conditioner function is on or off.
- Turns on or off the air conditioner function.
- Shows whether the heater function is on or off (if equipped).
- (B) Turn on or off the heater function (if equipped).
- Shows whether the SYNC function, which syncs temperature between the driver's seat and passenger seat, is on or off.
- 15 Turns on or off the function that syncs driver seat and passenger seat temperature.
- (if equipped).
- Displays the climate or warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
- The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Rear Climate: Displays the rear-seat climate settings screen (if equipped).
 - Front Warmer/Ventilation: Displays the front-seat warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
 - Rear Warmer/Ventilation: Displays the rear-seat warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
 - Climate Settings: Configure specific climate control function settings (if equipped).
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.
- ∠ The temperature of the climate system can be adjusted by 0.5 °C increments. When
 the temperature is set to the lower limit or upper limit, "LOW" or "HIGH" is displayed
 depending on the vehicle model and specifications.
- ∠ If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See
 "Graphic Themes (if equipped)."

Using the Front Heat/Ventilation and Steering Wheel Heating Control (if equipped)

You can configure the steering wheel warmer settings or the seat warmer/ventilation settings.

- Depending on vehicle model or specifications, the screen layout and available options may differ.
- 1 Perform any of the following methods:
 - Press the [WARMER] button on the climate control system (if equipped).
 - On the All Menus screen, press Warmer/Ventilation (if equipped).
 - On the climate control screen, press **Front Warmer/Ventilation** (if equipped).
 - On the climate control screen, press ► Front Warmer/Ventilation.
 ② Available settings may differ depending on the vehicle model and specifications.
- 2 Select and then change the settings.



- 1 Turn on or off the seat warmer or ventilation (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
- 2 Turn on or off the steering wheel warmer (if equipped).

- 3 Displays the climate or warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
- 4 The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button (if equipped).
 - Front Climate: Displays the front-seat climate control settings screen (if equipped).
 - Rear Climate: Displays the rear-seat climate settings screen (if equipped).
 - Rear Warmer/Ventilation: Displays the rear-seat warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
 - **Climate Settings**: Configure specific climate control function settings (if equipped).
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.

Using the rear-seat climate control function

(if equipped)

You can view or configure the rear-seat climate settings from the System screen.

- Depending on vehicle model or specifications, the screen layout and available options may differ.
- 1 Perform any of the following methods:
 - Press the [**REAR**] button on the climate control system.
 - On the All Menus screen, press **Rear Climate**.

2 Select and then change the settings.



For automatic temperature control



For manual temperature control

- Can set the inside temperature.
- 2 Turn on the AUTO mode. If you change the climate control status using another button, the AUTO mode automatically turns off.
- **3** Can adjust the air direction.

- 4 Turn off the climate control function (if equipped).
- **6** Can adjust the fan speed.
- **6** The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Front Climate: Displays the front-seat climate control settings screen (if equipped).
 - **Front Warmer/Ventilation**: Displays the front-seat warmer/ventilation settings screen (if equipped).
 - ${\cal Q}$ Available settings may differ depending on the vehicle model and specifications.
 - Rear Warmer/Ventilation: Displays the rear-seat warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
 - Climate Settings: Configure specific climate control function settings (if equipped).
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.

Using the Rear Heat/Ventilation Control (if equipped)

You can configure the seat warmer/ventilation settings.

- Depending on vehicle model or specifications, the screen layout and available options may differ.
- 1 Perform any of the following methods:
 - On the climate control screen, press **Rear Warmer/Ventilation** (if equipped).
 - On the climate control screen, press **Rear Warmer/Ventilation**.
 - ${\mathscr L}$ Available settings may differ depending on the vehicle model and specifications.

2 Select and then change the settings.



- 1 Turn on or off the seat warmer or ventilation (if equipped).
- 2 Displays the climate or warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
- 3 The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button (if equipped).
 - Front Climate: Displays the front-seat climate control settings screen (if equipped).
 - Rear Climate: Displays the rear-seat climate settings screen (if equipped).
 - Front Warmer/Ventilation: Displays the front-seat warmer/ventilation settings screen (if equipped).
 - Available settings may differ depending on the vehicle model and specifications.
 - Climate Settings: Configure specific climate control function settings (if equipped).
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.

Using the memory seat configurations

(if equipped)

You can adjust the seat position. You can also save the current positions of all seats or load a saved seat position.

- While driving, it is not possible to adjust and save a seat position or load a saved seat position. First, stop the vehicle, and then change a seat position.
- 1 On the All Menus screen, press **Memory Seat Configurations**.
- 2 Select and then change the settings.



- 1 Returns to the previous step.
- 2 Save the current positions of all seats or load a saved seat position.
 - Up to three seat position modes can be saved.
- 3 Displays the seat settings screen.
- 4 The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Change Name: Change the name of a mode.
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.

Using the rear-seat conversation mode

(if equipped)

When the driver's voice cannot be delivered well to the rear seat, you can use the microphone of the driver's seat for smooth communication.

- 1 On the All Menus screen, press Passenger Talk.
 The passenger talk icon appears at the top right of the system screen to display its status.
- 2 Make conversation through the microphone of the driver's seat.
 - To end the Passenger Talk mode, press End.
 - When you move to another screen without pressing **End**, shortly press the End Call button on the steering wheel to end the passenger talk function.



- When the Passenger Talk mode is active, the Radio/Media functions are unavailable.

Using the rear-seat quiet mode (if equipped)

To allow occupants in the rear seat to have rest and sleep, you can set to adjust the system volume.

- 1 On the All Menus screen, press **Quiet Mode**.
- 2 Press Quiet Mode.

The audio volume in the rear seat is muted. When the volume for the front seats is set too high, the volume decreases automatically.

To end the Quiet mode, press Quiet Mode once more.



Type1



Type2

- ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Playing Sounds of Nature

Listen to the calming sound of rain, waves, and more to relax while driving by turning on a Sounds of Nature.

- 1 On the All Menus screen, press **Media** ➤ **Sounds of Nature**.
- 2 Select from the Sounds of Nature list to play.



Type1



Type2

- 1 Returns to the previous step.
- Select and play Sounds of Nature.
- O Play the previous sound.
- 4 Stop or play playback.
- **6** Play the next sound.
- **(6)** You can check the playback status of Sound of Nature.
- Select and play Sounds of Nature.
- **3** The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Media Sources: Open the Radio/Media selection window.
 - **Sound Settings**: Displays the system sound settings screen.
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.
- Playing Sounds of Nature will mute or pause other sound effects and music that may be active at the moment.
- The sound effect settings button may appear on the screen depending on the amp specifications. ▶ See "Adjusting the sound effect (if equipped)."

Using the HD Radio™ Data

You can access an array of information with HD Radio data such as HD Radio™.

- HD Radio data are available only in metropolitan areas.
- 1 On the All Menus screen, press **HD Radio Data**.
- 2 Perform any of the following methods:



Type1



Type2

- Returns to the previous step.
- ② Can see traffic information by using HD Radio data. ► See "Viewing traffic information using HD Radio™ data."
- ② Can see weather information from the Doppler Radar. ► See "Viewing weather information using Doppler weather radar."
- ② Can see fuel price information by using HD Radio data (if equipped). ► See "Viewing fuel price information using HD Radio™ data (if equipped)."

- **5** The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.
- The screen may differ depending on the vehicle model and specifications.
- ∠ If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See
 "Graphic Themes (if equipped)."

Viewing traffic information using HD Radio™ data

- 1 On the All Menus screen, press **HD Radio Data**.
- 2 Press Traffic.
- 3 Select an item from the traffic information list to see the details.
 - To see traffic information along with your current route or to see all available traffic information, press On Route.
 - ∠ To select the types of traffic information to see, press Filter.




4 Check the traffic information details.



Traffic information for border crossings and speed limits in local roads may not be accurate. Use the information at your discretion.

Viewing weather information using Doppler weather radar

- 1 On the All Menus screen, press **HD Radio Data**.
- 2 Press **Doppler Radar**.
- 3 See the weather condition details in the HD Radio coverage area.

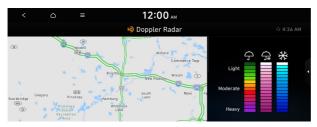

Viewing fuel price information using HD Radio™ data (if equipped)

- 1 On the All Menus screen, press **HD Radio Data**.
- 2 Press Fuel Prices.
- 3 Search nearby gas stations, and check the current fuel prices.

 - \mathbb{Z} To see the latest information, press \odot .



Viewing notifications (if equipped)

View Bluelink notifications including the navigation and map update information.

On the All Menus screen, press **Notifications**.

View the list of received notifications. Select from the list to view details.

- You cannot display notification details while driving. Stop the vehicle first to view notifications.

Using the Valet mode (if equipped)

Use the Valet mode to protect your personal information and view the vehicle information.

Valet mode protects your personal information by disabling control using the screen or buttons. Vehicle information created during valet mode can be viewed from the Bluelink App.

The following vehicle-related data can be viewed from the Bluelink App.

- · Valet mode start time
- · Engine off time
- Driving distance/hours and maximum vehicle speed after valet mode activation
- To use Valet mode, make sure you install the Bluelink App on your smartphone and sign
 up for the Bluelink Service. Use either Google Play Store or App Store (depending on your
 smartphone model) to download and install the Bluelink App and sign up for the Bluelink
 Service. ▶ See "Subscribing to the service."
- 1 On the All Menus screen, press **Valet Mode**.
- 2 Enter a password to turn on the valet mode.

Your personal information is protected, as control using the screen or buttons is disabled.

- ${ \ensuremath{ \mathscr{Q}} }$ To turn off valet mode, enter the password you set when turning on the mode.
- ☑ It is not possible to turn off Valet mode if you enter your password incorrectly five times in succession. If this occurs and you want to turn off Valet mode, use the Bluelink App to reset your Valet mode password. Alternatively, contact the Hyundai Customer Relations Center 1-844-258-5656 for assistance.

Using the Electric Vehicle menu

You can use various EV-specific functions.



Type1



Type2

- The displayed screen or menu items may differ, depending on the vehicle model and features. Check the screen type for your vehicle model and view the appropriate instructions.

Using the Electric Vehicle menu

You can use various EV-specific functions, such as driving and energy information views and vehicle charge scheduling.

On the All Menus screen, press EV.

Depending on vehicle model or specifications, the screen layout and available options may differ.

Electric Vehicle screen

The Electric Vehicle screen provides the following features and information:




- 1 View the current battery level.
 - If you press the vehicle image, the energy information screen appears.
- **②** Can search for nearby charging stations.
 - The details of charging stations displayed on the map screen may not match the actual information.

- 3 View the distance to empty for the current climate control settings.
 - The details of drivable range displayed on the map screen may not match the actual information.
- Set the next departure time. ► See "Setting the next departure time."
- 6 Configure settings to perform charging and/or climate control according to the departure time. ▶ See "Scheduling a charge and climate controls."
- **6** Set an electricity usage limit. ▶ See "Setting an electricity usage limit (if equipped)."
 - **V2L**: This technology uses the battery power of an electric vehicle to power electronic devices in the vehicle.
- You can set to enable the Electric Vehicle mode. ► See "Configuring the EV settings."
- 8 Can check the drivable range under the remaining battery amount.
- The list of menu items appears.
 - **Display Off**: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Energy Information: You can view the drivable range, expected time required to complete charging, fuel efficiency graph and power consumption. ▶ See "Viewing the battery status/solar roof/electricity use/EV economy history."
 - Charging Station List: Can search for nearby charging stations. ▶ See "Searching for nearby charging stations."
 - EV Settings: You can set to enable the Electric Vehicle mode. ▶ See "Configuring the EV settings."
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.

Navigation to a route via EV charging stations (if equipped)

Provides a route that goes via charging stations, if the battery level is low and the vehicle cannot reach a waypoint or the destination.

- 1 On the All Menus screen, press **Navigation Menu** and set the destination. ▶ See "Various ways to find routes."
- 2 To use a route that goes via charging stations, press **Yes**.

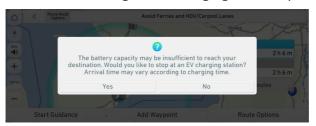

3 Confirm the charging stations and destination shown in the map, and press **Start Guidance**.



4 Navigation begins, by the route that goes via charging stations begins.



View or edit recommended charging stations in Navigation Menu ► Edit Route.



Viewing the drivable range

Can check the drivable range under the remaining battery amount.

- ${\it 2}$ The details of drivable range displayed on the map screen may not match the actual information.
- 1 On the map screen, press ► EV Range.



2 On the **EV Range** screen, check the drivable distance and nearby charging stations.



- 1 Used to change the map display mode.
 - (North Up 2D): Displays the map with the north fixed at the top.
 - (Heading Up 2D): Rotates the map depending on the travel direction.
 - (Heading Up 3D): Rotates the map depending on the travel direction for 3D view.
- 2 You can adjust the volume of navigation or GPS warning sound.
- 3 Zooms in the map.
- 4 The scale of the map automatically changes.
- **6** Zooms out the map.

Searching for nearby charging stations

When you want to drive beyond the drivable range, you can search for charging stations within the range and start route guidance to a selected charging station.

- 1 On the All Menus screen, press Navigation Menu ➤ POI Categories ➤ EV Charging Stations to search for nearby charging stations.
- 2 Select the region to search on the left of the screen and then select the desired charging station on the right.
 - To see the desired charging station, press Filter and then select the charging type and fuel brand.



- 3 Check the location of the destination and then press **Set as Destination**.
- \angle When there are previous destinations, press **Change Destination** \triangleright **Yes**.
- Depending on the third-party service provider, basic information or status information on some charging stations may differ.

Viewing the battery status/solar roof/electricity use/EV economy history

You can view the drivable range, expected time required to complete charging, fuel efficiency graph and power consumption.

1 Press the vehicle image on the **Electric Vehicle** screen.



2 From the energy information screen, select an item to view the item information.



Viewing the Battery Status

You can see the drivable distance and the estimated charging time.

On the energy information screen, press the **Battery Status**.



- With the DC/AC charger, you can see the charging time to the target battery amount and the estimated drivable distance when fully charged. To set a target battery level, drag the control bar.
- The details of drivable range displayed on the map screen may not match the actual information.
- When accessing the energy information screen during charging or power transmission, the displayed screen is different depending on the charging / power transmission status.

Viewing the Solar Roof (if equipped)

You can see the total solar panel power generated.

On the energy information screen, press the **Solar Roof**.



The Total Cumulative Power Generation information resets when it reaches the maximum displayable value of 8,000 kWh.

Viewing the Electricity Use

You can view the power consumed by the drivetrain, climate control, electrical systems and battery care function.

On the energy information screen, press the **Electricity Use**.



Viewing the EV Economy History

You can view a graph of fuel efficiencies on individual dates.

On the energy information screen, press the **EV Economy History**.



Setting the next departure time

Set the next departure time.

1 On the **Electric Vehicle** screen, press **Next Departure**.



2 Select the departure time and then press @ for the item.



- 3 Set the time and day and then press **OK**.

Scheduling a charge and climate controls

You can configure various functions such as automatic battery charging or climate control according to the specified departure time.

1 On the **Electric Vehicle** screen, press **Scheduled Charging and Climate**.



2 Select and then change the settings.



Scheduling a charging

You can schedule the charging based on the departure time.

- 1 On the **Electric Vehicle** screen, press **Scheduled Charging and Climate**.
- 2 Select **Scheduled Charging** and then press .



3 Select and then change the settings.



- 1 You can set the off-peak electricity time.
- 2 You can charge the battery for the next departure, primarily using off-peak hours to benefit from lower rates.
- You can charge the battery only during off-peak hours that offer a lower charging rate benefit.
- 4 Press OK.
- Scheduled charging is performed only when the charging connector is connected to the vehicle.

Scheduling climate controls

Configure settings to perform climate control at the next departure time.

- 1 On the **Electric Vehicle** screen, press **Scheduled Charging and Climate**.
- 2 Select **Scheduled Climate** and then press .



3 Set the desired temperature and auto defogging and then press **OK**.



Setting an electricity usage limit (if equipped)

Set an electricity usage limit.

- V2L is a technology that uses the battery power of an electric vehicle to power electronic devices in the vehicle.
- The electricity usage settings function is turned on when an electronic device is connected.
- 1 On the **Electric Vehicle** screen, press **Electricity Use Settings (V2L)**.



2 Set the minimum battery level.

The battery power is consumed, with the exception of the power equivalent to the minimum battery level.



- When an electricity usage limit is set, you cannot go below the minimum battery level when using power.

Viewing the Solar Roof Info (if equipped)

You can see the total solar panel power generated.

1 On the **Electric Vehicle** screen, press **Solar Roof**.



2 View the solar roof information.



∠ The Total Cumulative Power Generation information resets when it reaches the maximum displayable value of 8,000 kWh.


Configuring the EV settings

You can set convenience features available for electric vehicles.

1 On the **Electric Vehicle** screen, press .



2 Select and then change the settings.

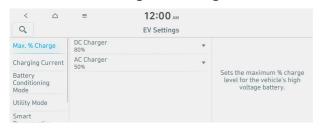

Available options may differ depending on the vehicle model and specifications.

Max. % Charge

You can set the battery amount to charge.

- AC charging ensures the optimal battery performance for a long time compared to DC charging.
- When the battery amount reaches the target level, charging stops. When you charge only the required battery amount, it can ensure the optimal battery performance for a long time, compared to full battery charging.

Charging Current

You can set the charging current depending on the installed charger type.

- The charging time may vary depending on charging conditions.
- If a problem occurs during charging, lower the charging current and try again. If you lower the charging current, it may take longer to charge the battery.

Winter Mode (if equipped)

Can increase the battery temperature in advance to enhance the charging and driving performance when scheduling charge or climate controls in winter. This decreases the drivable distance because it causes to drain the battery faster.

Available settings may differ depending on the vehicle model and specifications.

Battery Conditioning Mode (if equipped)

Use during the winter (low temperatures) to maintain driving performance and shorten DC charging time. However, using the feature and setting a DC charging station as a destination will reduce the driving range due to the vehicle preparing for DC battery charging conditions.

Available settings may differ depending on the vehicle model and specifications.

Utility Mode

Turns on utility mode. When this function is on, electric systems on the vehicle are operated using the driving (high-voltage) battery.

Smart Regeneration (if equipped)

Set to activate regenerative braking automatically based on the vehicle state or driving conditions.

Charging Connector Locking Mode (if equipped)

Configure the lock mode setting for the connected charging cable.

Charging Voice Prompts (if equipped)

Provides audible information about the charging status when the vehicle starts charging.

To turn off the Charging Voice Prompts, press Off.

3 Radio

Turning on the radio

You can scan radio channels by using various options. Save your favorite channels to the presets list.

Perform any of the following methods:

- On the All Menus screen, press Radio.
- On the control panel, press the [RADIO] button (if equipped).
- When multiple media are connected, press the [RADIO] or [MEDIA] button once more and then press the desired media source from the Radio/Media selection window (if equipped).



Type1



Type2

- ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Radio screen

The radio screen provides various functions while listening to radio broadcasts.



- 1 Returns to the previous step.
- Radio broadcast information
- 3 Can change the frequency. When you release the ✓ or ➤ button, the previous or next channel with good reception is automatically selected (if equipped).
- 4 Can change the radio mode.
- Presets list
- **6** You can save the current frequency to the presets list. ▶ See "Saving radio channels."
- **?** Can see the list of available radio stations.
- Shows information on the radio station that is airing the broadcast you are listening to, and shows the album art for the broadcast.
- Ocan turn on or off the split screen mode.
- ① Activate the HD Radio mode.
- ① Use SoundHound to display the detailed information of the music that is now playing on the radio (if equipped).
 - To use the SoundHound service, subscribe to the Bluelink service. ▶ See "Subscribing to the service."
- ② You can change radio channels by using voice commands. ► See "Changing the channel by using voice commands."

- (B) The list of menu items appears.
 - **Display Off**: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Enter Station**: Can select or directly enter the desired radio frequency.
 - Scan FM (Available only with FM): Select a broadcast of your choice after listening briefly to broadcasts from different radio stations.
 - Scan AM (Available only with AM): Select a broadcast of your choice after listening briefly to broadcasts from different radio stations.
 - Tune FM Manually (Available only with FM): Tune the radio frequency manually.
 - Tune AM Manually (Available only with AM): Tune the radio frequency manually.
 - **Delete Presets**: Can delete a registered channel from the presets list. ▶ See "Deleting a registered channel."
 - Reorder Presets: Rearrange the presets list.
 - **SoundHound History**: Can see recently searched music files through the SoundHound service (if equipped).
 - To use the SoundHound service, subscribe to the Bluelink service. ▶ See "Subscribing to the service."
 - Radio Noise (Available only with FM): Customize sound quality when listening to FM radio by adjusting background noise of the original sound (if equipped).
 - **Sound Settings**: Displays the system sound settings screen. ▶ See "Configuring the sound settings."
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.
- ∠ The screen may differ depending on the vehicle model and specifications.
- The sound effect settings button may appear on the screen depending on the amp. ▶ See "Adjusting the sound effect (if equipped)."

/!\ Warning

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.

Changing the radio mode

Perform any of the following methods:

- On the **Radio** screen, press Radio Mode button repeatedly.
- On the control panel, press the [RADIO] button repeatedly.

The radio mode changes in the order of $FM \triangleright AM \triangleright SXM$.

Changing the radio channel

Perform any of the following methods:

- On the **Radio** screen, press the desired channel from the presets list.
 - You can also change the channel by using the Move lever/button on the steering wheel.
- On the control panel, press the [**SEEK**] or [**TRACK** >] button. You can move to the previous or next channel with good reception (if equipped).

You can listen to the changed radio broadcast.

If any Search lever/knob on the control panel, you can also change the frequency by using the lever/knob.

Changing the channel by using voice commands

You can change the radio channel by using voice commands.

- 1 On the **Radio** screen, press .
- 2 When a guiding beep is heard, say the desired radio station channel.

Using the scan function

You can listen to each broadcast briefly and select a desired one.

- 1 On the Radio screen, press ► Scan FM/Scan AM.
 Only the channels with good reception can be listened for 5 seconds in turn.
- 2 When you find the desired broadcast, press the radio screen. You can continue listening to the scanned channel.

Saving radio channels

You can save a specific radio station's channel and easily access the channel.

While listening to a broadcast, press **Add Station** on the screen.

The current channel is added to the presets list.

- ∠ Alternatively, on the Radio screen, press Station List and press
 ☆ of the channel you want to save. The channel is saved to the preset list.
- ✓ You can register up to 40 channels.

Editing the radio channel list

Deleting a registered channel

- 1 At the upper left of the **Radio** screen, press **Delete Presets**.
- 2 Select the channel to delete and press **Delete** ➤ **Yes**. The channel is deleted and the preset list is emptied.

Rearranging the list of saved channels

- 1 At the upper left of the **Radio** screen, press **▶ Reorder Presets**.
- 2 Press and drag next the channel to rearrange to the desired position.

 The presets list is rearranged.

Listening to HD Radio™

You can listen to radio from HD Radio stations when they are available.

On the **Radio** screen, press **MRadio**.

When HD Radio signals are received, the radio switches from the analog mode to the HD mode.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- In HD mode, the buttons for HD Radio stations appear at the top of the radio screen. Press a button to select any available HD Radio station.
- HD Radio is available only in metropolitan areas.

HD Radio™ Technology



Program Info

Digital Sound

HD2/HD3

Traffic

Program Info

Program Info: Presents song name, artist, station IDs, and other relevant data streams.

Digital Sound

Digital, CD-quality sound. HD Radio™ Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

HD2/HD3

FM stations can provide additional digital-only audio programming on HD2/HD3 Channels.

Traffic)

Real-Time Traffic reports, alerts, and flow data displayed on screen via interactive traffic maps and/or data.

Listening to SiriusXM™ radio

You can listen to radio channels provided by SiriusXM, a satellite radio service.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.

Changing to SiriusXM mode

On the **Radio** screen, press Radio Mode button repeatedly.



The screen may differ depending on the vehicle model and specifications.

SiriusXM mode screen



- Returns to the previous step.
- You can go to the previous or next channel.
- 3 Moves to the previous segment. Press and hold to rewind the broadcast.
- 4 Pauses or restarts the broadcast.
- **(3)** Moves to the next segment. Press and hold to fast-forward the broadcast.
- **(3)** Switches to live broadcast mode. This button is activated when you have moved to the previous segment while listening to a live broadcast.

- Can change the radio mode.
- Presets list
- 9 You can save the current frequency to the presets list.
- Can see the list of available SiriusXM channels.
- (1) Can enter channel number to select the channel directly.
- You can change radio channels by using voice commands. ► See "Changing the channel by using voice commands."
- B Displays the options list.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Scan SXM Channels: Scan and play each SiriusXM channel for 5 seconds.
 - Delete Presets: Can delete a registered channel from the presets list.
 - Reorder Presets: Rearrange the presets list.
 - What is on My Presets?: Displays the broadcast schedule.
 - Featured Favorites: Can listen to groups of channels provided by SiriusXM.
 - **Sound Settings**: Displays the system sound settings screen.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.
- The screen may differ depending on the vehicle model and specifications.
- The sound effect settings button may appear on the screen depending on the amp specifications. ▶ See "Adjusting the sound effect (if equipped)."
- The license icon appears next to the first 10 SiriusXM channels saved. Once preset channels have been saved, the broadcasts from them are buffered automatically for your convenience each time you start the vehicle.

Searching for SiriusXM radio channels

You can select a channel from available SiriusXM channels.

- 1 On the **Radio** screen, press Radio Mode button repeatedly.
- 2 On the SiriusXM radio screen, press **Channel List**.
- 3 Select a category and a channel.
 - Press the broadcasts from the channels are buffered automatically each time you start the vehicle. Accordingly, you can perform channel scan while listening (if equipped).
 - If there is a Search lever/knob on the control panel, you can also scan for channels by using the lever/knob.
 - The current channel is added to the presets list when pressing <a href="https://www.nc.ncbi.nlm.ncbi.nlm.ncbi.n



Selecting a channel by entering a channel number

When you know the exact channel number, you can enter it to select the channel directly.

- 1 On the **Radio** screen, press Radio Mode button repeatedly.
- 2 On the SiriusXM radio screen, press ...
- 3 Enter a channel number and press **OK**.



Viewing the program schedule

You can see the program schedule and information for the channels saved in your preset list.

- 1 On the **Radio** screen, press Radio Mode button repeatedly.
- 2 On the SiriusXM radio screen, press ► What is on My Presets?.
- 3 Set the date and time on the top line of the screen.



- 4 Select a channel and a program to see its detailed information.
 - If any hidden information, an arrow appears next to the program. Press the arrow to see the hidden information.

Listening to Featured Favorite channels

You can listen to Featured Favorites channels on the SiriusXM radio. Multiple sets of channels can be broadcast and can be changed by SiriusXM.

- 1 On the **Radio** screen, press Radio Mode button repeatedly.
- 2 On the SiriusXM radio screen, press **Featured Favorites**.
- 3 Select a channel.



4 Media

Using media

You can use the USB mode to play music files on a connected mobile device, such as USB device and MP3 player. You can also play Bluetooth music by connecting a Bluetooth device, which supports a Bluetooth function.



Type1




Type2

- ② If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See
 "Graphic Themes (if equipped)."


Playing music from a USB device

 1 Connect a media device to play to the USB port on the vehicle.



- Playback may start automatically depending on the media type.
- The shapes and arrangement of the buttons and USB port may differ depending on the vehicle model and specifications.
- 2 Perform any of the following methods:
 - On the Home screen, press the Radio/Media info widget or on the All Menus screen, press Media.
 - On the control panel, press the [MEDIA] button.
 - When multiple media are connected, press the [RADIO] or [MEDIA] button once more and then press the desired media source from the Radio/Media selection window (if equipped).

USB music screen

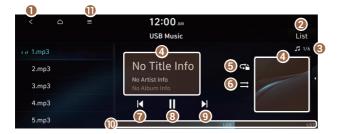

- 1 Returns to the previous step.
- 2 Moves to the file list screen.
- Oisplays the sequence number of the current file and the total number of files for playback.
- ② Displays the information of the current music. Press the artist or album info of the current song to go to list of songs by the artist or from the album.
- **5** Used to change the repeat playback mode.
- **(3)** Used to turn on or off the shuffle playback mode.
- **7** Restart playing the current file or previous file.
- 8 Can pause or resume playback.
- Ocan play the next file.
- (I) Can see the duration of the playing song and the current playback position.
- The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Media Sources: Opens the Radio/Media selection window.
 - Songs by this Artist: Moves to the list of the artist's songs.
 - **Songs from this Album**: Moves to the list of music albums that contain the current song.

- **Hide Current File**: You can hide the file that is playing.
- **Sound Settings**: Displays the system sound settings screen.
- User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
- **Split Screen**: Can turn on or off the split screen mode.
- The sound effect settings button may appear on the screen depending on the amp specifications. ▶ See "Adjusting the sound effect (if equipped)."



/ Warning

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.

Pause/Resume

You can pause or resume playback of a USB music file.

On the USB music playback screen, press or .

Rewind

By using the rewind function, you can listen to music in the USB device from the desired point during playback.

- On the USB music playback screen, press and hold **K**.
- On the control panel, press and hold the [< SEEK] button (if equipped).
- You can also run the function by using the Move lever/button on the steering wheel.

Fast forward

By using the fast forward function, you can listen to music in the USB device from the desired point during playback.

Perform any of the following methods:

- On the USB music playback screen, press and hold ...
- On the control panel, press and hold the [TRACK >] button (if equipped).
- You can also run the function by using the Move lever/button on the steering wheel.

Resuming playback of the current music

You can play the current music in the USB device from the beginning.

Perform any of the following methods:

- On the USB music playback screen, press K after 3 seconds during playback.
- On the control panel, press the [SEEK] button after 3 seconds during playback (if equipped).
- ✓ You can also run the function by using the Move lever/button on the steering wheel.

Playing the previous file

You can play the previous file during playback in the USB device.

- On the USB music playback screen, press **K** within 3 seconds during playback.
- On the control panel, press the [SEEK] button within 3 seconds during playback (if equipped).
- ∠ To play the previous music during playback, press twice or pressing the [⟨ SEEK] button on the control panel twice after 3 seconds from the start of the playback (if equipped).
- ☑ If any Search lever/knob on the control panel, you can search for the desired music by using the lever/knob. When you press the lever/knob within 5 seconds, music is played. However, if no input within 5 seconds, the search stops and the system displays the information of the current file.

Playing the next file

You can play the next file in the USB device during playback.

Perform any of the following methods:

- On the USB music playback screen, press .
- On the control panel, press the [**TRACK** >] button (if equipped).
- ∠ You can also run the function by using the Move lever/button on the steering wheel.
- If any Search lever/knob on the control panel, you can search for the desired music by using the lever/knob. When you press the lever/knob within 5 seconds, music is played. However, if no input within 5 seconds, the search stops and the system displays the information of the current file.

Changing the repeated playback mode for USB music

You can change the repeated playback mode for USB music: Repeat One, Repeat Folder, and Repeat All.

On the USB music playback screen, press repeatedly.

Each time the icon is pressed, the playback repetition modes are toggled and the activated mode icon appears on the screen.

Turning on/off the shuffle playback mode for USB music

You can turn on or off the shuffle playback mode for USB music.

On the USB music playback screen, press repeatedly.

Each time the icon is pressed, the shuffle playback mode is turned on and off. When the shuffle playback is active, the files are played randomly with no sequence.

USB music list screen

You can search and play the desired music from the list by pressing **List** on the USB music playback screen.



- 1 Returns to the previous step.
- 2 Moves to the upper folder or category.
- 3 Play all songs in this category.
- Can see music files for each category. In the artist or album category, you can select multiple artists or albums to play their songs.
- 3 Set to play media files in all sub-folders included in the current playlist.
- 6 Return to the playback screen (if equipped).
- The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Media Sources: Opens the Radio/Media selection window.
 - **Now Playing**: You can return to the folder of the playing file while searching in the list
 - Split Screen: Can turn on or off the split screen mode.
- The sound effect settings button may appear on the screen depending on the amp specifications. ▶ See "Adjusting the sound effect (if equipped)."

🚺 Caution

- Be sure to start the vehicle before connecting a USB device. When you start the vehicle after connecting a USB device, the USB device may get damaged.
- Be careful of static electricity when connecting or removing a USB device. It may cause a system failure.
- Be careful and avoid your body or any object coming into contact with the USB port on the vehicle. It may cause an accident or system failures.
- Do not repeatedly connect and remove the USB connector within a short time. It may cause device errors or system failures.
- Do not use a USB device for purposes other than playback. When you connect a USB for charging or heating, the system performance may decrease or it may cause system failures.
- When connecting a USB storage, do not use a separate extension cable and directly connect to the USB port. When you connect a USB storage via a USB hub or extension cable, the device may not be recognized.
- Push the USB connector fully into the USB port. When the connector is not fully inserted, a communication problem may occur.
- ✓ You can play only the files that have been encoded in the standard format.
- The following USB devices may not be recognized or may not work properly.
 - Encrypted MP3 players
 - USB devices that are not recognized as removable disks
- ∠ USB devices may not be recognized depending on the device status.

- USB device recognition may take longer than usual depending on the device type, capacity, and file formats on the device.
- Some devices may not be charged through USB connection. It depends on the USB specifications.
- You can hide files only in the USB device formatted in exFAT, FAT16/32, or NTFS. The hidden files can be found in the "Hidden_" folder.

Playing music via Bluetooth

To use a Bluetooth device for audio playback, connect a device that supports Bluetooth communication such as mobile phone and MP3 player.

For more information about Bluetooth connection: ▶ see "Connecting a Bluetooth device."

- The controls or display screens may differ depending on the connected Bluetooth device, phone model, and music player App.
- Some functions may not be available depending on the connected Bluetooth device or phone model.
- When a media device or mobile phone is connected by both the Bluetooth and USB cable at the same time, the device or system may not work properly. To use the Bluetooth connection, remove all cables from the device.

Bluetooth audio playback screen

The media player runs when you play a music file from a connected audio device via Bluetooth.



- 1 Returns to the previous step.
- ② Displays the information of the current music.
- 3 Restart playing the current file or play the previous file.
- 4 Can pause or resume playback.
- **6** Can play the next file.
- **6** Can see the duration of the playing song and the current playback position.
- **7** Find and connect other Bluetooth devices.
- Moves to the music list screen.
 - The list of Bluetooth audio files may not appear depending on the connected device or app.
- Oisplays the sequence number of the current file and the total number of files for playback.
- The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Media Sources: Opens the Radio/Media selection window.
 - Change Device: Find and connect other Bluetooth devices.
 - **Sound Settings**: Displays the system sound settings screen.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.
- The screen may differ depending on the vehicle model and specifications.
- The sound effect settings button may appear on the screen depending on the amp specifications. ▶ See "Adjusting the sound effect (if equipped)."

Pause/Resume

You can pause or resume playback of a Bluetooth audio file.

Resuming playback of the current Bluetooth audio file

You can play the current Bluetooth audio file from the beginning.

Perform any of the following methods:

- On the control panel, press the [SEEK] button after 3 seconds during playback (if equipped).
- ∠ The actions required may differ depending on the connected device.
- ∠ You can also run the function by using the Move lever/button on the steering wheel.

Resuming playback of the previous Bluetooth audio file

You can play the previous Bluetooth audio file during playback.

- On the Bluetooth audio playback screen, press K within 3 seconds during playback.
- On the control panel, press the [SEEK] button within 3 seconds during playback (if equipped).
- ∠ To play the previous music during playback, press twice or pressing the [〈 SEEK] button on the control panel twice after 3 seconds from the start of the playback (if equipped).
- You can also run the function by using the Move lever/button on the steering wheel.

Resuming playback of the next Bluetooth audio file

You can play the next Bluetooth audio file during playback.

- On the Bluetooth audio playback screen, press .
- On the control panel, press the [TRACK >] button (if equipped).
- ∠ You can also run the function by using the Move lever/button on the steering wheel.
- If any Search lever/knob on the control panel, you can search for the desired music by using the lever/knob. When you press the lever/knob within 5 seconds, music is played. However, if no input within 5 seconds, the search stops and the system displays the information of the current file.

5 Navigation

Navigation functions

Navigation Menu overview

You can use the navigation system conveniently through various functions on the Navigation Menu screen.

- On the All Menus screen, press Navigation Menu.
- On the control panel, press the [NAV] button.



Type1



Type2

- Search for a location by entering various types of keywords such as place name and address. ➤ See "Searching by keyword."
- ② Search for a location by using the point of interest (POI) categories. ► See "Searching for nearby points of interest(POI)."
- Select one of the destinations you entered previously. ➤ See "Searching from previous destinations."
- Select one of the locations stored in your saved places. ► See "Using saved favorite places."
- Search for Hyundai Dealerships easily. ► See "Searching for Hyundai Dealerships."
- 6 Cancel guidance to the destination. ▶ See "Canceling route guidance."
- View information on the entire route to the destination.
- 8 Edit the waypoints on the way to the destination. ► See "Editing the route."
- Reroute by changing the route search option. ► See "Changing the route search option."
- ① You can check accident and construction zone alerts on the map. ► See "Viewing traffic Information."
- Register your home, office or other frequently visited places as a favorite location to make searching easier. ► See "Saving a frequently visited place as a favorite place."
- The list of menu items appears.
 - Reorder Icons: Can change the location of an icon on the Navigation Menu screen.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
- Available icons and their arrangement may differ depending on the vehicle model and specifications.

Finding a route easily



/!\ Warning

Driving while distracted may cause a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any devices or systems that take the driver's attention away from driving.

- 1 Perform any of the following methods:
 - On the All Menus screen, press **Navigation Menu ► Search**.
 - On the map screen, press Q.
 - Press and hold the [NAV] button on the control panel to enter into Places.
- 2 Enter the location data such as place name, address, or coordinates and then press OK.



- 3 Select a destination from the search result.

 - You can see the sites in the list on the preview screen at the right.
 - To sort the search results in a different order, press on the attribute to toggle between options.



4 Check the location of the destination and then press **Set as Destination**.



- If you press Parking at the bottom right of the screen, the map screen displays the location icon of the parking lot.
- 5 Select a route and press **Start Guidance**.

Marning

Distracted driving or negligence in keeping your eyes forward may cause a loss of vehicle control. Never use any devices or systems that take the driver's attention away from driving.

- The information on the map may differ from actual road conditions, depending on the location or driving conditions.
 - Digitalized roads may not be identical to the actual roads. When guidance does not match the actual route, drive the vehicle according to actual road conditions.
 - The system may provide guidance that differs from the actual route due to a change in road conditions. When guidance does not match the actual route, drive the vehicle according to road conditions with observing the traffic regulations. When the vehicle reaches a zone that matches the actual route, the system guides the route correctly.
- ∠ Vehicle location may not be displayed correctly if:
 - The vehicle is driving on a Y-shaped or winding road with narrow angles.
 - The vehicle is driving closely to another road.
 - The vehicle is driving on a road where there are many tall buildings in the vicinity.
 - The vehicle is driving on a new road or a road under construction.
 - The vehicle is transported by a ferry or heavy-duty transport vehicle.
 - The vehicle is driving in a rugged mountain area or on a steep curve road.
 - The vehicle is entering a public road after making a turn through the turntable in an underground parking lot or multi-story parking lot.
 - The vehicle stops and starts repeatedly or moves slowly in front of an intersection.
 - The system reboots after the vehicle battery has been recharged or replaced.
 - The vehicle is driving on a slippery road due to heavy snow, etc.
 - The tires have been replaced recently or spare tires (or studless tires) are used.
 - Improper-sized tires are used or the pressure of each tire is different.
 - The replaced tire is worn out or the studless tires have been used for over two seasons.
 - A roof carrier is installed on the vehicle.
 - On a highway continued driving causes the system to perform map matching or apply the updated GPS data.

- ✓ Navigation service may not be provided correctly under the following conditions:
 - When the vehicle drives on a straight road continuously, the system may guide you to drive straight. It is not a malfunction.
 - Guidance may not be followed immediately after the vehicle makes a turn at an intersection or drives through an intersection.
 - The system may guide you to make a U-turn in a prohibited area.
 - The system may guide you to a traffic-blocked road (e.g. no-entry road or road under construction).
 - The system may guide you to a road away from the destination when there is no road to the destination or there are only narrow roads on the way.
 - Guidance may not be proper when the vehicle is off the route.
 - Guidance may not match the actual distance on an overpass or underpass due to the difference of the start point.
 - When you are driving at high speeds, route recalculations may take longer.
- Because the navigation system is used for information purposes only, Hyundai does not assume responsibility of the accuracy of the information.
- When the traffic information is not received, the status icon () appears at the top of the map screen (if equipped).

Map screen

The map screen provides various functions and informations, as follows:



- Displays the Home screen.
- ② Used to change the map display mode.
 - (North Up 2D): Displays the map with the north fixed at the top.
 - (Heading Up 2D): Rotates the map depending on the driving direction.
 - (Heading Up 3D): Rotates the map depending on the driving direction for 3D view.

- Adjust the navigation sound volume.
- 4 Zooms in the map.
- **5** Set the map scale change mode to automatic or manual.
- **6** Zooms out the map.
- O Displays the system information on the map. (It can display up to two items.)
 - Traffic information (if equipped).
 - · Bluetooth connection status
- Observe the second to the driving direction.
 Output
 Displays the point to change the driving direction.
- Obsplays the next point to change the driving direction.
- Displays the lanes in different colors.
 - · Blue: Recommended lane
 - · White: Available lane
 - · Gray: Unavailable lane
- Displays quick menu items.
- Stop the navigation guidance. ► See "Canceling route guidance."
- Oisplays the remaining distance to the destination and the estimated time of arrival. For more details, press the information item.
- Displays or hides the detailed guidance.
- To see only the map with no destination, press the map area on the Home screen or on the All Menus screen, press Map. Or press the [MAP] button on the control panel.
- The screen may differ depending on the vehicle model and specifications.

/!\ Warning

Be sure to check the road conditions while driving, because the camera information may get changed occasionally after a map update to the latest version. Relying solely on the driving assist system may cause violation of traffic rules and regulations, resulting in an accident.

Using the detailed guidance

When the vehicle needs to change the driving direction or lanes, a zoomed-in map automatically appears.



When the detailed guidance appears while driving, select and perform the desired function.

- To view basic information including sections for turns, press **Simple**.
- To check the types of convenience facilities in a rest area, press **Rest Areas**.
- For information details about each zone such as intersections, interchanges, and rest areas, press **Details**.



Adjusting the navigation volume

You can adjust the volume of navigation or GPS warning sound.

On the map screen, press \blacksquare and then press \blacksquare , or use the control bar to adjust the volume.



- To have the navigation sound always output first over media sound, check Navigation Volume Priority.

Canceling route guidance

To cancel route guidance, press **Cancel Route**. Alternatively, press **Navigation Menu** ► **Cancel Route** on the All Menus screen.

The destination displayed at the bottom of the screen disappears and changes to \square .

- Press to search for the target destination to obtain an optimum route.
- To maintain the specified destination and stop the route guidance, press and hold Cancel Route at the bottom of the screen. The guidance stops and the Resume Route button appears. You can use the button to search for a previous destination and resume route guidance.


Various ways to find routes

On the Navigation menu, you can set the destination by using various searches, such as entering the location information or selecting from recent destinations or categorized places.

- On the All Menus screen, press Navigation Menu.
- On the control panel, press the [NAV] button.



Type1

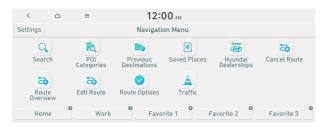

Type2

- 2 Available icons and their arrangement may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black. ▶ See "Graphic Themes (if equipped)."

Searching by keyword

Search for a location by entering various types of keywords such as place name, coordinates, and address.

1 On the **Navigation Menu** screen, press **Search**.



Type1



Type2

- ${\cal Z}$ Available icons and their arrangement may differ depending on the vehicle model and specifications.
- ✓ If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 ▶ See "Graphic Themes (if equipped)."

2 Enter the location data such as place name, address, or coordinates and then press **OK**.

- When there are any similar matches, the recommendations appear at the left of keypad.



- 3 Select a destination from the search result.
 - ✓ You can see the sites in the list on the preview screen at the right.
 - To sort the search results in a different order, press on the attribute to toggle between options.



4 Check the location of the destination and then press **Set as Destination**.



- If you press Parking at the bottom right of the screen, the map screen displays the location icon of the parking lot.
- 5 Select a route and press **Start Guidance**.


Searching for nearby points of interest(POI)

You can set a destination after searching the nearby points of interest by the category.

1 On the **Navigation Menu** screen, press **POI Categories**.



Type1

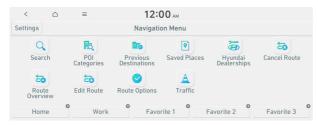

Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 See "Graphic Themes (if equipped)."

2 Select a desired point according to the instructions.

- Manual on Web (QR Code) and then scan the displayed QR code.
- ∠ The screen may differ depending on the vehicle model and specifications.



3 Select a destination from the search result.

- To display the result of search around a specific location, select a sort criteria from the list on the left of the screen.
- To sort the search results in a different order, press on the attribute to toggle between options.
- ∠ The screen may differ depending on the vehicle model and specifications.



4 Check the location of the destination and then press **Set as Destination**.

- 5 Select a route and press **Start Guidance**.
 - To change the type of nearby POIs on the map, press ► Nearby Info. ► Nearby POIs.




Searching from previous destinations

You can set a destination by selecting from the recently searched ones.

1 On the **Navigation Menu** screen, press **Previous Destinations**. The navigated destinations appear in the list.




Type1

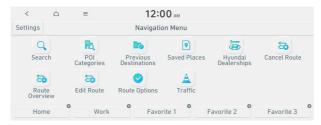

Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 See "Graphic Themes (if equipped)."
- 2 Select the desired destination from the list.
 - ∠ To access the online user's manual on the Previous Destinations screen, press
 User's Manual on Web (QR Code) and then scan the displayed QR code.
 - To sort the search results in a different order, press on the attribute to toggle between options.

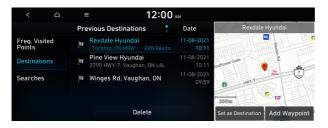

- 3 Check the location of the destination and then press **Set as Destination**.
- 4 Select a route and press **Start Guidance**.

Deleting a previous destination

- 1 On the Previous Destinations screen, press **Delete**.
- 2 Select the destination(s) to delete and press **Delete**.

You can delete the selected place(s) or all places.


Searching for Hyundai Dealerships

You can easily search for service centers or service stations.

On the Navigation Menu screen, press Hyundai Dealerships.



Type1

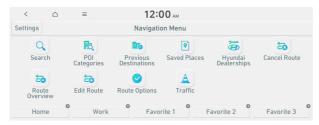


Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See "Graphic Themes (if equipped)."

- 2 Select a Hyundai Dealerships from the list.

 - \emptyset To sort the search results in a different order, press on the attribute to toggle between options.

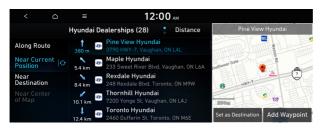

- 3 Check the location of the destination and then press **Set as Destination**.
- 4 Select a route and press **Start Guidance**.

Editing the route

You can edit the waypoints on the way to the destination. You can add up to two waypoints.

Setting a waypoint

You can search for the desired place and set it as a waypoint.

1 On the **Navigation Menu** screen, press the desired search method to search for a waypoint.



Type1



Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- For more information about the waypoint search: ► see "Searching by keyword,"
 "Searching from previous destinations," "Searching for nearby points of interest(POI),"
 "Searching for restaurants," "Searching for emergency services."

2 On the map for a search, press **Add Waypoint**. The selected waypoint is added to the route.



- 3 After adding waypoints, press **Calculate**.



4 Select the updated route and then press **Start Guidance**.

Changing the order of waypoints

You can change the order of waypoints on the route.

- 1 On the **Navigation Menu** screen, press **Edit Route**.
- 2 Select a waypoint to change the order and then press **Change Order**.
 - To change the order of waypoints, press Change Order, then drag it to reposition.
 - To add another waypoint on the Edit Route screen, press Add Waypoint.
 - To see waypoint on the map, press waypoint name ► Show Map.



- 3 After editing the route, press **Calculate**.
- 4 Select the updated route and then press **Start Guidance**.

Deleting a waypoint

You can delete a waypoint from the route.

- 1 On the **Navigation Menu** screen, press **Edit Route**.
- 2 Select a waypoint to delete from the route and then press **Delete**.



- 3 To search the route again after removing the waypoint, press **Calculate**.
- 4 Select the updated route and then press **Start Guidance**.

Avoiding specific zones

You can resume routing after excluding the specified roads such as congested roads or roads under construction.

- 1 On the **Navigation Menu** screen, press **Route Overview**.
- 2 Press Route Info. / Avoid.



The screen may differ depending on the vehicle model and specifications.

3 Select the roads to avoid and press **Reroute**.



- 4 Press **Yes**.
- 5 Select the updated route and then press **Start Guidance**.
- When there is any zone under construction ahead on the way, you are prompted to confirm whether or not to exclude the zone from the route. To avoid the zone, press Yes to resume routing.

Changing the route search option

You can change the route search option.

- 1 On the **Navigation Menu** screen, press **Route Options**.
- 2 Select a route and press Route Options or Route Avoid Options.



Option A (route search screen linked to connected car system)




Option B (route search screen not linked to connected car system)

- 3 On the route search screen, change the priority of the preferred search option.

 - ② On the Option A screen, press and hold and then drag on the right of the preferred search option to the desired position to change the priority. To select the avoidance route option, press ③.



Option A (route search screen linked to connected car system)

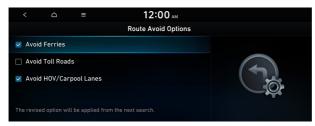


Option B (route search screen not linked to connected car system)

Searching for restaurants

1 On the **Navigation Menu** screen, press **POI Categories**.



Type1

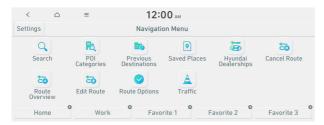


Type2

- ${\cal Z}$ Available icons and their arrangement may differ depending on the vehicle model and specifications.
- ② If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 - ► See "Graphic Themes (if equipped)."

2 On the **POI Categories** screen, press **Restaurants**.



- 3 Select a destination from the search result.

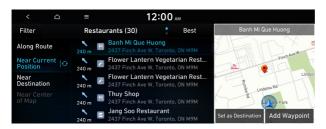


- 4 Check the location of the destination and then press **Set as Destination**.
- 5 Select a route and press **Start Guidance**.

Searching for emergency services

1 On the **Navigation Menu** screen, press **POI Categories**.



Type1

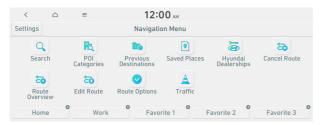

Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- 2 Select the type of emergency service.



- 3 Select a destination from the search result.
 - To sort the search results in a different order, press on the attribute to toggle between options.




- 4 Check the location of the destination and then press **Set as Destination**.
- 5 Select a route and press **Start Guidance**.

Using saved favorite places

After registering the current location or frequently visited places, you can easily set any of them as a destination.



Type1

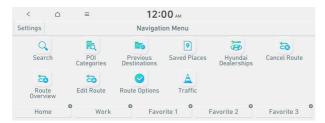

Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.


Saving a searched place as a favorite place

You can search and register the desired place.

- 1 On the **Navigation Menu** screen, press **Saved Places**.
- 2 On the **Saved Places** screen, press **Saved Places**.



3 Press Add.

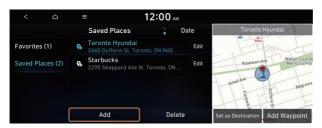

- 4 Press **Search** and enter a keyword for a search.
 - You can also search for the place by using other methods. ► See "Various ways to find routes."

5 Check the location and information of the current position and then press **OK**.



The place is registered as a favorite place.

Saving the current location as a favorite place

1 On the map screen, press **► Save**.



2 If necessary, press **Save** after making changes.



The place is registered as a favorite place.

Saving a frequently visited place as a favorite place

You can register your home, office, or other frequently visited place as a favorite.

1 At the bottom of the **Navigation Menu** screen, select a button that has



- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- 2 Press **Search** and enter a keyword for a search.
- 3 Check the location and information of the current position and then press **OK**.


The selected place is saved as a favorite and displayed as a shortcut button at the bottom of the Navigation Menu screen.

When you press and hold a registered favorite, you can edit its location.

Setting a saved favorite place as the destination

You can set any in the saved place of the navigation system as a destination.

- 1 On the **Navigation Menu** screen, press **Saved Places**.
- 2 Select the desired option from the left of the screen.

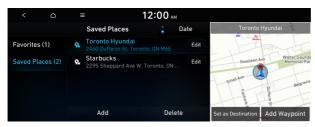

- 3 Select the place to set as a destination.
- 4 Check the location of the destination and then press **Set as Destination**.
- 5 Select a route and press **Start Guidance**.

Setting a frequently visited place as the destination

You can set your home, office, or other frequently visited places as a destination directly from your favorites list once you add them.

At the bottom of the **Navigation Menu** screen, press a desired shortcut button.



- When guidance to a destination is in progress, press Change Destination.
- Available icons and their arrangement may differ depending on the vehicle model and specifications.

Editing information about a saved favorite place

You can change information or properties of a registered location.

- 1 On the **Navigation Menu** screen, press **Saved Places**.
- 2 Select an option that contains the destination you want from the left of the screen.



- 3 Press **Edit** next to the place for information change.
- 4 After changing the information, press **Save**.



Deleting a saved favorite place

- 1 On the **Navigation Menu** screen, press **Saved Places**.
- 2 Select the desired group.
- 3 Among the registered favorite places, select a place to delete and press **Delete**.
- 4 Select the destination(s) to delete and press **Delete**.

Searching for gas stations

You can search nearby gas stations.

1 On the **Navigation Menu** screen, press **POI Categories ► Gas Stations**.



- Available icons and their arrangement may differ depending on the vehicle model and specifications.
- 2 Select a destination from the search result.
 - To display the result of search around a specific location, select a sort criteria from the list on the left of the screen.
 - To sort the search results in a different order, press on the attribute to toggle between options.



- 3 Check the location of the destination and then press **Set as Destination**.
- 4 Select a route and press **Start Guidance**.

Searching for EV (Electric Vehicle) charging stations (EV only)

You can search nearby charging stations.

On the Navigation Menu screen, press POI Categories ► EV Charging Stations.



Type1



Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.

- 2 Select a destination from the search result.
 - To display the result of search around a specific location, select a sort criteria from the list on the left of the screen.
 - To sort the search results in a different order, press on the attribute to toggle between options.



- 3 Check the location of the destination and then press **Set as Destination**.
- 4 Select a route and press **Start Guidance**.

Viewing traffic Information

You can see real-time traffic information such as ongoing road works or accidents.

1 On the **Navigation Menu** screen, press **Traffic**.



Type1




Type2

- Available icons and their arrangement may differ depending on the vehicle model and specifications.

2 Select an item from the real-time traffic information list and see the details.

- ∠ To reroute using recent traffic information while in guidance, press Reroute.
- To see traffic information along the current route or to see all available traffic information, press On Route.
- To select the type of traffic information, press Filter.

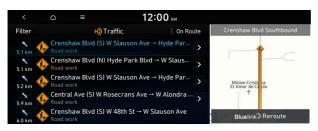

3 Check the detailed traffic information.



END USER LICENSE AGREEMENT

PLEASE READ THIS END USER LICENSE AGREEMENT ("EULA") CAREFULLY BEFORE USING THE NAVIGATION SYSTEM.

This is a license agreement between you and Hyundai Autoever, CORP. including its affiliates ("COMPANY") regarding a copy of the COMPANY navigable map database and/or Online contents together with associated software, media and explanatory printed documentation published by COMPANY(jointly the "Product"). The Product is provided for your personal, internal use only and not for resale. It is protected by copyright and is subject to the following terms which are agreed to by you, on the one hand, and COMPANY and its licensors (and their licensors and suppliers) (collectively, "Licensors") on the other hand.

By using the Product, you accept and agree to all terms and conditions in this End User License Agreement ("EULA"). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MUST PROMPTLY EXIT THE PRODUCT OPERATION PROGRAM AND DO NOT USE OR ACCESS TO THE PRODUCT. YOU AGREE THAT YOUR RIGHTS UNDER THIS EULA MAY BE TERMINATED AUTOMATICALLY WITHOUT NOTICE IF YOU FAIL TO COMPLY WITH ANY TERM(S) OF THIS EULA.

Terms and Conditions

Personal Use Only. You agree to use this Product together with COMPANY's authorized application for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may not assign this EULA or any of the rights or licenses granted under this EULA, except when installed in the system for which it was created.

Restrictions. Except where you have been specifically licensed to do so by COMPANY, and without limiting the preceding paragraph, you may not use the Product (i) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications or (ii) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

COPYING OR USE OF THE PRODUCT EXCEPT AS PERMITTED BY THIS EULA IS UNAUTHORIZED AND IS COPYRIGHT INFRINGEMENT UNDER THE LAWS OF YOUR COUNTRY. IF YOU COPY OR USE THE PRODUCT WITHOUT COMPANY'S PERMISSION, EXCEPT AS PERMITTED BY THIS EULA, YOU ARE VIOLATING THE LAW AND LIABLE TO COMPANY AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.

THE PRODUCT MAY INCLUDE ENFORCEMENT TECHNOLOGY DESIGNED TO PREVENT (i) UNAUTHORIZED COPYING OF THE PRODUCT ONTO PHYSICAL STORAGE MEDIA OR VIA TRANSFER OVER THE INTERNET OR OTHER ELECTRONIC COMMUNICATION MEANS AND/OR (ii) ILLEGAL USAGE OF THE PRODUCT OTHER THAN BY A SPECIFICALLY AUTHORIZED DEVICE. YOU AGREE THAT COMPANY MAY USE THESE MEASURES TO PROTECT COMPANY AND THE LICENSORS AGAINST COPYRIGHT INFRINGEMENT.

Uploads. The Product may provide functionality through which you are able to upload certain information about your use of the Product (collectively, "Uploads") to COMPANY's servers or receive other services from COMPANY (collectively, the "Services"). If you use such functionality, you authorize COMPANY to retain your Uploads on its servers. COMPANY will have no obligation to provide any Services, may change the form and nature of any Services at any time with or without notice to you, will have no liability whatsoever to you for any failure of the Product or Services to transmit your Uploads to or from COMPANY's servers, may cease providing any Services at any time with or without notice to you, and will have no obligation to retain your Uploads (or any other materials you may provide to COMPANY) on its servers or return your Uploads (or any other materials you may provide to COMPANY) to you before deleting them from its servers.

Storage. The Product may provide functionality through which you are able to store information (such as images) on the device on which you are using the Product. COMPANY will have no liability whatsoever to you or any third party for any failure of the Product to store any such information on such device.

Personal Information. By using the Product, you agree to the collection, retention and processing of your personal data (including the location of your mobile device) by COMPANY and to the storage and processing of such personal information on computers located outside of the country in which you reside. Even though COMPANY has taken steps intended to protect your personal information from being intercepted, accessed, used, or disclosed by unauthorized persons, COMPANY cannot fully eliminate security risks associated with your personal information and cannot guarantee that its systems will not be breached. See [*] for additional information regarding COMPANY's use of your personal information.

WARNING. THE PRODUCT REFLECTS REALITY AS EXISTING BEFORE YOU RECEIVED THE PRODUCT AND IT COMPRISES DATA AND INFORMATION FROM GOVERNMENT OTHER SOURCES. ACCORDINGLY, THE PRODUCT MAY CONTAIN INACCURATE OR INCOMPLETE INFORMATION DUE TO THE PASSAGE OF TIME, CHANGING CIRCUMSTANCES, SOURCES USED AND THE NATURE OF COLLECTING COMPREHENSIVE GEOGRAPHIC PRODUCT, ANY OF WHICH MAY LEAD TO INCORRECT RESULTS. THE PRODUCT AND SERVICES MAY NOT TO BE USED FOR SAFETY OF LIFE APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE ACCURACY OR RELIABILITY OF THE PRODUCT OR SERVICES COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. DO NOT ATTEMPT TO CONFIGURE THE PRODUCT OR INPUT INFORMATION WHILE DRIVING. FAILURE TO PAY FULL ATTENTION TO THE OPERATION OF YOUR VEHICLE COULD RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. BY USING THE PRODUCT, YOU ASSUME ALL RESPONSIBILITY AND RISK.

Disclaimer of Warranty. The Product is provided to you "as is," and you agree to use it at your own risk. SUBJECT TO THE APPLICABLE LAWS, COMPANY AND THE LICENSORS MAKE NO GUARANTEES, REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, CONTENT, QUALITY, ACCURACY, COMPLETENESS, EFFECTIVENESS, RELIABILITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, USEFULNESS, USE OR RESULTS TO BE OBTAINED FROM THE PRODUCT, OR THAT THE PRODUCT OR SERVER WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT ERRORS IN THE PRODUCT OR NONCONFORMITY TO ITS DOCUMENTATION CAN OR WILL BE CORRECTED. YOU ACKNOWLEDGE THAT THE PROVISIONS OF THIS SECTION ARE A MATERIAL INDUCEMENT AND CONSIDERATION TO COMPANY AND THE LICENSORS TO GRANT THE LICENSE CONTAINED IN THIS EULA AND TO PROVIDE YOU WITH ACCESS TO THE SERVICES.

Limitation of Liability. TO THE MAXIMUM EXTENT PERMITTED UNDER THE APPLICABLE LAWS, COMPANY AND THE LICENSORS SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, INCURRED BY YOU OR ANY THIRD PARTY WHICH MAY ARISE IN CONNECTION WITH OR RESULT FROM THE USE OR POSSESSION OF THE PRODUCT; OR FOR ANY LOSS OF DATA, PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE PRODUCT, ANY DEFECT IN THE PRODUCT, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF COMPANY OR THE LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ANY LIMITED REMEDY PROVIDED HEREIN.

Exclusions. Some jurisdictions do not allow certain warranty exclusions or the limitation or exclusion of liability, so to that extent the above exclusion may not apply to you. To the extent that COMPANY may not, as a matter of applicable law, disclaim any implied warranty or limit its liabilities, the scope and duration of such warranty and the extent of COMPANY's liability shall be the minimum permitted under such applicable law. The disclaimer of warranty and limitation of liability set forth in this EULA does not affect or prejudice your statutory rights where you have acquired the Product otherwise than in the course of business.

Third-Party Copyright Notices. The third-party sourced data has been incorporated into or made a part of the Product and is being sublicensed to you subject to the terms and conditions of this EULA. In this regard, you shall not remove or tamper with any intellectual property rights notice attached or used in relation to data supplied by the Licensors.

Entire Agreement. This EULA is the entire agreement between COMPANY (and the Licensors) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all previous written or oral communications or documents (including, if you are obtaining an update, any agreement that may have been included with an earlier version of the Product) with respect to such subject matter.

Governing Law. This EULA shall be governed by the laws of the jurisdiction in which you reside at the date of acquisition of the Product. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Product shall apply. In all other cases, or if the jurisdiction where you acquired the Product cannot be defined, the laws of the Republic of Korea shall apply. This EULA will not be governed by the U.N. Convention on Contracts for the International Sale of Goods. The courts competent at your place of residence at the time you acquired the Product shall have jurisdiction over any dispute arising out of, or relating to this EULA, without prejudice to COMPANY's right to bring claims at your then current place of residence.

Export Control. You agree not to export or re-export from anywhere any part of the Product in any form except in compliance with applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce.

Miscellaneous. If any provision of this EULA is found to be invalid or unenforceable, it will be enforced to the extent permissible and the remainder of this EULA will remain in full force and effect. Failure by COMPANY to prosecute any right with respect to a default hereunder will not constitute a waiver by COMPANY of the right to enforce rights with respect to the same or any other breach. No refunds or replacements will be permitted on damaged Product.

U.S. Government End Users. If the Product is being acquired by or on behalf of the United States Government or any other entity seeking or applying rights similar to those customarily claimed by the United States Government, this Product and related documentation are "Commercial Items" as that term is defined at 48 C.F.R. ("FAR") 2.101. This Product and related documentation are licensed to the United States Government end users (a) only as "Commercial Items" and (b) with only those rights as are granted to all other end users in accordance with this EULA, and each copy of Product delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: Hyundai Autoever, CORP.

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS: (135-847), 510, Teheran-ro, Gangnamqu, Seoul, Republic of Korea. This Product and related documentation are commercial items as defined in FAR 2.101 and is subject to this EULA under which this Product is provided.

©2013-2022 Hyundai Autoever. All rights reserved

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify COMPANY prior to seeking additional or alternative rights in the Product.

End-User Terms Required by HERE. The Product utilizes map data and/or online contents that COMPANY licenses from HERE and the following copyright notices apply to such map data and/or online Contents data (the "HERE Data"):

© 2013-2022 HERE. All rights reserved, please see the detailed as follow:

https://legal.here.com/terms/serviceterms/ and https://legal.here.com/privacy/policy/

End-User Terms Required by TomTom. The Product utilizes map data and/or Online contents that COMPANY licenses from TomTom and the following copyright notices apply to such map data and/or online contents (the "TomTom Data"); please see the detailed as follow : http://www.tomtom.com/en_gb/legal/eula/

The use of speed camera and danger zone alerts is prohibited in certain jurisdictions. Any use of this service is strictly at your own risk.

Hyundai-AutoEver and its supplier TomTom Global Content B.V. assume no liability for the use of this service.

Hyundai-AutoEver shall be entitled to immediately cease the service at any time without liability."

© Copyright. Based on data provided under license from PSMA Australia Limited (www.psma. com.au).

The Product for Europe utilizes certain Parking contents that COMPANY licenses from Parkopedia and the following copyright notices apply to such Parking Contents data (the "Parkopedia Data"):


© 2021-2022 Parkopedia. All rights reserved.

6 Phone


Using a Phone via Bluetooth

Use a mobile phone connected to the vehicle via Bluetooth, to send or receive calls. The Bluetooth connection allows you to view call details directly from the system screen, and to make calls safely and easily use the system microphone and speaker.

To connect to a device via Bluetooth, refer to the following: ▶ see "Connecting a Bluetooth device."

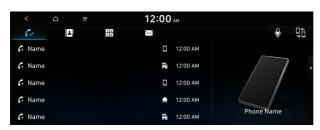

Type1

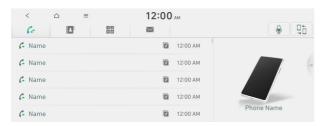

Type2

- ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Connecting a Bluetooth device

Bluetooth is a short-range wireless networking technology. The Bluetooth communication function allows you to exchange data by connecting a Bluetooth device to another neighboring Bluetooth device without a cable connection. With this function, you can use different types of devices more efficiently.

To make a phone call or play audio from a Bluetooth device, check the following first:

- For a device that is not registered to the system,
 ▶ see "Registering a device."
- A registered device will automatically connect to the system when you bring it near the system. If it does not automatically connect, ▶ see "Connecting a registered device," "Disconnecting a registered device."



/!\ Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.
- Park the vehicle at a safe place before connecting a Bluetooth device to the system. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- The Bluetooth connection function supports only the hands-free and audio related functions. Connect your mobile phone, MP3 player, or device that supports the handsfree or audio function

Registering a device

To connect a Bluetooth device to the system, first add the device to the list of Bluetooth devices on the system.

The screen may differ depending on the vehicle model and specifications.

- 1 On the All Menus screen, press Setup ➤ Device Connections ➤ Device Connections ➤ Add New.
 - To register a device for the first time, press the Call button on the steering wheel or by pressing **Phone** on the All Menus screen.
- 2 Turn on Bluetooth on the Bluetooth device to connect and select the vehicle system on the list of searched devices.
 - The system's Bluetooth name can be seen on the Add New Device window.



- 3 Check that the authentication code on the Bluetooth device screen matches the one on the system screen and approve the connection on the device.
- 4 When your smartphone is using Bluetooth communication, to download contacts from the phone to the system or use the text message notification, allow access to your phone.
 - Access is only required to use Bluetooth calling. There will be no access request when you connect an audio device.
- After the access request is approved, it may take a while until the Bluetooth connection is completed. As soon as the Bluetooth connection is completed, the Bluetooth connection indicator icon appears at the top of the screen.
- Access to data can be enabled or disabled by using the Bluetooth Settings menu on the mobile phone. For more details, refer to the mobile phone's user manual.
- In order not to use the automatic Bluetooth connection, turn off the Bluetooth function on the device. To use this function again, turn on the Bluetooth function on the device.

Connecting a registered device

To use a Bluetooth device, first connect a registered Bluetooth device to the system.

- 1 On the All Menus screen, press Setup ➤ Device Connections ➤ Device Connections.
- 2 Press the icons to connect.



- If you cannot connect your device, check to make sure its Bluetooth option is enabled.
- When the connection is terminated abnormally due to being out of range or device failures, the connection is automatically restored as soon as the device returns to the connection range or normal state.

Bluetooth connection screen



- Returns to the previous step.
- Search for a setting item by voice or by entering a keyword.
- 3 Select hands-free or Bluetooth audio to connect or disconnect Bluetooth devices.
- 4 Add a new device to the system.
- **5** Delete a registered device from the system.
- 6 The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Auto Connection Priority**: Set the priority order for automatic Bluetooth connection to the system when it turns on (if equipped).
 - **Search for Settings**: Search for a setting item by voice or by entering a keyword.
 - Phone Projection Settings: Change the settings related to phone projection (if equipped).
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.

Disconnecting a registered device

- 1 On the All Menus screen, press **Setup** ▶ **Device Connections** ▶ **Device Connections**.
- Press the connected icons.

Deleting a registered device

If you will no longer use a Bluetooth device or you want to add a new device when 6 devices are already registered, delete an existing registered device.

- On the All Menus screen, press Setup ➤ Device Connections ➤ Device Connections ➤ Delete Device(s).
- 2 Select a device to delete and press **Delete**.
 To delete all registered devices, press **Mark All ▶ Delete**.
- 3 Press Yes.
- When you delete a registered device, all related contacts, call logs, and text messages are removed from the system.

Making a call via Bluetooth

You can connect a Bluetooth device with the hands-free function to use a Bluetooth phone. The Bluetooth connection allows you to view call details directly from the system screen, and to make calls safely and easily use your vehicle microphone and speaker.

/!\ Warning

- Park the vehicle at a safe place before connecting your mobile phone. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- While driving, do not make a call by dialing a phone number or do not pick up your phone to talk. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur. If necessary, use the Bluetooth hands-free function and make the call as short as possible.

Dialing from the recent call list

Make calls directly from call history of your mobile device.

When you connect your mobile device and system over Bluetooth, the list of recent calls from the device will be downloaded to the system and you can call them again by selecting them from the system screen. Your vehicle has a built-in microphone and speaker that make using mobile phones safe and easy.

- 1 Perform any of the following methods:
 - On the All Menus screen, press **Phone**.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press ...
- 3 Choose a name from the list.

The system dials the selected number.

✓ You can also move to a desired number by using the Move lever/button on the steering wheel without pressing on the screen.



- The download may not work in some phone models.
- ✓ You can download up to 50 call records for each list.
- ∠ Call durations do not appear on the system screen.
- You cannot download call records when the download is prohibited by the phone. Some phone models may require approval for a download. When a successful download is not made, check the phone screen or its settings.
- When call records are newly downloaded, the previous records are removed.
- ∠ Learn more about receiving calls while using a Bluetooth connection. ➤ See "Accepting an incoming call over Bluetooth."

Recent calls list screen



- Returns to the previous step.
- ② View a list of recent calls downloaded to the system from the device.
- 3 View all recent calls (if equipped).
- 4 View only dialed calls in the list (if equipped).
- **(3)** View only received calls in the list (if equipped).
- **6** View only missed calls in the list (if equipped).
- Make a phone call using voice recognition. ► See "Dialing with voice recognition."
- 8 Find and connect other Bluetooth devices.
- The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Download**: Download the list of recent calls from the connected mobile device.
 - **Privacy Mode**: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Change Device: Find and connect other Bluetooth devices.
 - Device Connections Settings: Can change the Bluetooth settings.

- User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
- **Split Screen**: Can turn on or off the split screen mode.
- The screen may differ depending on the vehicle model and specifications.

Dialing from the favorite contacts list (if equipped)

Make a list of frequently used phone numbers to call them quickly in the future.

When you connect your mobile device and system over Bluetooth, your contacts stored on the device will be downloaded to the system, and you can add frequently used phone numbers to the favorites list. Call your favorite contacts quickly and easily by selecting them from the list.

- 1 Perform any of the following methods:
 - On the All Menus screen, press Phone.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press 🖪.
- 3 On the favorites screen, press Add New and select a name from the displayed list.
 - ② If you already have contacts on your favorites list, press
 ► Edit on the Favorites screen.



4 To set a phone number as a favorite, press the
 button next to it.

The phone number is now added to your favorites list.



- 5 Choose a contact from the list.
 - The system dials the selected contact.
- ∠ You can add up to 10 favorite contacts for each device.
- When another mobile phone is connected, the screen does not display the contacts from the previous phone, but they are kept in the system until the phone is deleted from the list.
- ∠ Learn more about receiving calls while using a Bluetooth connection. ► See "Accepting an incoming call over Bluetooth."

Favorites screen



- Returns to the previous step.
- View a list of favorite contacts.
- 3 Make a phone call using voice recognition. ▶ See "Dialing with voice recognition."
- 4 Find and connect other Bluetooth devices.

- **6** The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Add New/Edit: Add a new contact or edit the favorites list from downloaded contacts.
 - **Delete**: Delete a contact from the favorites list.
 - **Privacy Mode**: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Change Device: Find and connect other Bluetooth devices.
 - Device Connections Settings: Can change the Bluetooth settings.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.

Dialing from the contacts

You can use contacts from the connected mobile device on the system.

When you connect your mobile device with the system via Bluetooth, contacts from the device are downloaded to the system, and you can choose to call them from the system screen. The system has a built-in microphone and speaker that make using mobile phones safe and easy.

- 1 Perform any of the following methods:
 - On the All Menus screen, press **Phone**.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press .
- 3 Select a contact from the list.

The system dials the selected contact.



- You can download only the contacts that can be displayed on the connected Bluetooth device. The contacts may not appear in some Apps.
- ∠ You can download up to 5,000 contacts for each device.
- The download may not work in some phone models.
- Contacts from both the mobile device and its SIM card are downloaded at the same time. The system may not be able to download SIM card contacts from all phone models.
- When speed dial numbers are set to contacts on the phone, press and hold a speed dial number on the dial pad to make a call easily. Some mobile phone models may not support the speed dial function.
- You cannot download contacts when the download is prohibited by the phone. Some phone models may require approval for a download. When a successful download is not made, check the phone screen or its settings.
- Depending on the phone model or operation status, downloading may take longer than usual.
- When a new contacts list is downloaded, the previous records are removed.
- The downloaded contacts cannot be edited or deleted from the system.
- When another mobile phone is connected, the screen does not display the contacts downloaded from the previous phone, but they are kept in the system until the phone is deleted from the list.
- ∠ Learn more about receiving calls while using a Bluetooth connection. ► See "Accepting an incoming call over Bluetooth."

Contacts list screen



- Returns to the previous step.
- Enter a contact's name or phone number to search the list. You can also search for a contact by pressing and saying the contact's name or phone number.
- 3 View a list of contacts downloaded to the system from the device.

- 4 Use the index to guickly find the contact you are looking for.
- 6 Make a phone call using voice recognition. ▶ See "Dialing with voice recognition."
- 6 Find and connect other Bluetooth devices.
- The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Download: Download the list of contacts from the connected mobile device.
 - **Search**: Search contacts by entering a name or a phone number.
 - Privacy Mode: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Change Device: Find and connect other Bluetooth devices.
 - Device Connections Settings: Can change the Bluetooth settings.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.

Dialing using the dial pad

Enter a phone number using the dial pad to make a call.

When you connect your mobile device to the system via Bluetooth, you can enter and dial a phone number from the system screen, without interacting with the device. Your vehicle has a built-in microphone and speaker that make using mobile phones safe and easy.



/ Warning

Do not manually dial a call while driving. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur.

- 1 Perform any of the following methods:
 - On the All Menus screen, press **Phone**.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press **B**.

3 After entering a phone number, press ...

A call is connected to the entered phone number.

∠ When contacts are on the system, search for the desired contact by entering the initial letters or number on the dial pad. (e.g. John Doe ► JD).



∠ Learn more about receiving calls while using Bluetooth connection. ➤ See "Accepting an incoming call over Bluetooth."

Dial pad screen



- Returns to the previous step.
- ② Use the dial pad to enter phone numbers.
- O Delete an entered number.
- 4 Can configure the Bluetooth connection settings.
- **6** Press to dial the number you entered.
 - If you have recent calls stored on your system, you can use the following feature before entering a phone number.
 - Pressing this button will display the most recently dialed numbers in the field.
 - Press and hold this button to automatically call the most recently dialed number.

- **6** Make a phone call using voice recognition. ▶ See "Dialing with voice recognition."
- 7 Find and connect other Bluetooth devices.
- The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Privacy Mode**: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Change Device: Find and connect other Bluetooth devices.
 - Device Connections Settings: Can change the Bluetooth settings.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.


Dialing with voice recognition

When you connect your mobile device to the system via Bluetooth, contacts from the device are downloaded to the system, and you can choose to call them using voice recognition.

- 1 Perform any of the following methods:
 - On the All Menus screen, press Phone.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press .
- 3 When a guiding beep is heard, say the name of the contact to make a phone call.
 - The system dials the selected contact.
- ${ 2}$ In case of the dial pad screen, press ${ 9}$ say the phone number to make a call.

Accepting an incoming call over Bluetooth

The system screen alerts you when you receive a call while connected using Bluetooth.

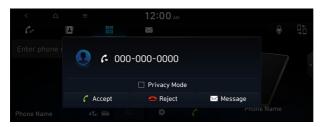

Perform any of the following methods:

- Press Accept on the screen.
- On the steering wheel, press the Call button.



/N Warning

- Park the vehicle at a safe place before connecting your mobile phone. It may take the driver attention off the road and cause a traffic accident which can result in damages, injuries, and/or death.
- Do not talk on your mobile device while driving. Distraction by the use of a mobile phone may cause you not to recognize traffic flow around and not to cope with unexpected situations. As a result, a traffic accident may occur. If necessary, use the Bluetooth handsfree function and make the call as short as possible.
- If your mobile phone is connected to the system and you make a call while stepping out of the vehicle, the call may be heard through the vehicle's speakers. To disconnect the call, disable the Bluetooth connection on the system or turn off the Bluetooth function on the mobile phone.

Rejecting a call

Perform any of the following methods:

- Press Reject on the screen.
- On the steering wheel, press the End Call button (if equipped).
- On the steering wheel, press and hold the Call button (if equipped).
- To reject by sending a call-reject message, press Message. From the list, select the callreject message and press **Send**.
- The call-reject or auto-reply message may not be supported in some phone models.

Using functions during a call

During a call, the following screen appears.

Press to use the available options.



- Returns to the previous step.
- ② Used to turn on or off the microphone mute function.
- 3 Can adjust the microphone volume.
- 4 Displays or hides the dial pad screen.
- Used to switch the call to the mobile phone. This option may not be available in some phone models.
- **6** Used to end a call.
- 7 The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Privacy Mode: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Split Screen: Can turn on or off the split screen mode.
- If you set the microphone volume too high, the other party may have a difficulty understanding you due to noise or echoing, depending on their mobile phone and surroundings. Setting the volume to 30 or lower is recommended.
- When the caller is in the contact list, the caller's name and phone number of the caller are displayed. Otherwise, only the phone number appears.
- During a call with a Bluetooth connection, you cannot switch to another screen such as Radio/Media mode.
- ${\Bbb Z}$ Depending on the phone model, the call volume of the other party may differ.
- Depending on the phone model, the smartphone number may not appear.

Switching to another call

You can receive another incoming call while in a call. This option is available only when the connected mobile phone supports the call hold function. The original call is put on hold.

To switch between two calls, use either option.

- Press Switch.
- · Press a displayed phone number.



This option may not be available in some phone models.

Checking new messages over Bluetooth

After connecting a mobile phone via Bluetooth, you can check the received messages through the system screen and listen to voice messages converted from the text messages. This option is available when a mobile phone is connected via Bluetooth. You can also send the brief reply message registered in the system.

Checking new messages

When a message is received, the new message notification window appears.


To check the message, press View.



- View caller details.
- 2 Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.

- 3 Can see the message details.
- Q Reads out the message through the speakers in the vehicle.
- **6** Used to close the notification window.
- The message notification window does not appear when the privacy mode is enabled or the message notification is turned off.
- ∠ The screen display may differ depending on the mobile phone model.

Bluetooth message screen

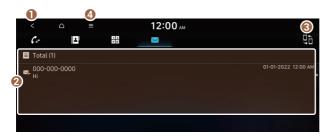

- Returns to the previous step.
- 2 View the list of received messages.
- 3 Find and connect other Bluetooth devices.
- 4 The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Privacy Mode**: Activate privacy mode to protect personal data. The data downloaded from the mobile phone stays hidden while this mode is on.
 - Change Device: Find and connect other Bluetooth devices.
 - Device Connections Settings: Can change the Bluetooth settings.
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.

Checking new messages from the list

- 1 Perform any of the following methods:
 - On the All Menus screen, press **Phone**.
 - On the steering wheel, press the Call button.
- 2 On the Bluetooth Call screen, press .
- 3 Select a message from the list.
- 4 Check the message.



- Returns to the previous step.
- 2 Reads out the message through the speakers in the vehicle.
- 3 Used to select a message registered in the system for sending a brief reply message.
- 4 Used to make a call to a message sender.
- **5** Used to move to the previous or next message.
- **6** The list of menu items appears.
 - **Display Off:** Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Split Screen**: Can turn on or off the split screen mode.

- ∠ The auto-reply messaging may not be available depending on the smartphone model.
- ∠ To edit or delete a message, park the vehicle at a safe place and access the messaging function on your smartphone. You cannot edit or delete a message from the system.
- When an iPhone is connected to the system, there are some restrictions when receiving messages as follows:
 - Only the sender name appears when the sender information is saved.
 - When the sender information is not saved, only the phone number appears.
 - You cannot use the auto-reply message function.
 - When the incoming message notification or lock-screen view option is off, messages cannot be received.
- The message reader function may not be supported depending on the system language.

Voice functions

Voice recognition

With the voice recognition function, you can access various functions of the infotainment system without manipulating the screen or buttons. This function prevents driver distraction and dangerous situations.

Use voice commands to access various functions easily.



Type1



Type2

- - Press the Voice Recognition button. After a beep sound, say your voice command.
 - Pronounce a command accurately and naturally, without pausing between words, like vou would in a conversation.
 - The microphone is located above the driver's head. Say your command while maintaining an upright posture. The microphone location may differ depending on the vehicle.
- ∇oice recognition is automatically ended when:
 - You make or receive a call.
 - The front or rear cameras operate (if equipped).
 - A button is pressed to run another function (e.g., radio or media change).
 - Rerouting or other unexpected action is made due to deviation from the route during quidance.
- ✓ Voice recognition may not work properly when:
 - The sunroof or windows are open so the wind is strong.
 - The fan speed of the air conditioner or heater is high.
 - The vehicle is passing through a tunnel.
 - The vehicle is driving on an unpaved road and its noise and vibration are loud.
 - Noise is loud due to a heavy rain or storm.
- When using speech recognition from the rear seats, some commands may not be supported depending on the vehicle model and type.
- Special characters included in a contact are not recognized by voice (e.g., School_John, John!).
- Not all languages may be supported depending on the region. Some commands may not be supported depending on the set language.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black. ▶ See "Graphic Themes (if equipped)."

Using the voice recognition function

- 1 Press the Voice Recognition button on the steering wheel. After a beep sound, say your voice command.
 - If you press the Voice Recognition button when the system is waiting for a voice command, the standby time is extended.
 - ∠ If you press the Voice Recognition button in the middle of voice guidance on the voice recognition function, the voice guidance is skipped.
- 2 When a beep sound is heard, say a voice command as required (e.g., radio). See "Available voice commands" or "Viewing available voice commands."
 - Some functions may require additional commands.
 - If multiple search results are found, follow the on-screen instructions to say the number you want to run.



Ending voice recognition mode

To end the voice recognition, perform one of the following methods:

- In standby mode for voice recognition, say "Exit".
- On the voice recognition screen, press **Exit**.
- On the steering wheel, press and hold the Voice Recognition button.

Using voice recognition via phone projection

Use the voice recognition function on your smartphone via phone projection. ▶ See "Using the phone projection function."


Adjusting the voice guidance volume

When voice recognition mode is on, you can adjust the volume by using either the volume button on the steering wheel or the volume knob/button.

Viewing available voice commands

Turn on voice recognition mode and then say "Commands" to view all commands that are available for use.

- The All functions screen can be controlled by touch only and does not recognize voice commands.
- To redirect to the Voice Recognition screen, press the Voice Recognition button.
- Press **Exit** to end voice recognition.
- Ø Some functions may not be supported depending on the vehicle's options.

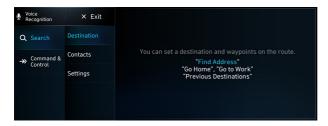

Available voice commands

For more voice commands, activate voice recognition and say "Commands".

Function	Description	Command
Information commands	View Weather/Time/Stocks/Sports information.	How is the weather?
		What day is it today?
Available whe	n Bluelink is connected.	
Call commands	Make a phone call to a contact saved in your contact list.	Call <name></name>
		Call <name> at Home</name>
	mmands, your mobile phone must be conne d your contacts must be downloaded. ▶ See	
${\mathbb Z}$ Some functions may not be available, depending on the connected mobile phone.		
Search commands	Search the settings menu.	Search settings for <settings menu=""></settings>
Navigation commands	Run navigation, and set a destination or waypoints.	Find <poi></poi>
		Go Home/Go to Work
		Reroute
within the stat	e a command starting with "Find," the syster te or province where your vehicle is currentl nother state or province, say the state or pro ou want.	y located. To search for
Some comma destination is	nds, such as "Cancel Route" or "Show Route set.	e," are available only when a
Radio/Media commands	Run the radio/media function.	FM <87.5 to 107.9>
		AM <530 to 1710>
		SiriusXM <0 to 999>
		Media
		Music

Function	Description	Command
Rear-seat function commands (if equipped)	Run the rear-seat function.	Passenger Talk
		Quiet Mode
		Turn off Quiet Mode
	ands may not be supported, depending on t	he vehicle model and
Vehicle control commands (if equipped)	Control air conditioner, heater, or other vehicle functions.	Heat On/Off
		Air Conditioner On/Off
		Turn on/off seat warmer
		Turn on/off air ventilation seats
Some community functions.	ands may not be supported, depending on t	he vehicle model and
Other commands	Indicates the command that is available in special cases.	Help
		Exit
Ø Other comm	ands are commands that can be used in spe	cific situations.

Using the Siri Eyes Free

When you connect an Apple device that is compatible with Siri to your system via Bluetooth, you can use the Siri Eyes Free. This allows you to perform the functions on your system and Apple device with voice commands so that you can devote your attention to driving.

First, make sure that your Apple device supports Siri and that you have activated Siri.

- Connect your Apple device to your system via Bluetooth.
- 2 On the steering wheel, press and hold the Voice Recognition button.
- 3 On the Siri screen, press **Speak**.



4 Say a command.


- You can perform the functions related to Bluetooth calls on the system and other functions on your Apple device.
- Press the Voice Recognition button to restart Siri.
- 5 To end Siri, press and hold the Voice Recognition button on the steering wheel.
- Apple devices may have different functions enabled and may vary in the way how they respond to Siri commands, depending on the device type and iOS version.

Voice Memo

You can use the microphone on the vehicle to record and play voice memos.



Type1

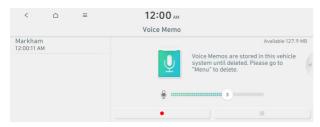


Type2

- The screen may differ depending on the vehicle model and specifications.
- "Graphic Themes (if equipped)."

Running the voice memo

On the All Menus screen, press Voice Memo.

Voice memo screen

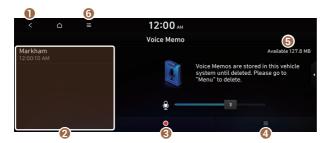

- Returns to the previous step.
- ② Displays the list of recorded voice memos.
- 3 Starts or pauses the recording.
- 4 Stops recording.
- **6** You can check the storage space of the system where voice memos can be saved.
- **1** The list of menu items appears.
 - **Display Off**: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - **Delete**: Can delete a voice memo.
 - Save to USB Device: Can record a voice memo to a USB storage device. Check that the USB device is compatible. ▶ See "USB storage devices."
 - Storage Information: Can see the file size of recorded voice memos.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - **Split Screen**: Can turn on or off the split screen mode.

Recording a voice memo

- 1 On the **Voice Memo** screen, press . It starts recording a voice memo.
- 2 When recording is finished, press on the screen or press the End Call button on the steering wheel.
 - The voice memo is automatically saved.

- When recording starts, the other audio functions are muted or playback is paused.
- When you make or receive a call while recording, the recording is paused.
- ∠ When you make an emergency call or you are connected to an emergency call after airbag deployment, the recording is stopped and the recorded voice memo is automatically saved.

Playing a voice memo

You can select and play a recorded voice memo.

From the list of Voice Memos, press the desired voice memo.

8 Bluelink

Bluelink service

Bluelink provides connected car services, such as roadside assistance and emergency rescue, via the latest IT and communication technologies.

When you have subscribed to Bluelink, you can access Bluelink services through the buttons on the vehicle. You can also access other useful features through Bluelink menus on the system.

- You must be an active Bluelink subscriber or within the initial free trial period to receive Bluelink services, including Auto Collision Notification.
- Depending on the conditions such as vehicle type, system type, and the subscribed service package, available services may differ.
- Some services may incur additional charges.
- Services may be modified, added, or deleted by changes in the company's policies.

Service restrictions

Bluelink services are provided via the mobile communication network. Accordingly, the service may be restricted depending on the mobile communication network condition. Use the network signal strength icon () at the top of the screen to check the mobile communication status.

- It is recommended to use the service when the number of signal bars in the icon is 4 or more.
- Depending on the network signal status, access to Bluelink may be restricted in the following locations:
 - Inside a building or tunnel
 - Mountain or forest area
 - Road close to a cliff
 - Area densely populated with tall buildings
 - Road under expressway or multi-level road
 - Communication shadow area according to the service provider's network coverage policy

Subscribing to the service

You must activate Bluelink service to use it on the system. An account with https://www. mybluelink.ca is required to activate the service. When you do not have an account, create a new account to activate the service. When you already have an account, enter your account information registered on https://www.mybluelink.ca.



/!\ Caution

Do not turn off the vehicle while the activation is in progress. It may cause a system malfunction.

- 1 Park your vehicle in a safe place.
 - ✓ You cannot enter information for service activation while your vehicle is moving.
- 2 On the All Menus screen, press **Bluelink** ▶ **Bluelink Settings** ▶ **Activate Service**
- 3 Follow the on-screen instructions to complete activation.
- 4 Enter your email address and password.
 - When you have a registered account, press Existing Account and enter your email address and password.




5 Press **Submit**.

- While the activation is in progress, the system buttons are locked.
- ∅ If activation fails, contact the Hyundai Customer Relations Center at 1-844-258-5656.
- This activation only allows you to use safety features, such as roadside assistance and emergency services. To use the full services provided by Bluelink, visit https://www. mybluelink.ca and complete your profile.
- When your Bluelink service expires, you can reactivate the service by renewing your subscription on https://www.mybluelink.ca and entering your email address and password again in the Activate Service menu.

Running the Bluelink menu

You can run the Bluelink in the system to use the service.

On the All Menus screen, press Bluelink.

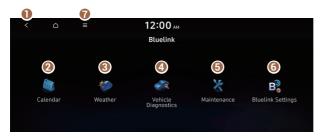

Type1



Type2

- 1 Returns to the previous step.
- ② View the schedule details for today and tomorrow (if equipped). ➤ See "Checking schedule details (if equipped)."
- 3 Can see the weather information (if equipped). ► See "Checking weather information (if equipped)."
- ④ Checks your vehicle for abnormal conditions and displays the result. ➤ See "Diagnosing the vehicle."

- See the information about the intervals for the last and next maintenance services (if equipped). ► See "Checking maintenance service intervals (if equipped)."
- **6** Access the Bluelink service to use it on the system or check modem information.
- 7 The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
- The screen may differ depending on the vehicle model and specifications.
- "Graphic Themes (if equipped)."



/!\ Warning

Driving while distracted may cause a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls that take the driver's eyes, attention, and focus away from safe driving or that are not permissible by the law, should never be used while driving.

Use the Bluelink features on the system when the vehicle is stationary with the vehicle turned on.

Checking schedule details (if equipped)

View the schedule details for today and tomorrow.

On the All Menus screen, press **Bluelink** ▶ **Calendar**.

- To use the calendar, make sure you install the Bluelink App on your smartphone and sign up for the Bluelink Service. Use either Google Play Store or App Store (depending on your smartphone model) to download and install the Hyundai Bluelink App and sign up for the Bluelink Service. ▶ See "Subscribing to the service."
- To use the calendar, make sure your user profile is linked to your Bluelink account. It is not possible to use the calendar if your user profile is set to "Guest." To link your user profile to your Bluelink account, press **Setup** ▶ **User Profile** from All Menus.

Calendar screen



- 1 Returns to the previous step.
- 2 View the schedule details for today or tomorrow.
- 3 Update with the latest schedule details.
- 4 The list of menu items appears.
 - Display Off: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Sync now: Sync to the latest schedule details of the linked account.
 - **Select Calendar(s)**: Select the calendar to display on the screen.
 - **User's Manual on Web (QR Code)**: Displays the QR code that provides access to the online user manual for the system.
 - Split Screen: Can turn on or off the split screen mode.
- ${\cal Q}$ Available icons and their arrangement may differ depending on the vehicle model and specifications.

Setting a destination

You can view schedule details and set a destination by pressing on an event from the calendar screen.


- ${ 2} \hspace{-.8em}{ \begin{tabular}{l} \end{tabular} } \hspace{.8em} \hspace$
- 1 From the calendar screen, press on the event to set a destination.



Press Search Destination.



3 Check the location of the destination and then press **Set as Destination**.

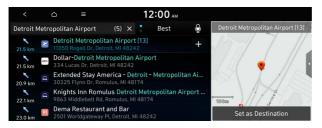

- When you see the search result list, press the desired destination to see on the map.
- 4 Select a route and press **Start Guidance**.



Schedule reminder

A schedule notification pops up at a specified time.



To view schedule details, press **Details**.


Checking weather information (if equipped)

You can view weather information (e.g., temperature, humidity, precipitation and rainfall probability) for today, or the weather forecast.

The weather information is accessible only when the system is connected to the network.

On the All Menus screen, press **Bluelink** ▶ **Weather**.

Weather information screen

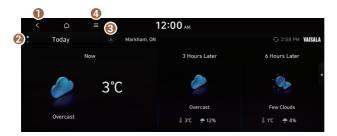

- Returns to the previous step.
- 2 Select today's weather and the weather forecast.
- 3 Displays the weather of the current position.
- 4 The list of menu items appears.
 - **Display Off**: Turns off the screen. To switch the screen back on, press the screen or briefly press the power button.
 - Waypoint: Displays the weather of the waypoint, if specified (if equipped).
 - **Destination**: Displays the weather of the destination, if specified (if equipped).
 - Search: Can see the weather information by searching for an address (if equipped).
 - Forecast: Provides the weather forecast (if equipped).
 - **Update**: Update to the latest weather information (if equipped).
 - User's Manual on Web (QR Code): Displays the QR code that provides access to the online user manual for the system.
 - Split Screen: Can turn on or off the split screen mode.

Diagnosing the vehicle

You can diagnose your vehicle. The information is sent to the Bluelink Center. You can receive the diagnosed result from the representative and use additional services, such as towing, route guidance to a repair shop, or a maintenance reservation.

- 1 Park your vehicle in a safe place.
 - You can start a diagnosis only when the vehicle stops, because some components cannot be diagnosed while the vehicle is moving.
- 2 On the All Menus screen, press Bluelink ➤ Vehicle Diagnostics.
 - A remote diagnosis starts. Refrain from using your system until the diagnosis is complete and the result is displayed on the screen. When you move to another screen while a diagnosis is in progress, the diagnosis is canceled.
- 3 Check the result displayed on the screen.
 - A diagnosis result provided by this service is only an estimated result based on the signals from your vehicle. Visit a Hyundai Motor Company Service Center or a service coordinator for a detailed diagnosis.

Checking maintenance service intervals (if equipped)

You can see information about the intervals for the last and next maintenance services. This feature can help you maintain your vehicle on a regular basis.


- 1 On the All Menus screen, press **Bluelink** ▶ **Maintenance**.
- 2 Check the maintenance information.
 - You can see the distance driven and the number of days remaining before the vehicle should receive maintenance again. Use the information to determine when to perform the next maintenance service.
 - To reset the information, press Reset.



Configuring the Bluelink settings

You can subscribe to the Bluelink service or see the modem information.

1 On the All Menus screen, press **Bluelink ▶ Bluelink Settings**.

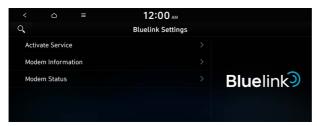


- 2 Select the desired option(s):
 - To subscribe to the Bluelink service by using the Bluelink settings menu, press Activate Service.
 - To check the modem information for use of the Bluelink service, press Modem Information.
 - To check the modem status for use of the Bluelink service, press **Modem Status**.

Using Voice Local Search (if equipped)

With Bluelink, you can search for locations from the online map database by using voice commands.

If you did not update the map or system or you cannot find your destination in the navigation, you can use the latest information from the online server to search for locations and receive guidance.

- 1 On the steering wheel, press the Voice Recognition button and say "Find + <POI>".
- 2 After the voice guidance ends and you hear a beep, say the POI name or Address.

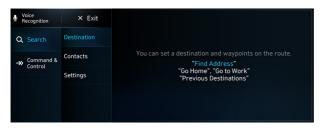

Depending on the system language, voice recognition may not be supported.

Contacting the roadside assistance

When you encounter a disabled vehicle or another problem on the road, you can contact the roadside assistance directly to receive vehicle towing.

Upon any emergency, press the [H] button on the vehicle.

- When connected to a roadside assist service agency, ask a representative for the service you need.



Using safety and security services

Upon emergencies or accidents, you can use various types of assistances.

Auto Collision Notification

This service provides you with immediate assistance when an accident occurs and an airbag is deployed. When this happens, an Auto Collision Notification (ACN) signal, containing your customer and location information, will be transmitted to the Bluelink center automatically.




Once the signal has been received, a response specialist establishes voice communications with you and forwards any pertinent information to Bluelink emergency services.

SOS

You can request Bluelink emergency services.

Upon any emergency, press the [SOS] button on the vehicle.

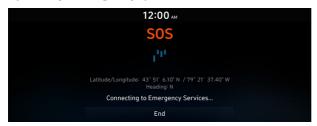

Vehicle information and location are sent to specially trained response specialists, who assist in coordinating the dispatch of appropriate emergency assistance to you.

- The response specialist will remain connected with you until the first emergency assistance arrives.

Route guidance service (if equipped)

Use a more convenient, accurate route guidance service through the Bluelink route guidance service.

Finding a route by manually entering a destination

You can use fast and accurate route guidance based on real-time and forecast traffic data collected by the Bluelink Center.

Using the Bluelink quick route guidance

You can use the quick navigation service based on real-time traffic information analyzed by the Bluelink Center.

1 Set the destination on the navigation system.

2 From the list of routes, select the Bluelink route. Quick route guidance starts by the Bluelink Center.



- The screen may differ depending on the vehicle model and specifications.
- ✓ You can use the Bluelink route to search for a different route while in route guidance.
- The road information by the Bluelink may differ from actual road conditions. Be sure to drive according to actual road conditions and regulations.
- The estimated time of arrival and remaining time to destination are calculated based on the traffic conditions. The calculated times may differ depending on the change in traffic conditions.
- Depending on the map update time, guidance on a new road may not match actual road conditions.

Guidance to destination service

If you park your vehicle at a distance of more than a specified value away from the destination, you can continue to use the route guidance to the destination from your smartphone.

Duties Upon Sale or Transfer of Vehicle

You must notify us if you plan to sell your vehicle, if your vehicle lease is ending (and you will not be purchasing the vehicle), your rental term is ending or if you are transferring the vehicle to another person for any other reason. You need to notify us so we can take steps to protect your account and your associated personal information. If you fail to notify us, you may be held responsible for any consequences resulting from our being unable to properly protect your account and associated personal information. To notify us, please call Hyundai Canada Customer Relations at 1-844-258-5656 or email us at cr@hyundaicanada.com.

If you sell or otherwise transfer your vehicle, you must cease using any Bluelink services associated with that vehicle, and uninstall the services from any devices in your control. If you fail to do so, you may be held responsible for any claims resulting from such failure brought against us by a subsequent owner, driver, occupant, lessor or lessee of the vehicle or any other third party.

If you have purchased, rented or started a lease of a vehicle with active Bluelink services and your personal information is not in the vehicle's Bluelink system and/or someone else's personal information remains in the Bluelink system, please contact us to prove your ownership, lease or rental (as applicable) in order to change the subscription to your name. Please provide us with your first and last name, postal code and have the vehicle registration available during the call.

Settings

Configuring the vehicle settings (if equipped)

You can configure the functions for driving and related environments.



/ Warning

Make sure you stop the vehicle before changing settings to ensure safety.

- Vehicle settings can be changed only when the vehicle is on.
- Available settings may differ depending on the vehicle model and specifications.
- Depending on the climate control system, some functions may not be supported.
- On the All Menus screen, press **Setup** ▶ **Vehicle**.

The vehicle settings screen appears.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black. ▶ See "Graphic Themes (if equipped)."

2 Configure the settings required:

Press Search for Settings or press and enter a keyword to search for a setting item. You can also search for a setting item by voice.

Driver Assistance (if equipped)

You can set to use various systems that assist the driver for safety.



- The screen may differ depending on the vehicle model and specifications. Refer to the car owner's manual for details of the function.
- assistance functions to image or list view. The functions are shown in image view by default.

/!\ Warning

- Be sure to always check the road conditions while driving. The Driver Assistance system helps you drive safely and conveniently. Relying solely on the function may cause violation of traffic rules and regulations, resulting in an accident.
- Be sure to control the vehicle by your judgment and keep traffic regulations for safety. When the function is active, drive the vehicle with keeping eyes forward and checking the surroundings.
- · Not all warnings or functions are necessary when they are active, and they do not replace the driver discretion under any circumstances. Stay focused on the road while driving.



Caution

Be sure to always check the vehicle surroundings while driving. The equipped cameras and sensors may not operate properly under all driving conditions.

SCC Reaction (if equipped)

Adjusts the responsiveness of Smart Cruise Control to the acceleration of a leading vehicle.

Driving Convenience (if equipped)

Sets the properties of Driving Convenience system.

- system so you must use the system only when the navigation system operates properly.
- Smart Cruise Control: Configure the smart cruise control linkage or style settings.
- Lane Following Assist: Automatically adjusts the steering wheel to keep the vehicle centered in the lane.

	۸	
/	ľ	\

Warning

Lane Following Assist is not a substitute for safe driving practices, but a convenience function. It is the responsibility of the driver to always be aware of the surroundings and steer the vehicle.



/ Caution

Be sure to always check the vehicle surroundings while driving, because Lane Following Assist may not work properly when the lane and road conditions are poor.

- · Highway Driving Assist: Assists driving in a highway according to the set speed and distance to the leading vehicle while keeping the vehicle centered in the lane.
 - The highway driving assist system operates only on a highway. When the vehicle exits from the highway, the system is turned off automatically.
- Highway Lane Change Assist: Automatically adjusts the vehicle speed on a highway based on navigation data.
- Highway Auto Speed Zone Slowdown: Automatically decelerates in a highway speed enforcement zone.
 - the vehicle exits from the highway, the system is turned off automatically.
 - It operates considering the speed cameras located on the selected route.
- Highway Auto Curve Slowdown: Automatically decelerates in a highway curve zone.
 - It operates based on the curve zones on the route. When the destination is not set, it operates based on the curve zones on the expected path.
- Highway Auto Speed Change: Automatically adjusts the vehicle speed on a highway based on navigation data.
- **Speed Limit Warning**: Displays the current speed limit of the road.

Speed Limit (if equipped)

Sets the properties of the Speed Limit system.

- **Select Country**: Select the country for the Speed Limit System.
- Speed Limit Offset: Adjusts the offset amount of the speed limit.
- Speed Limit Assist: Adjusts the vehicle set speed based on the current speed limit of the road.
- **Speed Limit Warning**: Provides a warning when the speed limit is exceeded.
- Off: Disables the Speed Limit functions.

Warning Timing (if equipped)

Sets the timing of the warning.

Warning Methods (if equipped)

Sets the volume and priority of the warning sound for driver assistance. You can configure the haptic warning settings if steering wheel vibration warning is supported.

- Warning Volume: Sets the volume of the warning sound.
- **Haptic Warning**: Sets the intensity of the steering wheel vibration warning.
- Lane Safety Audible Warning Off: Turns off the Lane Safety Audible Warning, even when both warning volume and haptic warning are on.
- **Driving Safety Priority**: When warning sound is generated while driving, the audio volume decreases to make the sound audible.
- Parking Safety Priority: When warning sound is generated while parking, the audio volume decreases to make the sound audible.

Driver Attention Warning (if equipped)

Sets the properties of the Driver Attention Warning system.

• Leading Vehicle Departure Alert: Alerts the driver during a stop, when the leading vehicle departs.



/!\ Warning

Be sure to always check the road conditions ahead or surroundings before departure. An accident caused by distracted driving can be prevented.

- Inattentive Driving Warning: Provides a warning when signs of driver inattentiveness are detected, and recommends a rest if needed.
- Safety Notice Call: When abnormal driving is detected, a Connected Services Center representative will call to check on your safety.

Forward Safety (if equipped)

Sets the properties of the Forward Safety system.

- · Auto OFF in N mode: Automatically disables Driving Safety systems when N mode is selected.
- Forward Cross-Traffic Safety: Provides a warning and emergency braking when a risk of forward cross-traffic collision is detected.
- Active Assist: Provides a warning and vehicle control when a risk of forward collision is detected.



/!\ Warning ____

This function is only a supplemental function and it is not intended to, nor does it replace the need for extreme care and attention of the driver. The sensing range and objects detectable by the sensors are limited. Pay attention to the road conditions at all times.

- Warning Only: Provides a warning when a risk of forward collision is detected.
- Off: Disables the Forward Safety functions.

Lane Safety (if equipped)

Sets the properties of the Lane Safety system.

• Assist: Automatically assists with steering to help prevent the vehicle from leaving the lane.



/!\ Warning

Lane Keeping Assist is a supplementary function for safe driving and does not replace driving. It is the responsibility of the driver to always be aware of the surroundings and steer the vehicle.

- When the lanes are not recognized well by front view camera, always check the surroundings because Lane Keeping Assist may not work properly.
- Warning Only: Provides a warning when the vehicle leaves the lane without operating the turn signal switch.
- Off: Disables the Lane Safety functions.

Blind-Spot Safety (if equipped)

Sets the properties of the Blind-Spot Safety system.

- Blind-Spot View Monitor: Displays the blind-spot view in the cluster when operating the turn signal switch.
- Safe Exit Assist: Provides a warning and door control when an approaching vehicle is detected in the vehicle's blind spot.
- Safe Exit Warning: Provides a warning when an approaching vehicle is detected in the vehicle's blind spot.



/!\ Warning

- Safe Exit Assist may not operate properly when a vehicle is coming rapidly two lanes over from your vehicle or a vehicle is approaching at a fast speed from the rear in the lane next to your vehicle.
- · Safe Exit Assist may not operate properly if there is any vehicle or obstacle at the rear area of your vehicle.
- Safe Exit Assist may be activated later than normal or may not operate properly if a vehicle is approaching fast from the rear of your vehicle.
- Safe Exit Assist may not operate when the Blind-Spot Safety system malfunctions as follows:
 - The warning message of the Blind-Spot Safety system appears on the instrument cluster.
 - The sensors of the Blind-Spot Safety system are contaminated or covered.
 - The Blind-Spot Safety system does not generate warning or generates a wrong alert.

• Active Assist: Provides a warning and vehicle control when a risk of blind-spot collision is detected.



/\ Warning

Always be aware of road conditions while driving and be alert for unexpected situations even though Blind-Spot Collision Warning and Blind-Spot Collision-Avoidance Assist are operating.

- Warning Only: Provides a warning when a risk of blind-spot collision is detected.
- Off: Disables Blind-Spot Safety function.

Driving Safety (if equipped)

Configure driving-related safety features.

- Forward Safety: Provides a warning and vehicle control when a risk of forward collision is detected.
- Forward Safety Warning Timing: Select when the forward safety system will activate a warning.
- Forward Cross-Traffic Safety: Provides a warning and emergency braking when a risk of forward cross-traffic collision is detected.
- Forward/Side Safety: Provides a warning and emergency steering when a risk of forward or side collision is detected.
- Lane Safety: Automatically assists with steering to help prevent the vehicle from leaving the lane.
- Blind-Spot Safety: Provides a warning when a risk of blind-spot collision is detected and provides an emergency braking while exiting.
- Blind-Spot View Monitor: Displays the blind-spot view on the cluster when the turn signal switch is turned on.
- Exit Safety: Provides a warning and door control when an approaching vehicle is detected in the vehicle's blind spot.

Parking Safety (if equipped)

Sets the properties of the Parking Safety systems.

- **Camera Settings**: Sets the properties of the cameras.
 - **Display Contents**: Specify information that will be displayed on the view screen. Setting items may differ depending on the vehicle model and camera type.
 - Display Settings: Adjust the brightness and contrast of the view screen. To initialize all Surround View or Rear View screen settings of the phone projection, press Reset.
- Surround View Monitor Auto On: Automatically activates Surround View Monitor when Parking Distance Warning is active.
- Parking Distance Warning Auto On: Automatically activates Parking Distance Warning when traveling at low speeds.
- Rear Safety: Provides a warning and emergency braking when a risk of rear collision is detected while reversing.
- Forward/Side Safety: Provides a warning and emergency steering when a risk of forward or side collision is detected.
- Rear Active Assist: Provides a warning and emergency braking when a risk of rear collision is detected while reversing.
- Rear Warning Only: Provides a warning when a risk of rear collision is detected while backing up.
- Off: Disables Parking Safety functions.
- Rear Cross-Traffic Safety: Provides a warning when a risk of rear cross-traffic collision is detected while reversing. It provides vehicle control to avoid collision, depending on the vehicle model and specifications.

/!\ Warning


- Even though the vehicle is equipped the Parking Safety system, be sure to check any obstacles in the surroundings while driving. Relying on the Parking Safety system may cause an accident. Accordingly, be sure to control the vehicle by your judgment.
- When the sensors cannot detect any obstacles due to the detection limit, it may cause an accident. Be sure to always check the surroundings while parking.

Drive Mode (if equipped)

You can change the vehicle settings for driving conditions.



Type1

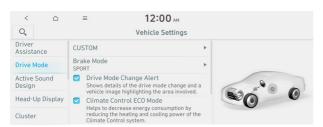

Type2

- The screen may differ depending on the vehicle model and specifications.

CUSTOM (if equipped)

You can set to select the drive mode optimized for the driving habits or road conditions.

- **Powertrain**: Select a drive mode that performs optimum engine and transmission control depending on the driving situation.
 - **SMART**: Adjusts automatically based on driving activity: ECO/COMFORT/SPORT.
 - **ECO**: Optimized for fuel-efficient driving.
 - **NORMAL**: Optimized for balanced comfort.
 - **SPORT**: Optimized for agile driving.
 - **SNOW**: Optimized for icy road conditions.
- Steering: Select a drive mode that performs optimum steering wheel control depending on the driving situation.
 - **NORMAL**: Optimized for smooth steering.
 - **SPORT**: Optimized for agile steering.

- **Suspension**: Select a drive mode that performs optimum suspension control to improve ride comfort depending on the driving situation.
 - **SMART**: Adjusts automatically based on driving activity: COMFORT+/COMFORT/SPORT.
 - NORMAL: Optimized for balanced comfort.
 - **SPORT**: Optimized for dynamic driving.
- AWD: Selects a four-wheel drive mode.
 - SMART: Optimized automatically based on driving habits.
 - **ECO**: Optimized for fuel-efficient driving.
 - **NORMAL**: Supports balanced comfort.
 - **SPORT**: Optimized for dynamic driving.

ECO (EV only)

This is a drive mode for increasing the vehicle's fuel efficiency. You can change the climate control mode, the active coast energy regeneration level, and speed limit settings.

NORMAL (EV only)

This is a drive mode focused on the driver and passenger's comfort. You can change the climate control mode and the active coast energy regeneration level.

SPORT (EV only)

This drive mode enables a more dynamic driving performance. You can change the climate control mode and the active coast energy regeneration level.

Brake Mode (if equipped)

You can set brake pedal feel depending on your driving habits.

Drive Mode Change Alert (if equipped)

Configure the setting so that drive mode change notification is displayed along with the vehicle image when the drive mode is changed.

Tow Mode (if equipped)

Set the trailer weight to refer to when entering tow mode.

Trailer Mode (if equipped)

Configure settings so that driving performance is maintained and the drivable range is estimated when a trailer is connected.

Climate Control ECO Mode (if equipped)

Decrease the cooling/heating level to increase the drivable range.

Reset ECO/NORMAL/SPORT (if equipped)

You can reset the drive mode settings to the default values.

- ∠ The display may differ depending on the vehicle model and specifications.
- See how to improve ECO potential by pressing the Help button from an EV (Electric Vehicle). In most cases, a vehicle can travel a longer distance when its ECO potential score is higher (EV only).

ECO Vehicle (if equipped)

You can set the convenience features available for ECO vehicles.



The screen may differ depending on the vehicle model and specifications.

Coasting Guide (if equipped)

You can set the system to notify when to release the accelerator pedal to improve fuel efficiency.

Start Coasting (if equipped)

You can set when to receive the accelerator release notification.

Smart Regeneration (if equipped)

Set to activate regenerative braking automatically based on the vehicle state or driving conditions.

Smart Regeneration System (if equipped)

Adjusts the deceleration strength during Smart Regeneration System.

Charging Connector Locking Mode (if equipped)

Configure the lock mode setting for the connected charging cable.

Green Zone Drive Mode (if equipped)


When you are driving in an area that needs to improve air quality, set to drive in EV mode as much as possible.

Trailer Mode (if equipped)

Configure settings so that driving performance is maintained and the drivable range is estimated when a trailer is connected.

Active Sound Design (if equipped)

Turn on or off the engine sound function which generates a virtual engine sound.

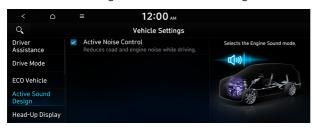

The screen may differ depending on the vehicle model and specifications.

Active Noise Control (if equipped)

Reduces noise when driving.

Head-Up Display (if equipped)

You can set to use the head-up display that displays information such as driving speed and road-related information while driving.



∠ The screen may differ depending on the vehicle model and specifications.

Enable Head-Up Display (if equipped)

Can determine whether or not to use the head-up display.

Display Mode (if equipped)

Enable/disable the head-up display, and configure the display mode settings.

Display Control (if equipped)

Adjust the height, rotation, and brightness of the head-up display.

AR Matching Adjustment (if equipped)

Adjust settings so that vehicle position on road matches information shown on the head-up display.

Content Selection (if equipped)

Select the items to display on the head-up display.

Speedometer (if equipped)

Can set the driving speed items and colors to display on the head-up display.

Cluster (if equipped)

You can set the data to display on the instrument cluster and the volume and type for guiding beep.



 ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Illumination (if equipped)

You can set the instrument cluster display brightness.

Cluster Theme Selection (if equipped)

Select and apply a theme to the cluster.

Fuel Economy Reset or Energy Consumption Reset (if equipped)

You can set to automatically initialize the average fuel economy.

- After Vehicle On: The average fuel economy is automatically initialize whenever you
 drive the vehicle.
- After refueling: The average fuel economy is automatically initialize whenever you refuel
 the vehicle.
- **After recharging**: The average energy is automatically initialize whenever you charge the vehicle (EV only).
- Off: The average fuel economy initialize is unavailable.
- The displayed name may differ depending on the vehicle model and specifications.

Reset Fuel Economy or Reset Avg. Energy Consumption (if equipped)

Select which average fuel economy to display on the cluster.

- At vehicle start: Displays the fuel economy after engine
- After refueling: Displays the fuel economy after refueling.
- After recharging: Displays the energy after recharging (EV only).
- Manually: Displays the accumulated fuel economy.
- The displayed name may differ depending on the vehicle model and specifications.

Content Selection (if equipped)

You can set the content to display on the instrument cluster.

- **Gear Position Pop-up**: When the gear is shifted, the information pop-up appears.
- Wiper/Lights Display: When the wiper or light lever operates, the operation mode appears.
- Traffic Signs: Displays the road information such as speed bumps and speed limits.
- Blind-Spot View Monitor: Displays the blind spot view on the instrument cluster when the turn signal lamp is blinking.
- **Icy Road Warning**: When the outside temperature drops below 4 °C (39 °F), the possibility of road icing appears.

Cluster Voice Guidance Volume (if equipped)

You can adjust the voice guidance volume of the cluster.

Welcome Sound (if equipped)


You can set to generate the notification sound when turning on or off the instrument cluster.

Speedometer Subscale (if equipped)

You can set to display the speedometer subscale on the instrument cluster.

Climate (if equipped)

You can configure the operation environment for climate control system.

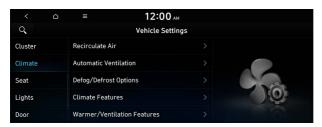

The screen may differ depending on the vehicle model and specifications.

Recirculate Air (if equipped)

You can set to keep the inside air pleasant by blocking inflow of outside air.

- Activate upon Washer Fluid Use: Sets to automatically switch to the inside air circulation mode to prevent inflow of washer fluid scent when spraying washer fluid.
- Activate Based on External Dust: Sets to automatically switch to the air purification mode to keep inside air pleasant when the fine dust index is high.
- **Recirculation Mode Plus:** Sets automatically control windows or climate system to keep inside air pleasant with synced with the navigation system.
- Activate upon Entering Tunnels: Automatically prevents entry of outside air when entering a tunnel.

Automatic Ventilation (if equipped)

You can set to prevent condensation inside and keep inside air pleasant using this feature.

- Automatic Dehumidify: Once the inside air circulation mode has been used for a long time, it is switched to the outside air inflow mode to prevent condensation.
- Smart Ventilation: Sets to automatically switch to the outside air inflow mode to maintain a pleasant indoor environment when the humidity increases in the vehicle with the climate system off.
- Carbon Dioxide Auto Vent: Sets to automatically switch to the outside air inflow mode to maintain a pleasant indoor environment when the CO₂ concentration increases in the vehicle with the climate system off.
- Scheduled Ventilation: Automatically ventilates the cabin at the scheduled time. Ventilation occurs while the vehicle is off.

Defog/Defrost Options (if equipped)

You can set to enable the defogger to secure driver visibility.

- Defog/Defrost: When the sensor detects humidity on the windshield and glasses, it
 enables the outside air inflow mode and air conditioner for defogging and defrosting.
- Auto Defog: When the sensor detects fog on the windshield, the automatic ventilation is run for defogging.

Climate Features (if equipped)

You can set or change the settings for the climate system.

- A/C Automatic Drying: You can set the climate control system to dry the air conditioner by running when the engine is stopped.
- Lock Rear Climate Controls: Prevents changes to the climate control system from rear seats.
- Climate Control ECO Mode: Decrease the cooling/heating level to increase the drivable range.
- **Rear Climate Controls**: Used to move to the climate control screen for the rear seat. You can check or set the climate status for the rear seat (if equipped).
- ✓ For more information about controlling the rear-seat climate control system:
 ▶ see "Using the rear-seat climate control function (if equipped)."

Warmer/Ventilation Features (if equipped)

You can set to make the driving environment pleasant by controlling the steering wheel warmer and driver's seat warmer/ventilation.

- Link to Climate Settings for Auto-Adjustment: Automatically controls the heating wire
 or ventilation for the driver's seat and steering wheel, in sync with the climate control
 function.
 - Steering Wheel Warmer: Steering Wheel Warmer adjusts automatically based on Climate settings.
 - Driver Seat Warmer/Ventilation: Seat Warmer/Ventilation adjusts automatically based on Climate settings.

Seat (if equipped)

You can set to use various features (motions and warmer control for the driver's seat, rear seat, and steering wheel) that are related to the seats and steering wheel.



Seat Position Change Alert (if equipped)

You can set the system to display a notification message along with the seat image on the screen when a seat position is changed.

3rd Row Seat Back Folding (if equipped)

You can fold or unfold the left or right seat back of the 3rd row seat.

- Fold: Can fold the 3rd row rear seat backs.
- **Unfold**: Can unfold the 3rd row rear seat backs.

Smart Posture Care (if equipped)

You can see the recommended driving posture according to your physical data, and the clinical inspection result for your waist.

Warmer/Ventilation Features (if equipped)

You can set to make the driving environment pleasant by controlling the steering wheel warmer and driver's seat warmer/ventilation.

- Link to Climate Settings for Auto-Adjustment: Automatically controls the heating wire
 or ventilation for the driver's seat and steering wheel, in sync with the climate control
 function.
 - **Steering Wheel Warmer**: Steering Wheel Warmer adjusts automatically based on Climate settings.
 - Driver Seat Warmer/Ventilation: Seat Warmer/Ventilation adjusts automatically based on Climate settings.

Seating Easy Access (if equipped)

For convenience upon getting on and off, you can adjust the position of the driver's seat or steering wheel to secure space inside the vehicle.

- Seat Slide Easy Access: Can set the distance to automatically move the driver's seat when getting on or off.
- Seat Height Easy Access: Can set to automatically move the driver's seat when getting
 on or off.
- Steering Easy Access: The steering wheel moves upward when getting on and off.

Smart Support (if equipped)

Configure the setting so that this feature works when the sport mode or the highway driving assist feature is turned on.

Ergo-Motion Seat (if equipped)

Reduces occupant fatigue and improves ride comfort and safety while driving by ergonomically using seat movements.

Rear Seat Heating Control (if equipped)

You can set to enable the warmer for the rear-left and rear-right seats.

Lumbar Stabilization System while driving (if equipped)

Adjust the seat position to protect your back and ease your back pain while driving.

Lights (if equipped)

You can configure the settings for vehicle lights.



Ambient Light (if equipped)

You can set the brightness and color of the ambient light.

- \mathbb{Z} To turn off the interior mood lamp, adjust the brightness to 0.
- **Dimmed in Dark**: This mode automatically decreases the interior mood lamp brightness when the gear is shifted to a position other than "P" (park) at night.

One Touch Turn Signal (if equipped)

You can set the number of turn signal lamp flashes when the lamp lever is operated.

Welcome Mirror/Light (if equipped)

You can set the welcoming time on the outside rear view mirrors.

- Enable on Door Unlock: The welcome feature is enabled by the door unlock event.
- Enable on Driver Approach: When the driver with the smart key approaches, the welcome feature is enabled.

Headlight Delay (if equipped)

You can set to turn off the taillights and headlights in 15 seconds after turning off the vehicle to ensure visibility.

Travel Mode (if equipped)

In countries in which the driving direction is the opposite, you can set to decrease the headlamp lighting range for reducing glare of the driver in the opposite lane.

High Beam Assist (if equipped)

You can set to automatically control the high beam when an oncoming vehicle is approaching to decrease the high beam glare.

Intelligent High Beams (if equipped)

You can set the vehicle speed at which the intelligent headlamps operate.

Door (if equipped)

You can configure the operation environment for the trunk (liftgate) and doors.



The screen may differ depending on the vehicle model and specifications.

Auto Lock (if equipped)

You can set the time to automatically lock all doors.

Auto Unlock (if equipped)

You can set the time to automatically unlock all doors.

Horn Feedback (if equipped)

You can set to generate guiding beep when all doors are locked.

2 Press Unlock (if equipped)

You can set to unlock all doors by pressing the door unlock button twice.

When you press the door unlock button once, only the driver's seat door is unlocked.

Power Trunk or Power Liftgate (if equipped)

The Power trunk (liftgate) button can be used to automatically open/close the trunk (liftgate).

The displayed name may differ depending on the vehicle model and specifications.

Power Trunk Opening Speed or Power Liftgate Opening Speed (if equipped)

Selects the speed the power trunk (liftgate) automatically moves.

Power Trunk Opening Height or Power Liftgate Opening Height (if equipped)

Set the opening height for the power trunk (liftgate).

The displayed name may differ depending on the vehicle model and specifications.

Smart Trunk or Smart Liftgate (if equipped)

Opens the trunk (liftgate) automatically when approaching the trunk (liftgate) with the smart key.

Remote Window Control (if equipped)

Turns on the remote window control function.

Digital Key (if equipped)

You can register or delete a digital key and then see the information of the registered digital key.



Enable Digital Keys (if equipped)

You can set whether or not to use the digital keys.

Smartphone Key (if equipped)

You can register or delete a smartphone key.

Card Key (if equipped)

You can register or delete a card key.

Digital Key Information (if equipped)

You can see the serial number of the registered digital key.

Convenience (if equipped)

You can configure the features for convenience such as welcome sound and wireless charging.



 ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Rear Occupant Alert (if equipped)

Movement is detected by the rear-seat sensor after the doors are locked.

Service Interval (if equipped)

You can set to guide you when to perform the vehicle inspection.

- Enable Service Interval: Sets the service inspection interval. When it exceeds, the notification is provided.
- **Distance**: Sets the driving distance for a service.
- **Duration**: Sets the service cycle.
- **Reset**: Initializes the settings for distance and duration.

Oil Change Reminder (if equipped)

Shows the residual life of the engine oil.

Advanced Anti-Theft (if equipped)

You can set to display an alert when any motion is detected inside the vehicle with the vehicle locked.

Wireless Charging System for Mobile Devices (if equipped)

You can set to charge your smartphone wirelessly.

Active Sound Design (if equipped)

You can turn on or off the engine sound feature that generates engine sound.

Auto Rear Wiper (in R) (if equipped)

Activates the rear windshield wiper automatically when the front wiper is On and the gear is in reverse.

Digital Side Mirrors (if equipped)

Configure the digital side mirror view settings.

Vehicle Auto-Shut Off (if equipped)

You can set to turn off the engine automatically when the vehicle is left idle in park mode for a set period.

Cabin Ventilation Alert (if equipped)

You can configure notification settings for checking interior temperature and ventilation status when in your vehicle for more than 1 hour after stopping.

Passenger Air Bag (if equipped)

Enable the passenger seat airbag function.

Trailer Mode (if equipped)

Configure settings so that driving performance is maintained and the drivable range is estimated when a trailer is connected.

Configuring the EV settings (if equipped)

You can set convenience features available for electric vehicles.

1 On the All Menus screen, press **Setup** ► **EV**.

The EV settings screen appears.




2 Configure the settings required:

Press
 ■ Search for Settings or press
 and enter a keyword to search for a setting item. You can also search for a setting item by voice.

Max. % Charge


You can set the battery amount to charge.

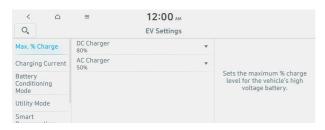

- AC charging ensures the optimal battery performance for a long time compared to DC charging.
- When the battery amount reaches the target level, charging stops. When you charge only the required battery amount, it can ensure the optimal battery performance for a long time, compared to full battery charging.

Charging Current


You can set the charging current depending on the installed charger type.

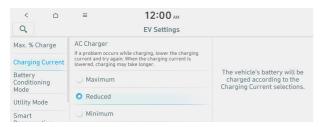

- The charging time may vary depending on charging conditions.
- If a problem occurs during charging, lower the charging current and try again. If you lower the charging current, it may take longer to charge the battery.

Winter Mode (if equipped)

Can increase the battery temperature in advance to enhance the charging and driving performance when scheduling charge or climate controls in winter. This decreases the drivable distance because it causes to drain the battery faster.

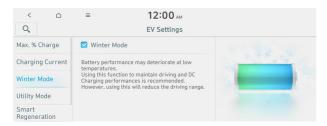

Available settings may differ depending on the vehicle model and specifications.

Battery Conditioning Mode (if equipped)


Use during the winter (low temperatures) to maintain driving performance and shorten DC charging time. However, using the feature and setting a DC charging station as a destination will reduce the driving range due to the vehicle preparing for DC battery charging conditions.



Available settings may differ depending on the vehicle model and specifications.

Utility Mode

Turns on utility mode. When this function is on, electric systems on the vehicle are operated using the driving (high-voltage) battery.

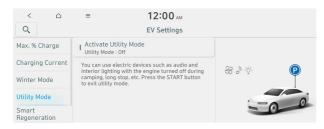

∠ To turn off utility mode, press the Start button.


Smart Regeneration (if equipped)

Set to activate regenerative braking automatically based on the vehicle state or driving conditions.



Charging Connector Locking Mode (if equipped)

Configure the lock mode setting for the connected charging cable.

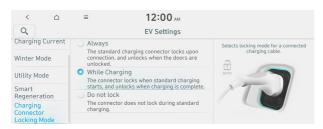

Charging Voice Prompts (if equipped)

Provides audible information about the charging status when the vehicle starts charging.

To turn off the Charging Voice Prompts, press Off.



Configuring the device connections settings

You can manage Bluetooth devices or configure their operation settings. You can also activate the phone projection so that you can control the smartphone Apps on the system screen after connecting the smartphone to the system.

1 On the All Menus screen, press **Setup** ▶ **Device Connections**.

The device connection settings screen appears.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- ✓ If the vehicle is type 2, it is possible to change the graphic theme to white or black.▶ See "Graphic Themes (if equipped)."
- 2 Configure the settings required:

Device Connections

You can register or delete a Bluetooth device from the system and connect or disconnect a registered device.



- You can add one Bluetooth hands-free kit or up to two Bluetooth audio devices.

Message Notification

Set to receive message notifications.



This option may not be available in some phone models.

Predefined Messages

Edit message templates for quick replies.



This option may not be available in some phone models.

Bluetooth Voice Prompts

Set whether to hear voice prompts for events related to Bluetooth connections.



Privacy Mode

Enable or disable Privacy Mode. Hide data including contacts and call history from showing up on the system screen to protect privacy.



Bluetooth System Info

You can see and edit the Bluetooth information of the system.



Phone Projection Settings

You can activate the phone projection connection function to pair your smartphone with the system.



Android Auto

You can activate the Android Auto function to pair your Android smartphone with the system.

Apple CarPlay

You can activate the Apple CarPlay function to pair your iPhone with the system.

Bluetooth (if equipped)

You can register or delete a Bluetooth device for the system and connect or disconnect a registered device. You can also configure operation settings such as notifications, messages, and other settings for Bluetooth devices.



- Some setting options appear when a smartphone is connected to the system.
- ∠ To edit or delete a message, park the vehicle at a safe place and access the messaging function on your smartphone. You cannot edit or delete a message from the system.
- When an iPhone is connected to the system, there are some restrictions when receiving messages as follows:
 - Only the sender name appears when the sender information is saved.
 - Only the phone number appears when the sender information is not saved.
 - You cannot use the auto-reply message function.
 - When the incoming message notification or lock-screen view option is off, messages cannot be received.

Bluetooth Connections

You can register or delete a Bluetooth device from the system and connect or disconnect a registered device.

Auto Connection Priority

Set the priority order for automatic Bluetooth connection to the system when it turns on.

On the device list, press on the right and drag the item to reposition.

Message Notification

Set to receive message notifications.

This option may not be available in some phone models.

Predefined Messages

Edit message templates for quick replies.

This option may not be available in some phone models.

Bluetooth Voice Prompts

Set whether to hear voice prompts for events related to Bluetooth connections.

Privacy Mode

Enable or disable Privacy Mode. Hide data including contacts and call history from showing up on the system screen to protect privacy.

Bluetooth System Info

You can see and edit the Bluetooth information of the system.

Configuring the button settings


You can configure features to activate when pressing buttons on the control panel or steering wheel.

1 On the All Menus screen, press Setup ➤ Button.

The button settings screen appears.



Type1

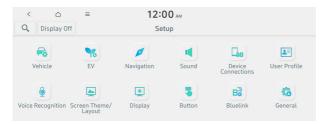


Type2

- The screen may differ depending on the vehicle model and specifications.
- ✓ If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 ▶ See "Graphic Themes (if equipped)."
- 2 Configure the settings required:

Left N Button (Steering Wheel) (if equipped)


Specify the functions that can be activated by pressing the N button on the steering wheel. Set the frequently used functions as N button functions to access them easily.

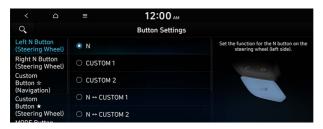

The screen may differ depending on the vehicle model and specifications.

Right N Button (Steering Wheel) (if equipped)


Specify the functions that can be activated by pressing the N button on the steering wheel. Set the frequently used functions as N button functions to access them easily.

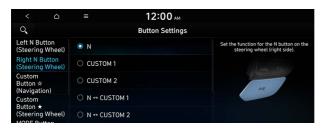

The screen may differ depending on the vehicle model and specifications.

Custom Button ☆ (Navigation) (if equipped)

You can set the frequently used functions by pressing the custom button on the control panel. Set the frequently used functions as custom buttons to access them easily.

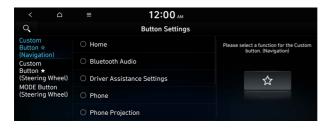

The screen may differ depending on the vehicle model and specifications.

Custom Button ★ (Steering Wheel) (if equipped)

Specify the functions that can be activated by pressing the user button on the steering wheel. Set the frequently used functions as custom buttons to access them easily.



MODE Button (Steering Wheel)

You can select the media mode to run when the [MODE] button on the steering wheel is pressed.



The screen may differ depending on the vehicle model and specifications.

$[\wedge]/[\vee]$ Buttons (Steering Wheel) (if equipped)

You can select the function to run when a specific button on the steering wheel is pressed while listening to the radio.



VOL/TUNE Knob (if equipped)

You can switch the functions of the Volume and Tune knobs.



Option A



Option B

The screen may differ depending on the vehicle model and specifications.

Configuring the sound settings

You can change the sound settings such as speaker volume and sound effects.

- Some functions may not be available depending on the infotainment system and amplifier specifications on the vehicle.
- 1 On the All Menus screen, press **Setup** ► **Sound**.

The sound settings screen appears.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 See "Graphic Themes (if equipped)."
- 2 Configure the settings required:
- Press Search for Settings or press and enter a keyword to search for a setting item. You can also search for a setting item by voice.

Premium Sound (if equipped)

You can change the system sound settings and apply various sound effects.

Available sound effects may differ depending on the specifications of the amplifier.



Speed Dependent Volume Control


Automatically adjusts Audio volume according to vehicle speed.

Start-up Volume Limit

You can set to automatically decrease the audio volume to an adequate level when turning on the vehicle.

Adjusting the sound effect (if equipped)

Press the sound effect button on the radio/media screen to adjust.

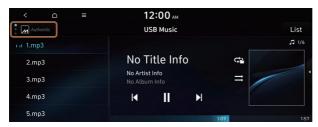

- Phone projection is linked with the BT sound effect settings.

Centerpoint (if equipped)

BOSE's surround technology that upmixes stereo sources to deliver a vivid, immersive listening experience. Centerpoint delivers a more immersive soundstage as if you were in the center of the stage from every seat by properly positioning each instrument inside the vehicle with precise sound movement.



Centerpoint

Meridian Horizon (if equipped)

It is a technology that converts a stereo source and provides a sense of presence and immersive so that make you feel a part of the performance. It provides three sound effects modes by reconstructing characteristics through each extracted source.

- Authentic: A sound stage unfolds in front of the vehicle with a clear vocal image.
- Surround: Delivers immersive sound that fills the entire vehicle space.
- **Custom**: Customizes the position of the vocal image and the level of immersion.



Stage



Surround



Custom

QuantumLogic Surround (if equipped)

Delivers various sound effects by classifying the location of each instrument in the recorded sound source.

- **Reference**: Delivers true sound focusing on original sound source.
- **Audience**: Delivers an intimate concert experience where the boundaries of the vehicle seemingly disappear which feels like you are in the audience at a concert.
- On stage: Delivers a surround-sound experience that puts listeners onstage with their favorite artists, placing individual instruments and musical elements throughout the cabin.
- ∠ Vehicles with QuantumLogic Surround level 2 only provide ON/OFF function.







Reference

Audience

On stage

Live Dynamic (if equipped)

By reconstructing the dynamic information of compressed digital audio, it provides various sound effects. It provides three sound effects modes by reconstructing the separated sound signal according to the amount of dynamic change.

- **Reference**: Delivers true sound focusing on original sound source.
- Natural: Delivers natural sound through stereo reconstruction of separated sound signal.
- Concert: Delivers a sense of space like a concert scene through multi-channel reconstruction.
- ∠ Vehicles with Live Dynamic level 2 only provide ON/OFF function.

Position

You can select a position where sound is more audible in the vehicle. By pressing the desired point on the seat image or pressing the arrow buttons, you can finely adjust the position. To concentrate the sound to the center of the vehicle, press .



Tone

You can adjust the sound by adjusting the strengths (output levels) for each audio band: Bass, Midrange, and Treble.



Guidance

Specify the system's guidance voice type, set a certain sound to override other sounds, and configure other guidance sound settings.



The screen may differ depending on the vehicle model and specifications.

Guidance Volumes

You can adjust the volume levels for individual system features or initialize all volume settings.

To initialize all system sound settings, press Reset.

Charging Voice Prompts (if equipped)

Provides audible information about the charging status when the vehicle starts charging.

Navigation Voice Guidance (if equipped)

You can configure the navigation voice guidance feature.

• End Navigation Voice Guidance Near Destination: If the set destination is a saved location, voice guidance is turned off when the vehicle gets closer to the destination.

Navigation Alert (if equipped)

You can set to activate drive assist features when needed for safety.

Camera Alert Distance: You can set when to receive alerts against and voice descriptions
about traffic enforcement cameras.

Navigation Guidance During Calls

Even during a call, the navigation sound is heard.

Navigation Volume Priority

You can set to enable the navigation sound to be heard first when using both the navigation system and Radio/Media system.

Mute Navigation Guidance

Press the Mute button on the steering wheel when the navigation guidance is being output to set to mute the guidance volume for 10 seconds.

Active Sound (if equipped)

You can turn on the engine sound effect function which plays engine sound.



Active Sound Design

Adjust the interior engine sound volume.

Virtual Engine Sound System

Turn on or off the engine sound function which generates a virtual engine sound.

Radio Noise

You can customize sound quality when listening to FM radio by adjusting background noise of the original sound.



Driver Assistance (if equipped)

You can set to give priority to the proximity warning feature and lower all other sounds when parking your vehicle.



The screen may differ depending on the vehicle model and specifications.

Warning Volume (if equipped)

Sets the volume of the warning sound.

Haptic Warning (if equipped)

Sets the intensity of the steering wheel vibration warning.

Lane Safety Audible Warning Off (if equipped)

Turns off the Lane Safety Audible Warning, even when both warning volume and haptic warning are on.

Driving Safety Priority (if equipped)

When warning sound is generated while driving, the audio volume decreases to make the sound audible.

Parking Safety Priority

When warning sound is generated while parking, the audio volume decreases to make the sound audible.

High (if equipped)

Sets the warning volume to High.

Medium (if equipped)

Sets the warning volume to Medium.

Low (if equipped)

Sets the warning volume to Low.

Off (if equipped)

Turns off the warning sound.

Connected Devices (if equipped)

You can adjust the volume of the phone projection and initialize all volume settings.



Android Auto

Vary the volume of your Android smartphone, connected to the system, depending on the function.

To initialize all system sound settings of the phone projection, press Reset.

Apple CarPlay

Vary the volume of your iPhone, connected to the system, depending on the function.

To initialize all system sound settings of the phone projection, press Reset.

Turning on/off the screen touch sound

To turn on or off the touch sound on the screen, press **Beep** at the top of the screen.

Configuring the voice recognition settings

You can change the settings for voice recognition.

1 On the All Menus screen, press **Setup** ▶ **Voice Recognition**.

The voice recognition settings screen appears.



Type1



Type2

- If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 See "Graphic Themes (if equipped)."
- 2 Configure the settings required:

Audible Prompts

You can set whether to hear the voice recognition guidance briefly or in detail. You can also turn off the voice guidance.



The displayed screen or name may differ depending on the vehicle model and specifications.

Configuring the navigation settings

You can configure the navigation settings for navigation operations, screen display, voice guidance, etc. You can also export or import the location data.

- 1 On the All Menus screen, press **Setup ► Navigation**.

The navigation settings screen appears.



Type1



Type2

- 2 Configure the settings required:

Display

You can specify the information to display on the navigation map screen.



Vehicle Speed

Displays the vehicle speed on the map.

Display Traffic Info

Displays nearby traffic information on the map.

Show Traffic Colors

Used to display the route guide line colors depending on the traffic conditions.

Nearby POIs

You can specify the icon type to display nearby places on the map.

- Press on the right side of Gas Station to select display options for fuel prices.
 - Gas Station on the Map screen will also show their fuel prices if they are lower than the set price.
 - Select Show Fuel Price Information on the Map to view recommended fuel prices based on the prices offered in the area.
 - Fuel prices on the map may differ from actual ones.

Fuel Price Info (if equipped)

When displaying gas stations on the map, the fuel prices below a specific range can be displayed.

- Select Show Fuel Price Information on the Map to view recommended fuel prices based on the prices offered in the area.
- Fuel prices on the map may differ from actual ones.

Guidance

You can configure the navigation guidance settings.



Route Options or Route Avoid Options

You can set desired route search options.

Set Type of Guide Distance

You can configure settings for displaying the distance to the destination during guidance.

- Interval Distance: Displays the distance as the one between different zones.
- **Cumulative Distance**: Displays the distance as the one between the current position and target position.

Navigation Voice Guidance

You can configure the navigation voice guidance feature.

• End Navigation Voice Guidance Near Destination: If the set destination is a saved location, voice guidance is turned off when the vehicle gets closer to the destination.

Detailed Guidance

You can specify the information to display on the navigation map screen while driving.

- **Detailed Guidance View**: You can set to display detailed information on the Map screen, such as moving directions and lane change.
- Units: You can set the distance unit of the navigation map to km or mi (if equipped).

Border Crossing Information

You can set whether or not to display the border crossing information on the screen.

- Border Crossing Information: Configure settings for notification when entering a country's border.
- Country Information: View country information of the current location.

Guide Second Best Route (if equipped)

Select whether to provide additional routes by comparing with the current route.

Show Route Overview While Stopped

You can set to display the route overview from the start point to the destination when the vehicle is stationary.


Previous Destinations Settings

You can set to automatically save the previous destination and display the previous destinations when the navigation system starts.

- Save Previous Destinations: The previous destination is automatically saved.
- Show Previous Destinations after Navigation Start-up: When the navigation system starts, the list of recent destinations appear on a pop-up window.

Alerts (if equipped)

You can set to activate drive assist features when needed for safety.

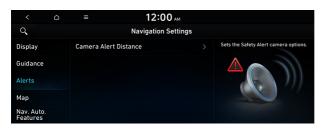

The screen may differ depending on the vehicle model and specifications.



Be sure to check the road conditions while driving, because the camera information may get changed occasionally after a map update to the latest version. Relying solely on the driving assist system may cause violation of traffic rules and regulations, resulting in an accident.

Camera Alert Distance

You can set when to receive alerts against and voice descriptions about traffic enforcement cameras.

 Camera Alert Distance Depending on the Speed Limit: The time when to get alerts for traffic enforcement cameras is automatically set depending on the driving speed. When the Camera Alert Distance Depending on the Speed Limit function is off, the time when to get guidance on traffic enforcement cameras on Local Roads and Freeway can be selected.

Map (if equipped)

You can specify the items to display on the map.



The screen may differ depending on the vehicle model and specifications.

Map Mode

You can specify the items to display on the map.

- Map View: Set the navigation map display mode. To fix the top of the map screen
 to north, select North Up 2D. To automatically rotate the map screen based on the
 driving direction, select Heading Up 2D. If you select Heading Up 3D, the map screen is
 displayed in 3D mode and automatically rotates based on the driving direction.
- 3D Buildings: Displays major buildings on the map in three dimensions.
- Auto-scale: Automatically changes the scale of the map.

Map Font Size

You can set the size of the screen font on the navigation map.

Daytime Map Color (if equipped)

You can set the navigation map theme color.

Vehicle Symbol Color

You can specify the icon type to display your current location on the map.

Set Map Auto-scale

You can set the scale, which is automatically adjusted based on the vehicle speed.

Nav. Auto. Features

You can configure navigation options, e.g., exporting or importing places from and to Saved Places.



Auto Re-center Map

You can set the system to automatically display the current position when the specified period of time elapses after changing to another position on the map.

Return to Map: Timing

You can set the system to automatically display the map screen after a specified period of time when switched to the Radio/Media mode screen while using the navigation.

- This feature works while driving once a destination has been set.

User Data (if equipped)

You can import location data from a USB device to the system, or export the data on the system to a USB device.

- When importing or exporting the location data, you can uses only the USB device formatted in exFAT, FAT16/32, or NTFS.
- Import Favorites/Previous Destinations from USB: You can import saved location and destination information, saved on your USB storage device, to the system.
 - Previous information saved on the system will be deleted.
 - If location information is imported from a different navigation device or system, the locations may appear differently because the device/system uses a different coordinate system.
- **Export Favorites/Previous Destinations to USB**: You can export saved location and destination information, saved on the system, to your USB storage device.
 - Previous information saved on the USB storage device will be deleted.

GPS Information

You can see the GPS satellite status and coordinates of the current position.



The following information appears:

- Can see the reception status of the satellite signals.
 - Receiving: Satellite signals are being received and the current position is recognized.
 - **Searching**: The system is scanning the satellite signals.
- Can see the current location.

Configuring the Bluelink settings (if equipped)

You can subscribe to the Bluelink service or see the modem information.

1 On the All Menus screen, press **Setup** ► **Bluelink**.

The Bluelink settings screen appears.



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- ✓ If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 ▶ See "Graphic Themes (if equipped)."
- 2 Configure the settings required:


Activate Service

You can subscribe to the Bluelink service by using the Bluelink settings menu.




Modem Information

You can check the modem information for use of the Bluelink service.

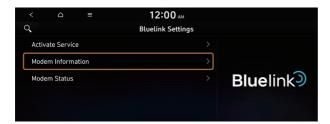

Modem Status

You can check the modem status for use of the Bluelink service.

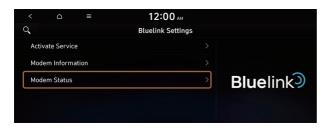


Configuring the user profile settings

You can additionally set profiles for each driver after First Run Setup.

1 On the All Menus screen, press **Setup** ▶ **User Profile**.



Type1

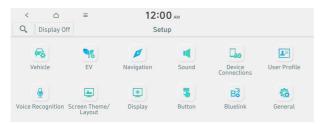

Type2


- The screen may differ depending on the vehicle model and specifications.
- If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 See "Graphic Themes (if equipped)."
- 2 Press the user to change its profile.

The User Profile Settings screen appears.

- Press Change User to switch to another user's profile.
- When you log in as guest, you cannot set the profile items additionally. To set a different profile, select another user.

Profile Settings

You can specify the details and operation environment for a registered user.

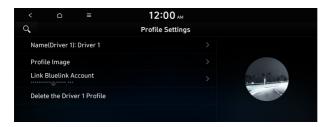

Name

You can specify the name of the user to display on the profile.

Profile Image

You can specify the image to display on the user profile.

Link Bluelink Account

You can use various services and convenient management features when linked to the registered Bluelink service.

Delete Profile (if equipped)

All stored data and profile settings will be lost and the system will be reset.

Configuring the general system settings


You can configure general settings for date, time, language, and the like. You can also check information of the system.

1 On the All Menus screen, press **Setup** ▶ **General**.

The general settings screen appears.



Type1

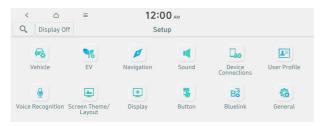

Type2

- The screen may differ depending on the vehicle model and specifications.
- ✓ If the vehicle is type 2, it is possible to change the graphic theme to white or black.
 ▶ See "Graphic Themes (if equipped)."
- 2 Configure the settings required:

SW Info/Update

You can see the versions of system components. You can also update the system to the latest version.



- For details on how to update the system software via a wireless connection, refer to the following: ▶ see "Wireless update (if equipped)."

System Info

You can check the system storage space. You can also use your smartphone to access the online user's manual of the system.



Storage

You can check the storage space of the system memory where voice memos can be saved.

User's Manual on Web (QR Code)

You can access the online user's manual of the system by scanning the QR code with your smartphone.

What's New (if equipped)

You can see the latest system update information.

After update is completed, the system will display the main update items on the screen. Scan the QR code to view the update announcement.

Modem Information (if equipped)

You can check the modem information for use of the Bluelink service.

Date & Time

You can set the system date and time automatically or manually. You can also set the time display mode.



Set the Time Automatically

Based on the current position, it sets the system date and time automatically.

To manually set the date and time, uncheck **Set the Time Automatically**, press the current date and time below **Set the Time Automatically**, and then set the date and time

Time Format

Change the system time display format.

Daylight Saving Time

Displays the system time in the format of Daylight Saving Time.

Language

You can set the system display language.



- Once the language has been changed, it takes a while to apply the new language to the system. The notification pop-up window appears as soon as the new language is applied to the system. When you wait a while or press anywhere outside the pop-up window, the window automatically disappears.
- When you change the system language, it does not affect the display of other unique data such as MP3 music file name.
- Depending on the system language, the Bluetooth phone message view and voice recognition may not be supported.

Keyboard

You can change the keyboard type for each language to use when entering the text.



English-Latin Keyboard Type

You can select the keyboard type to use when entering the English text.

Default Keyboard

You can select the default keyboard type.

Units (if equipped)

You can specify the units to display on the system screen.



Distance, Speed Unit

You can select the units for distance and vehicle speed to display on the screen.

Temperature Unit

You can select the temperature unit to display on the screen.

Fuel Economy Unit or Energy Consumption Unit

You can select the unit for fuel (energy) economy to display on the screen.

The displayed name may differ depending on the vehicle model and specifications.

Tire Pressure Unit

You can select the unit for tire pressure to display on the screen.

Torque (if equipped)

You can select a torque unit to display on the system screen.

Turbo Boost (if equipped)

You can select a turbo boost unit to display on the system screen.

Media Options (if equipped)

You can set the media player not to start automatically when starting the engine or set it to notify you of any information changes during media playback.



The screen may differ depending on the vehicle model and specifications.

Radio/Media Off at Vehicle Startup

You can set the media player not to start automatically when starting the engine.

Continue to Play Media when Vehicle Is Turned Off (if equipped)

Turn on this mode to keep the system power supply for a certain period of time after the engine is turned off.

Display Media Change Notifications (if equipped)

You can set the system to briefly display media information at the top of the screen if the current song or channel changes when not on the main media screen.

Reset

You can reset your system settings to the default values.



You can also initialize all settings of the login profile.



Caution

- When initialization is performed, all user data in the system including the location data is deleted.
- When phone projection is active, you cannot reset the system settings. To reset the settings, remove the USB cable from your system.

My Data (if equipped)

You can import location data from a USB device to the system, or export the data on the system to a USB device.

When importing or exporting the location data, you can use only the USB device formatted in exFAT, FAT16/32, or NTFS.



Import Address Book/Previous Destinations from USB

You can import registered location and destination information, saved on your USB storage device, to the system.

- Previous information saved on the system will be deleted.
- While importing from a navigation system that uses a different coordinate system, the locations may appear differently.

Export Address Book/Previous Destinations to USB

You can export registered location and destination information, saved on the system, to your USB storage device.

Previous information saved on the USB storage device will be deleted.

Configuring the screen layout or screen theme/layout settings (if equipped)

You can configure the settings for the display and themes.

1 On the All Menus screen, press Setup ➤ Screen Layout or Screen Theme/Layout.

The screen layout or screen theme/layout settings screen appears.



Type1



Type2

- 2 Configure the settings required:
- Press Search for Settings or press and enter a keyword to search for a setting item. You can also search for a setting item by voice.
- If you press **Display Off** at the top of the screen, the screen is switched off. To switch the screen back on, press the screen or briefly press the power button.

Graphic Themes (if equipped)

You can set the desired display theme.



The screen may differ depending on the vehicle model and specifications.

Screen Saver

You can select the items to display on the screen saver in standby mode.



Analog Clock

Displays the analog clock on the system screen saver.

Press to choose the Analog Clock to show on the screen.

Digital Clock

Displays the digital clock on the system screen saver.

None

Displays nothing on the system screen saver.

Split Screen

You can specify the items to display on the Split Screen.



- ∠ This option is only available when the display supports Split Screen.
- On the screen list, press on the right and drag the item to reposition.


Configuring the display settings

You can change the system display settings such as display brightness.

On the All Menus screen, press Setup ➤ Display.
 The display settings screen appears.



Type1

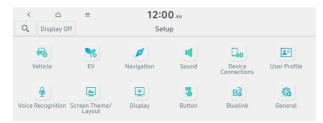

Type2

- The screen may differ depending on the vehicle model and specifications.
- 2 Configure the settings required:
- If you press Display Off at the top of the screen, the screen is switched off. To switch the screen back on, press the screen or briefly press the power button.

Illumination

You can set the system brightness to be adjusted according to the ambient lighting conditions or set the screen to stay bright or dimmed. You can also set to automatically adjust the display brightness depending on the cluster illumination.

To reset all screen brightness settings to the default values, press Reset.



Option A



Option B

Auto-adjust Brightness (if equipped)

You can set the system brightness to be adjusted according to the ambient lighting conditions. Press to set the brightness for the day or night mode.

Adjust Manually (if equipped)

You can set the screen to stay bright or dimmed.

Mode (if equipped)

- Automatic: The display brightness is automatically adjusted based on the surrounding environment.
- **Daylight**: The display brightness is adjusted to ensure that items are easier to see when the surrounding area is bright.
- **Night**: The brightness is adjusted to prevent glare when the surrounding area is dark.

Illumination (if equipped)

- Link to Cluster Illumination Control: The display brightness is automatically adjusted based on the cluster illumination.
- Daylight: You can set the display brightness when Daylight is selected under Mode.
 Uncheck Link to Cluster Illumination Control and then set to the desired brightness.
- Night: You can set the display brightness when Night is selected under Mode. Uncheck Link to Cluster Illumination Control and then set to the desired brightness.
- To reset all screen brightness settings to the default values, press Reset.

Blue Light Filter

Enable blue light filtering to adjust the screen light to reduce the level of eye strain.



Use Blue Light Filter

Enable or disable blue light filtering.

Blue Light Filter Settings

Set to activate blue light filtering automatically based on the ambient light or pick the time range manually.

- Automatic: Enable blue light filtering based on the ambient light.
- Scheduled Time: Enable blue light filtering during the set time range.

Camera Settings (if equipped)

You can configure the screen settings for the driving assist view and set the information to display in the view.



Display Contents (if equipped)

You can set the information to display on the view screen.

- Extended Rear View Monitor: You can set to display the rear camera display even when you change the shift position other than "R" (Reverse) after reversing.
- Rear View Parking Lines: Displays the parking assist guide lines on the rear view screen.

Display Settings (if equipped)

You can adjust the brightness and contrast of the view screen.

Screen Saver (if equipped)

You can select the items to display on the screen saver in standby mode.



Analog Clock

Displays the analog clock on the system screen saver.

Digital Clock


Displays the digital clock on the system screen saver.

None

Displays nothing on the system screen saver.

Home Screen (if equipped)

You can rearrange the icons displayed on the All screen.

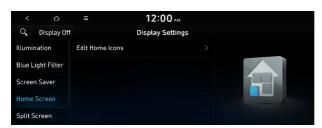

Edit Home Icons

You can edit the arrangement of home icons.

Split Screen (if equipped)

You can specify the items to display on the Split Screen.



- ${ \ensuremath{ \angle} }$ The screen may differ depending on the vehicle model and specifications.

Media Change Notifications (if equipped)

You can set to briefly display media information at the top of screen while playing the next item when you move from the media player screen to another.



Extend Rear Camera Use (if equipped)

You can set to display the rear camera display even when you change the shift position other than "R" (Reverse) after reversing.

When you shift to "P" (Park) or drive at a predetermined speed or faster, the rear view screen disappears to display the previous screen.



Audio System ON/OFF (if equipped)

You can set so that power for the system is maintained when the vehicle is turned off.



How to Update the Map and Software for your Infotainment System

To ensure you are maximizing the full potential of your navigation system, we advise updating the map and software annually. To update, visit the map update website and install the Navigation Updater program onto your PC. Use the program to download and install the latest map, points of interest, and software. Alternatively, you can visit your local dealership to update.



Caution

- It may take a while (tens of minutes) to finish the system update depending on the amount of data.
- Never turn off the system or remove the storage before finishing the system update. When the system is turned off or the storage device is removed from the system while updating, it may cause data or system damage.
- After update is completed, the system automatically restarts and the SW Info/Update screen displays the updated version.
- During update, you cannot use the navigation system, Bluelink service, camera, and infotainment system.
- Changes are not applied to the map after creation of all update files. For this reason, road names, POI names, speed limits, or other map information displayed, may not be the latest values due to the creation time of the update files.

Updating via a USB device

Install the Navigation Updater on your PC and then download the latest data to a USB device for update to the navigation map and infotainment system.

Installing Navigation Updater

On your PC, visit the website at http://update.hyundai.com/ca to download and install the Navigation Updater software.

For system requirements for installing the program and details on how to install it, visit the website.

Updating the software and map

- 1 Connect a USB device to the computer and run Navigation Updater for downloading the update files.
- 2 Follow the instructions on the screen to download the update files.
- 3 Remove the USB device from the computer and then connect it to the USB port in your vehicle.
- 4 Start the vehicle to turn on the system.
 - switch to "ON".



Caution

- Perform update with the start switch "ON" when the battery is sufficiently charged by driving the vehicle. When the battery is discharged while updating, the system may get damaged with the update stopped.
 - Note that the battery may be discharged easily in winter.
 - The battery may also be discharged easily when the vehicle is not used for a long time. Caution is required.
- When you start the vehicle while updating with the start switch "ON", power supply to the system may be cut off.

5 On the All Menus screen, press **Setup** ▶ **General** ▶ **SW Info/Update**.

After the system is turned on, press **Yes** when a pop-up window appears whether to proceed with update. In this case, the screen changes to allow you to select the update method.

Updating immediately

You can finish the update quickly.

- On the **SW Info/Update** screen, press **Update**.
- 2 Press **Update Now**.
- 3 Press OK.

The update is performed immediately after the system reboots.

▮ Background Update

You can perform update while using the system.

- 1 On the **SW Info/Update** screen, press **Update**.
- 2 Press Background Update.
- 3 Press OK.
- Compared to Update Now, it may take longer.
- On the All Menus screen, press Setup ► General ► SW Info/Update to see the update progress.
- It is possible to start background updates only when the vehicle is on.
- It is possible to continue to perform updates even after turning off the vehicle while updates are in progress. On the notification window displayed when the vehicle is turned off, press **Update** to perform the remaining updates to complete the process successfully. For later update, press **Later**.
- If the update process is not completed, a notification window appears asking if you want to perform updates each time you turn off the vehicle.
- All system functions, including the rear view camera, are disabled while updates are in progress.

10 Wireless Update

Wireless update (if equipped)

Latest map and software are provided through wireless update. New software is automatically downloaded when the vehicle is on. After installation of the software is complete, you can view the update details from the notification window.

- ∠ To use the wireless update function, you need to subscribe to the Bluelink service. ► See
 "Subscribing to the service."
- The wireless update is accessible only when the system is connected to the network.
- When downloading new update files begins, the icon appears at the top right of the screen. To view the progress of the download, navigate to the All Menus screen and press Setup ► General ► SW Info/Update.
- After downloading new update files is complete, map update automatically begins and the icon appears at the top right.



- ∠ The wireless update function is not accessible if the system has not been updated for a specified period of time. If wireless update does not work, first use a USB storage device to perform update. ► See Navigation Update site
- Perform update when the vehicle is not used for more than 15 minutes. The time required to update the system differs depending on the situation.

Updating the system

A notification window appears when your vehicle is turned off. You can use the notification window to update the navigation map and infotainment system.

- This function is available only when the system is ready for the latest software update.
- Turn off the vehicle (ACC Off).
- From the update notification window, press **Install Now**.



The update is performed immediately after the system reboots. Update details appear as soon as update is complete.

- system when update is in progress, you can view the progress of update. When update is in progress, the navigation, Bluelink, camera and infotainment system are disabled.
- The system automatically shuts down after update is complete. You can exit the vehicle without having to wait for the update to finish.
- 2 A notification window appears after update is complete. You can use your smartphone to scan the QR code in the window to view the update details.
- What's New from the All Menus screen.
- If the battery level is below threshold, the update notification window does not appear when the vehicle is turned off. If this is the case, the update notification window appears when the vehicle is turned on again. In the window, press Install Now to perform update.

Updating immediately

You can update the navigation map and infotainment system quickly regardless of whether the vehicle is on or off.

- When update is in progress, the navigation, Bluelink, camera and infotainment system are disabled.
- On the All Menus screen, press Setup ➤ General ➤ SW Info/Update ➤ Update ➤ Finalize Update.



2 Select Start Update and press OK.

The update is performed immediately after the system reboots.

11 Appendix

Solutions

Before reporting a malfunctioning system, refer to the following table and see if you can identify and fix the problem. If the problem persists or you are unable to locate your specific need, contact your authorized Hyundai dealer.

Sound and display

Symptom	Possible cause	Solution
A blank screen appears and sound	The system is turned off.	Check that the start switch is in "ACC" or "ON."
is not audible.		 Press the Power button on the control panel to turn on the system.
	Sound volume is too low.	Use the Volume knob/button on the control panel to adjust the volume.
	Sound is muted.	Press the Mute button on the steering wheel to unmute.
Sound is audible from only one side of the speakers.	Sound is imbalanced.	On the All Menus screen, navigate to Setup Sound and use the settings menu to adjust the sound balance.
The sound is cut off or noise is heard.	Vibration occurs in the system.	When the system vibrates, the sound may be cut off or noise may occur. This is not a system failure. The system is restored as soon as the vibration stops.

Symptom	Possible cause	Solution
The image quality is poor.	Screen adjustment is required.	On the All Menus screen, navigate to Setup Display and use the settings menu to adjust the display settings.
	Vibration occurs in the system.	The images may get distorted when vibration occurs in the system. This is not a system failure. The system is restored as soon as the vibration stops.
	The display is aged or the system performance is degraded.	If the problem persists, contact your authorized Hyundai dealer.
Small red, blue, and green dots are shown on the screen.		LCD has very high-density pixels. For this reason, there may be dead pixels (that are always off) or lit pixels (that are always on) within 0.01 percent of the total pixels.

USB playback

Symptom	Possible cause	Solution
Files in a USB device cannot be played.	There are no compatible files for playback	Copy the files that can be played by the system to the USB device and connect the device again. See "USB mode."
	Poor connection is found.	Remove the USB device from the USB port and then reconnect it properly.
	The USB device is dirty.	Remove foreign materials from the surface that contacts the USB device and USB port.
	A USB hub or extension cable is used.	Connect the USB device directly to the USB port on the vehicle.
	The USB device is non-standard.	Use a USB device that is compatible with the system. ▶ See "USB mode."
	The USB device is damaged.	Use your computer to format the USB device and then connect the device again. Format the device in FAT16/32 format.

Bluetooth connection

Symptom	Possible cause	Solution
The system is not detected by a Bluetooth device.	Registration mode needs to be run.	On the All Menus screen, navigate to Setup ▶ Device Connections , run the device registration mode and then perform search again from the device. ▶ See "Connecting a Bluetooth device."
The Bluetooth device is not connected.	The Bluetooth function should be activated.	Activate the Bluetooth function on the Bluetooth device to connect.
	Any error occurs while using the Bluetooth function.	 Turn the Bluetooth function OFF / ON on the Bluetooth device and then connect the device again.
		• Turn the Bluetooth device off and on and then connect the device again.
		 Remove the battery from the Bluetooth device and attach it back, turn on the device, and then connect the device again.
		 Delete the system and Bluetooth device from the registration lists respectively, and then connect the device again.

Phone projection

Symptom	Possible cause	Solution
The phone projection function is not performed when a smartphone is connected using a USB cable.	Phone projection is not supported.	Visit the website to check whether your smartphone supports the phone projection. • Android Auto: https://support.google.com/androidauto • Apple CarPlay: http://www.apple.com/ios/carplay
	The function is inactive.	 On the All Menus screen, navigate to Setup ➤ Device Connections and activate the connection function from the Phone Projection Settings menu. Make sure that the phone projection is not disabled in the App settings or blockout settings on your smartphone.
	Smartphone is encountered with poor operation or malfunction.	 Check that the smartphone battery level is not too low. Recognition may not work properly when the battery level is too low. The phone projection may not work properly when the signal strength is weak. When the smartphone is locked, first unlock it. Initialize the smartphone and connect the device again.
A black screen appears when the phone projection is activated or in use.	The smartphone malfunctions.	 Remove the USB cable from the smartphone and connect the device again. Initialize the smartphone and connect the device again.

System operation

Symptom	Possible cause	Solution
The previous media mode does not appear when the system is turned off and on.	It is encountered with poor media connection or playback error.	When the media source is not connected or played normally, the previous mode appears. Connect the media source again or play it again.
The system slows down or does not operate at all.	An internal error occurs in the system.	 Restart the system by pressing the reset button with a sharp object such as pen or clip. If the problem persists, contact your authorized Hyundai dealer.
The system is not turned on.	Fuse-related issues	 Visit an auto service shop and replace the fuse with a new one of appropriate capacity. If the problem persists, contact your authorized Hyundai dealer.

Navigation system operation

Symptom	Possible cause	Solution
The destination is not searched.	Outdated map data	Update the map to the latest version. ► See Navigation Update site, "How to Update the Map and Software for your Infotainment System," "Wireless update (if equipped)."
Route guidance of the navigation system does not match the actual	Outdated map data	Update the map to the latest version. ► See Navigation Update site, "How to Update the Map and Software for your Infotainment System," "Wireless update (if equipped)."
road conditions.	changes in the road may not match the actual ro after a map update. even after the map is update version because the update creation date. Be sure to dri	Route guidance of the navigation system may not match the actual road conditions even after the map is updated to the latest version because the update depends on the creation date. Be sure to drive according to actual road conditions and regulations.
Guidance is made by bypassing the route or the speed camera alerts are not followed.	The update for the system and map data is required.	Update the map to the latest version. ► See Navigation Update site, "How to Update the Map and Software for your Infotainment System," "Wireless update (if equipped)."
The real-time traffic information is not received.	Poor signal reception	 Reception of traffic information may not be made smoothly in mountain and island areas. Check the reception status again in a region with strong signals. If the problem persists, contact your authorized Hyundai dealer.

System status indicator icons

You can see the system status by checking the status indicator icons at the top right of the system screen.

Different status indicator icons appear when each function is performed. The meanings of the icons are as follows:



Type1



Type2

- The screen may differ depending on the vehicle model and specifications.
- ∠ If the vehicle is type 2, it is possible to change the graphic theme to white or black. ► See
 "Graphic Themes (if equipped)."

Mute/memo recording



Nav 💅	Navigation sound muted
Audio 💅	Radio/Media sound muted
Nay Audio	All sound outputs muted
<u>&</u>	Recording a voice memo

Bluetooth/call



₿ ე	Connecting a phone via Bluetooth
₹ ₽	Connecting an audio device via Bluetooth
8 1	Connecting a phone and an audio device via Bluetooth
C	Making a call via a Bluetooth phone
Q ₆	Bluetooth phone's microphone off
Co	Downloading the contact and list of recent calls from the connected Bluetooth phone

Bluelink



C)	Talking with a Bluelink phone
G	Bluelink phone's microphone off
B [®] ııll	Bluelink network's signal strength

System update





Available functions in the rear seat (if equipped)



44	Rear-seat remote control locked
②	Rear-seat sleep mode On
	Front-seat driver is having a conversation with a rear-seat occupant

Wireless charging



(t <mark>🏂</mark>))	Wireless charging in progress
(t <mark> </mark>))	Wireless charging complete
((<mark>!</mark>))	Wireless charging failure

Some icons may not appear depending on the vehicle model and specifications.

FAQ

Navigation

O How can I update the map?

You can download the latest map data to a USB device and use the device to update the map. ► See Navigation Update site, "How to Update the Map and Software for your Infotainment System," "Wireless update (if equipped)."

Q Guidance is made by bypassing the route or the speed camera alerts are late.

Select another route after setting the route options. On the map screen, press

▶ Route ▶ Route Options to change the settings and resume navigation.

▶ See "Changing the route search option."

When the system is not updated, update the software and map and then perform search again. ► See Navigation Update site, "How to Update the Map and Software for your Infotainment System," "Wireless update (if equipped)."

Bluetooth

- Which functions can I use via Bluetooth?
- You can use the hands-free call function with a mobile phone connected. You can also play music after connecting an audio device such as MP3 player or mobile phone. ▶ See "Making a call via Bluetooth," "Playing music via Bluetooth."
- Q How can I register a Bluetooth device?
- A On the All Menus screen, press Setup ➤ Device Connections ➤ Device Connections ➤ Add New. From the Bluetooth device to be connected, search for the vehicle system and register it. Use the Bluetooth device to enter or approve the authentication number displayed on the system. Then the device is added to the list of Bluetooth devices in the system and automatically connected to the system. ➤ See "Connecting a Bluetooth device."

- Q I bought a new mobile phone and want to replace my old phone with the new one to connect the system. How can I register the new phone to the system?
- An additional device can be registered in the same way as in registration of a new device. You can register up to 6 devices in the list of Bluetooth devices. To delete a previously registered device, press **Delete Device(s)** from the list of Bluetooth devices, select the device to delete, and then press **Delete**. ▶ See "Deleting a registered device."
- O How can I access the list of contacts while using a Bluetooth phone?
- Approve access to the contacts when connecting your mobile phone to the system via Bluetooth. The list of contacts on the phone is downloaded to the system. To see the downloaded list of contacts, press the Call button on the steering wheel and press on the call screen. You can search for a contact and make a call to the contact, or add the contact to the favorites. See "Dialing from the contacts."

Broadcast reception

- Q I turned on the radio while driving but I heard no sound but noise.
- A Depending on the location, obstacles may cause reception to deteriorate.

 Radio reception rate may also drop when an on-glass antenna is mounted on the rear window and the window is tinted with metallic window films.

Bluelink

- Which functions are available with Bluelink?
- A To ensure pleasant and comfortable driving, Bluelink provides various functions such as safety functions, vehicle care functions, and route guidance service. ▶ See "Bluelink service."
- Q How can I subscribe to the Bluelink service?
- You can subscribe to the service and activate your user account by visiting a Bluelink Center, or website or by using the Bluelink Settings menu from the vehicle. To subscribe to Bluelink via the vehicle system, display the All Menus screen, press Bluelink ▶ Bluelink Settings ▶ Activate Service, and then follow the displayed instructions. ▶ See "Subscribing to the service."

When you encounter an error or failure during subscription and account activation, contact the Hyundai Customer Relations Center at 1-844-258-5656.

Self-inspection method upon failure

- $\label{eq:Q} \mbox{ The system does not operate properly. What shall I do?}$
- A Inspect the system after referring to Troubleshooting Guide. ► See "Solutions."

When the system failure persists after inspection, press and hold the Reset button to reset the system.

If the problem persists, contact your authorized Hyundai dealer.

Product specifications

Media player

USB mode

Music files

Item	Specifications		
File format	MPEG-1/2 Layer3, OGG (Vorbis), FLAC, WMA (Standard/Professional), WAV		
Bit-rate and sampling frequency	MP3	8–320 kbps (CBR/VBR), up to 48 kHz (ID3 tag version: Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3, Ver. 2.4)	
	OGG	Q1 to Q10, up to 48 kHz	
	FLAC	8/16/24-bit, up to 48 kHz	
	WMA	Standard (0x161): up to L3 Profile, up to 385 kbps, t to 48 kHz	
		Professional (0x162): up to M0b, up to 192 kbps, up to 48 kHz	
	WAV	8/16 to bit, up to 48 kHz	
Specification details Max. number of directory layers: 20 layers		er of directory layers: 20 layers	
	Max. folder/file name length: 255 Bytes		
	Valid characters that can be used in a folder/file name: 2,350 Alphanumeric characters/4,888 Chinese characters		
	Max. number of folders: 2,000 (including the root)		
	Max. number of files: 8,000		

- The following files are not played.
 - Modified files (format-changed files)
 - Variant files (e.g. MP3 files encoded by WMA audio codec)
 - DRM (Digital Rights Management)-protected files
 - Files with no index
- Sound quality is not guaranteed in case of music files that use the bit-rate exceeding 192 kbps.
- With the files that do not use the fixed bit rate, some functions may not work properly or the playback time may not appear accurately.
- When a trouble occurs while playing or you want to play an incompatible format file, use the latest encoder software to change the format before using the file.

USB storage devices

Item	Specifications	
Byte/Sector	64 KB or less	
Format system	FAT16/32 (recommended), exFAT, NTFS	

- With the USB storage devices that are not equipped with a plug-type connector (metal cover type), proper operation is not guaranteed.
 - USB storage devices with a plastic plug may not be recognized.
 - USB memory cards (e.g. CF cards, SD cards) may not be recognized.
- Problems that are caused by using USB storage devices (not specified in the following list), are not covered by the warranty.

Product name	Manufacturer
XTICK	LG
ВМК	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	TranScend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	DIGI Works

- USB hard drives may not be recognized.
- When using a USB mass storage device divided into logical drives, only the files saved in the first drive can be played.

Common specifications

Item	Specifications
Power supply	DC 14.4 V
Operating voltage	DC 9-16 V
Dark current	Below 1 mA in average within 45 days
Operating temperature range	-20 to +70 °C
Storage temperature range	-40 to +85 °C
Electric current consumption	2.5 A

Radio

Item	Specifications
Available channels	FM: 87.5-107.9 MHz (step: 200 kHz)
	AM: 530–1710 kHz (step: 10 kHz)
Sensitivity	FM: Within 10 dBuV
	AM: Within 35 dBuV EMF
Distortion factor	Within 2 %

Bluetooth

Item	Specifications
Frequency range	2400-2483.5 MHz
Supported Bluetooth version	4.1/4.2
Supported profiles	Hands-free (1.7), A2DP (1.3), AVRCP (1.6), PBAP (1.1/1.2), MAP (1.2/1.4)
Bluetooth Power Class 2	-6 to 4 dBm
Antenna power output	2.5 mW (max.)
Number of channels	79

LTE RF

Item	Specifications	
LTE	Reception	Frequency: 1930 MHz to 1990 MHz (B2), 2110 MHz to 2155 MHz (B4), 869 MHz to 894 MHz (B5), 2620 MHz to 2690 MHz (B7), 729 MHz to 746 MHz (B12)
		Sensitivity: -94.3 dBm under@10 M (B2, 5, 7), -96.3 dBm under@10 M (B4), -93.3 dBm under@10 M (B12) (Throughput ≥ 95 %)
	Transmission	Frequency: 1850 MHz to 1910 MHz (B2), 1710 MHz to 1755 MHz (B4), 824 MHz to 849 MHz (B5), 2500 MHz to 2570 MHz (B7), 699 MHz to 716 MHz (B12)
		Maximum RF output power: Power Class 3 (B2, B4, B5, B7, B12), 20.3 dBm to 25.7 dBm (conducted)
WCDMA	Reception	Frequency: 1930 MHz to 1990 MHz (B2), 869 MHz to 894 MHz (B5)
		Sensitivity: -104.0 dBm under (BER = 0.1 % under)
	Transmission	Frequency: 824 MHz to 849 MHz (B5), 1850 MHz to 1910 MHz (B2)
		Maximum RF output power: Power Class3 (B2, B5), 20.3 dBm to 25.7 dBm (conducted)

Important information

Before using your system, read and follow all instructions and safety information provided in this user's guide ("User's Manual"). Not following precautions found in this guide can lead to an accident or other serious consequences.

Keep this guide in your vehicle

When kept in the vehicle, this guide will be a ready reference for you and other users unfamiliar with the system. Ensure that before using the system for the first time, all persons have access to this guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the steering wheel.

General operation

Voice command control

Features within the system may be executed using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the steering wheel.

Prolonged views of screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even short views of the screen may be hazardous if your attention has been diverted away from your driving.

Volume setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation features

Navigation features included in the system are intended to provide detailed instructions to get you to a desired destination. Ensure that all persons using this system carefully read and follow all instructions on safety information.

Distraction hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such setup or inputting data while driving can seriously distract your attention and could cause an accident. Stop the vehicle in a safe and legal manner before attempting these operations.

Let your judgment prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and must evaluate whether it is safe to follow the suggested directions.

Potential map inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency services

Do not rely on any navigation features included in the system to direct you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of speech recognition functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

Index

A	Bluetooth connection		
Android devices	Adding a device 136		
Android Auto 26	Deleting a device 138 Device connection 137		
Apple devices Apple CarPlay 28	Disconnecting a device 138		
В	C		
Battery warning 15	Climate Climate settings 192		
Bluelink Bluelink menu Diagnosing the vehicle 172	Climate control function 35 Contacts list 144		
Maintenance service intervals 172 Roadside Assistance 174 Schedule details 167	D		
Settings 173, 232 Voice Local Search 173 Weather information 171	Defog/Defrost Options 193 Deleting a location 124		
Bluelink service 164 Route guidance service 175 Safety and security services 174	Destination search 94 Driving assistance screen 30		
Auto Collision Notification 174 SOS 175	E		
Bluetooth	Editing a route 110		
Bluetooth phone Answering a call 148 Call 139	EV charging stations 126		
Contacts list 143	F		
Dial pad 145 Favorites settings 141 Options during a call 149 Recent calls list 139 Switching to another call 150 Text message 150 Specifications 271	FAQ Bluetooth 266 Broadcast reception 267 Navigation 266 Self-inspection method upon failure 268		
	Finding a route easily Destination search 94		

Finding the route	N		
Adding a waypoint 111 Address search 102	Navigation 92, 101		
Frequently visited places 122	Navigation settings 224		
Gas stations 125	Notifications 51		
Location registration			
Deleting a POI 124 Editing a POI 124	P		
Registration after search 120	Parking assist guide lines 30		
Map 97	Phone projection		
Map update 251 Previous Destinations 106	Android Auto 26		
Saving the current position 121	Apple CarPlay 28		
Searching for POIs 104	Previous Destinations 106		
Volume adjustment 100	Product specifications Bluetooth 271		
Н	Common specifications 271 LTE RF 272		
HD Radio Data 48	Media player 269 Radio 271 Proximity Warning 31		
HD Radio™ 73			
Home screen 19			
L	R		
_	Radio		
Listening to music Bluetooth audio 89	Changing the channel 71		
USB music 82	Changing the radio mode 71		
Location registration 119	Deleting a channel 72		
	Scanning channels 71		
B.4	Rear-seat climate control function 39		
M	Rear-seat conversation mode 44		
Map 97	Rear-seat quiet mode 45		
Map update 251	Rear view screen 30		
Media device connection 80	Recent calls list 140		
Media player			
Bluetooth audio 89			
USB music 82			

Messages 150

S

Save searched place 120

Saving frequently visited places 122

Saving the current position 121

Settings

Bluelink settings 232

Bluetooth settings 208

Button settings 210

Device connections settings 204

Display settings 245

General settings 236

Navigation settings 224

Screen theme/layout settings 243

Sound settings 214

User profile settings 234

Vehicle settings 178

Voice recognition settings 223

Siri Eyes Free 160

SiriusXM 75

SiriusXM™

Changing to SiriusXM mode 76

Featured Favorites channels 79

Searching for channels 78

Selecting channels 78

Viewing the program schedule 79

Software update 251

Solutions

Bluetooth connection 259

Navigation system operation 262

Phone projection 260

Sound and display 257

System operation 261

USB playback 258

Sounds of Nature 46

Split screen 21

Surround view monitor

Door opening/mirror folding alert 33

Rear view video 34

System Info 237

System status indicator icons 263

System update 251

T

Touch screen 16

Turning on/off the system 14

U

Update 251

USB file specifications 269

USB music 81

USB port 81

USB storage device specifications 270

V

Valet mode 51

Voice memo 161

Voice recognition

Settings 223

Use of speech recognition functions

156

Trademarks

 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HYUNDAI is under license.



- A Bluetooth® Wireless Technology enabled cell phone is required to use Bluetooth® Wireless Technology.
- Google, Android, Android Auto, and Google Play are registered trademarks of Google LLC. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- Apple®, Apple CarPlay™, iPad®, iPad mini™, iPhone®, iPod®, iPod classic®, iPod nano®, iPod touch®, iTunes®, and Siri® are trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. For patents see http://dts.com/patents. HD Radio and the HD, HD Radio, and
 "ARC" logos are registered trademarks or trademarks of iBiquity Digital Corporation in the United States and/or other countries.



- Sirius, XM, SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS AutoStage, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2022 DTS, Inc. ALL RIGHTS RESERVED.



• Other trademarks and trade names are those of their respective owners.

Open Source Information

This system contains open source software.

To obtain the source code developed under the open source license installed on this product, please visit https://www.mobis.co.kr/en/tech/rnd.do#open.

You can download all applicable license notices, including the source code.

If you send an e-mail to MOBIS_OSSrequest@mobis.co.kr within three years of purchasing this product to request an open source code for the software on this product, you will receive it in CD-ROM and other storage mediums with minimal charge, such as costs for medium and transportation.

MEMO

