


4. Instrument Cluster

Instrument Cluster.....	4-2
Instrument Cluster Control	4-4
Gauges and Meters	4-4
Power/Charge Gauge	4-5
State of Charge (SOC) Gauge for High Voltage Battery.....	4-5
Gear Shift Indicator	4-8
Warning and Indicator Lights.....	4-9
Cluster Display Messages.....	4-21
Cluster Display	4-25
Cluster Display Control.....	4-25
View Modes	4-25
Vehicle Settings (Infotainment System)	4-29
Setting Your Vehicle	4-29

Instrument Cluster

Type A (N mode)

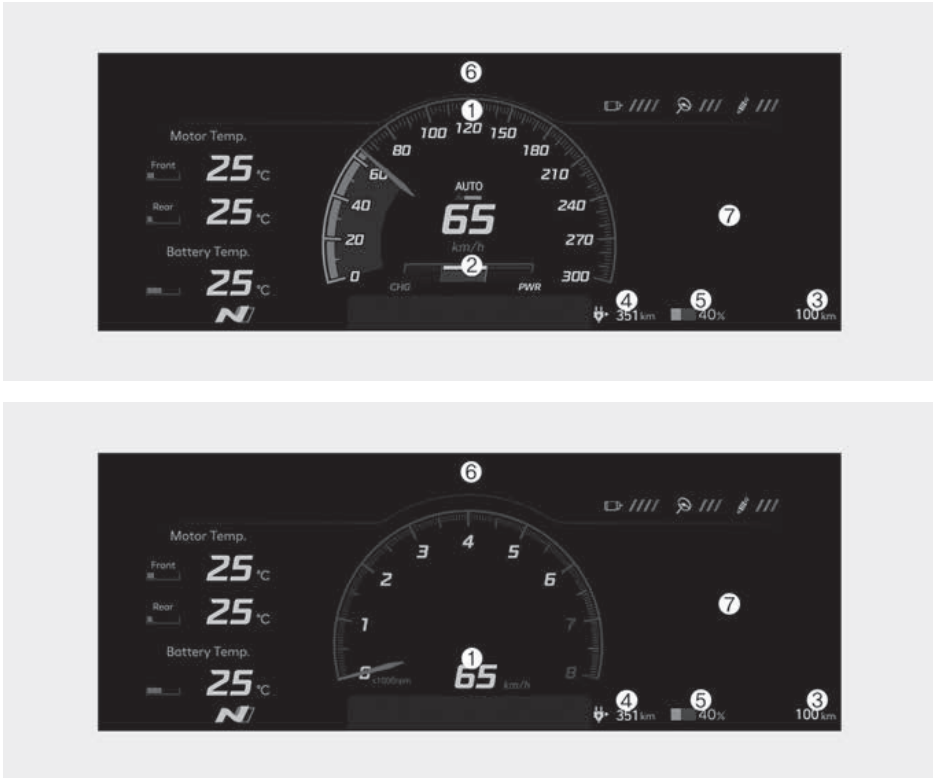

The actual cluster in the vehicle may differ from the illustration. For more information, refer to the "Gauges and Meters" section in this chapter.

- (1) Speedometer
- (2) Power/Charge gauge
- (3) Odometer
- (4) Distance to empty
- (5) Battery SOC (State of Charge) gauge
- (6) Warning and indicator lights
- (7) Cluster display

Type B (Normal mode)



The actual cluster in the vehicle may differ from the illustration. For more information, refer to the "Gauges and Meters" section in this chapter.

- (1) Speedometer
- (2) Power/Charge gauge
- (3) Odometer
- (4) Distance to empty
- (5) Battery SOC (State of Charge) gauge
- (6) Warning and indicator lights
- (7) Cluster display

Instrument Cluster Control

Instrument panel illumination

Control switch



When the vehicle's parking lights or headlights are on, press the illumination control switch to adjust the brightness of the instrument panel illumination.

When pressing the illumination control switch, the interior switch illumination intensity is also adjusted.

WARNING

Never adjust the instrument panel illumination while driving to prevent death, serious injury, or vehicle damage.

- The brightness of the instrument panel illumination is displayed.
- When the brightness setting reaches either the minimum or maximum level, a chime sounds.

Infotainment system

You can adjust the brightness of the instrument panel illumination from the infotainment system. Select **Setup > Cluster/Head-up Display > Brightness**.

Information

The infotainment system may change after software updates. For more information, refer to the manual provided in the infotainment system and the quick reference guide.

WARNING

Never adjust the instrument cluster while driving. This could result in loss of control and lead to an accident that may cause death, serious injury, or vehicle damage.


Gauges and Meters

Speedometer

Type A



Type B

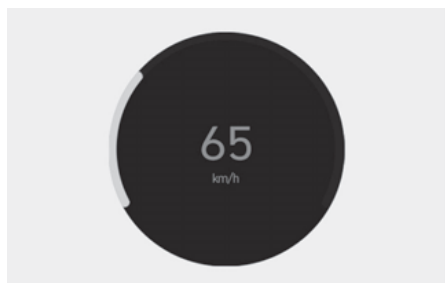


The speedometer indicates the speed of the vehicle and is calibrated in kilometers per hour (km/h) and/or miles per hour (MPH).

Power/Charge Gauge

Type A



Type B

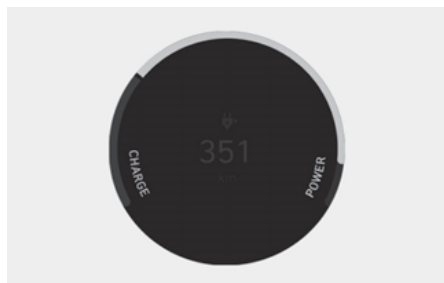


The Power/Charge gauge shows the energy consumption rate of the vehicle and the charge/discharge status of the regenerative brakes.


- **POWER:** It shows the energy consumption rate of the vehicle when driving uphill or accelerating. The more electric energy is used, the higher the gauge level.
- **CHARGE:** It shows the charging status of the battery when it is being charged by the regenerative brakes (decelerating or driving on a downhill road). The more electric energy is charged, the lower the gauge level.

State of Charge (SOC) Gauge for High Voltage Battery

Type A

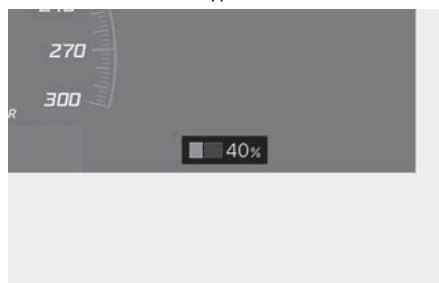

Type B

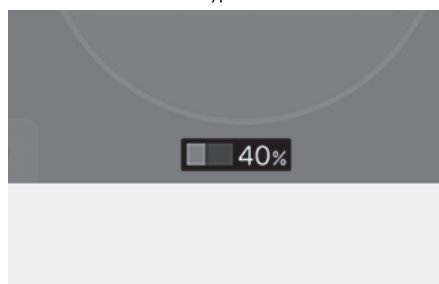



- The SOC gauge shows the charging status of the high voltage battery.
 - The low percentage number on the indicator indicates that there is not enough energy in the high voltage battery. 100 % indicates that the high voltage battery is fully charged.
 - When driving on highways, make sure to check in advance if the high voltage battery is charged enough.
1. When the remaining battery is lower than 15 % on the SOC gauge, the High Voltage Battery Level (🔋) warning light illuminates, to alert you of the battery level.
 2. When the High Voltage Battery Level (🔋) warning light illuminates, the vehicle can drive an additional 30-40 km (18-25 mi.) depending on the driving speed, heater/air conditioner, weather, driving style, and other factors. Charging is required.

NOTICE

When the high voltage battery level is low, the Power Down (⏻) indicator light illuminates and the vehicle power is limited.

Charge the battery immediately since your vehicle may not be driven, or may roll back on a slope with the indicator light illuminated.

Outside temperature gauge

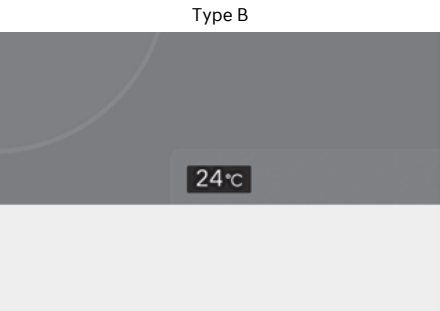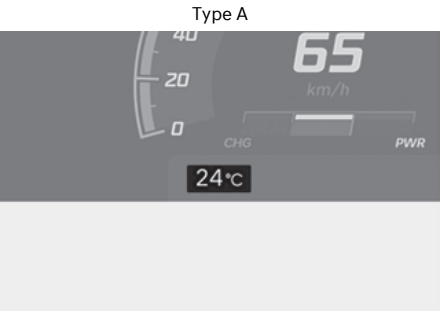

The temperature reads in Fahrenheit or Celsius depending on the units selected from the infotainment system. The temperature indicated on the instrument cluster may not change as quickly as the outside temperature.



Select **Setup > General > Units > Temperature Unit**.

Both the temperature unit on the instrument cluster and climate control screen is changed.

i Information

The infotainment system may change after software updates. For more information, refer to the user's manual provided in the infotainment system and the quick reference guide.

Odometer

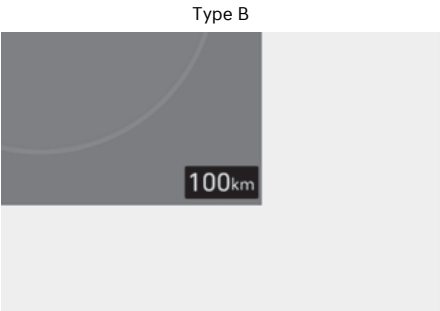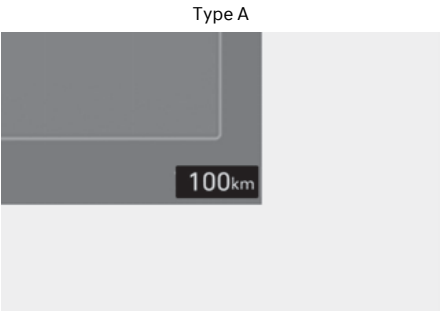


The odometer indicates the total distance that the vehicle has been driven and should be used to determine when periodic maintenance is required.

Distance to empty

Type A



Type B

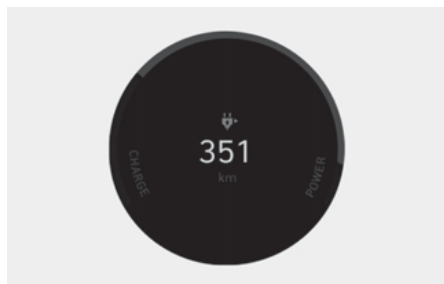

The distance to empty is the estimated distance the vehicle can be driven with the remaining electric energy.

- The distance to empty differs depending on which drive mode (ECO/NORMAL/SPORT) is selected.

For more information, refer to the "Factors affecting the distance to empty" section in chapter 1.

i Information

- The distance to empty may differ from the actual driving distance because it is only an estimate as it is an estimate of the available driving distance.
- The distance to empty may differ significantly based on driving conditions, driving habits, and condition of the vehicle.
- If the vehicle is not on level ground or the battery power has been interrupted, the distance to empty function may not operate correctly.

CUSTOM mode settings




The main settings of CUSTOM mode is displayed at the top of the cluster. The CUSTOM mode can be set on the infotainment system.


For more details on the CUSTOM mode, refer to the "N Mode" section in chapter 6.

Gear Shift Indicator

Type A

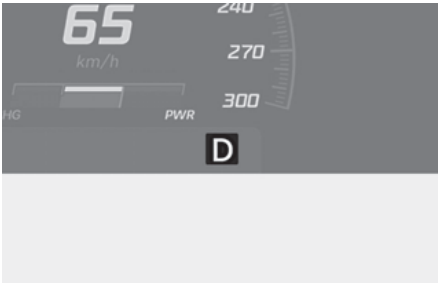

Type B

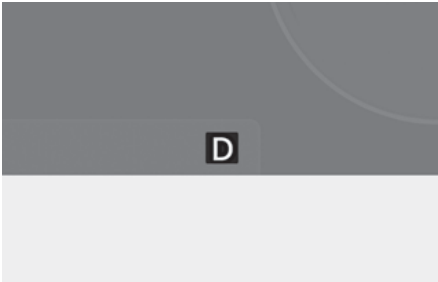

The reduction gear shift indicator in the lower portion of the cluster display indicates the current gear or P (Park).



In the manual shift mode, this indicator informs which gear is desired while driving to save energy.


When the system is not working properly, the indicator is not displayed.

Regenerative braking level indicator

Type A



Type B

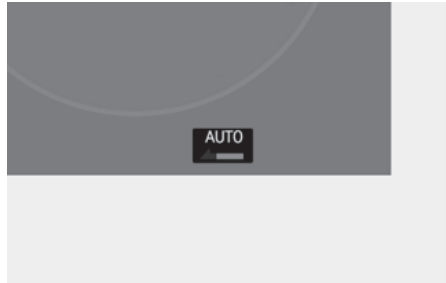

The regenerative brake indicates the level of the regenerative braking that you set. And it also indicates Smart regenerative system's operation status.

For more information, refer to the "N Brake Regen" and "Smart Regeneration System" section in chapter 6.

Warning and Indicator Lights

i Information

Make sure that all warning lights are OFF after starting the vehicle. If any light is still ON, this indicates a situation that needs attention.

Ready Indicator Light

READY

This indicator illuminates:

When the vehicle is ready to be driven.

- ON: Normal driving is possible.
- OFF: Normal driving is not possible, or a problem has occurred.
- Blinking: Emergency driving.

When the READY indicator goes off or blinks, there is a problem with the system. In this case, have your vehicle inspected by an authorized HYUNDAI dealer.

Service Warning Light

 


This warning light illuminates:

- When the Start/Stop button is in the ON position. The Service warning light illuminates for 3 seconds and then goes off.
- When there is a problem with related parts of the electric vehicle control system, such as sensors, etc.

When the warning light illuminates while driving, or does not go off after starting the vehicle, have your vehicle inspected by an authorized HYUNDAI dealer.

Power Down Indicator Light



This indicator light illuminates:

When the power is limited for the safety of the high-powered parts of an electric vehicle. The power is limited for the following reasons:

- The high voltage battery level is too low or voltage is decreasing
- The temperature of the high voltage battery is too high or too low
- The temperature of the motor is high

NOTICE

- Do not accelerate or start the vehicle suddenly when the power down indicator light is illuminated.
- When the power is limited for the safety of high-powered parts of an electric vehicle, the power down indicator light illuminates. Your vehicle may not be driven, or may roll back on a slope with the indicator light illuminated due to the limitation of vehicle power.

i Information

Unless both the Service Warning Light and Power Down Indicator Light illuminate at the same time, it is not a failure.

Charging Connector Indicator Light



This warning light indicates the connection status of the charging connector. When the charging connector is connected to the vehicle, the green light illuminates for about 1 minute.

High Voltage Battery Level Warning Light



This warning light illuminates:

When the high voltage battery level is low.

Charge the high voltage battery as soon as possible.

Seat Belt Warning Light



This warning light informs the driver that the seat belt is not fastened.

For more information, refer to the "Seat Belts" section in chapter 3.

Airbag Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The Airbag warning light illuminates for 3-6 seconds and then goes off.
- When there is a malfunction with the Safety Restraint System (SRS).

If the Airbag warning light remains illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

Regenerative Brake Warning Light



This warning light illuminates:

When the regenerative brake does not operate and the brake does not perform well. This causes the Brake Warning light (red) and Regenerative Brake Warning Light (yellow) to illuminate simultaneously.

In this case, drive safely and have your vehicle inspected by an authorized HYUNDAI dealer.

The operation of the brake pedal may be more difficult than normal and the braking distance can increase.

Parking Brake and Brake Fluid Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The Parking Brake warning light illuminates for about 3 seconds and then goes off once the parking brake is released.
- Whenever the parking brake is applied.
- Whenever the brake fluid level in the reservoir is low.
 - If the warning light illuminates with the parking brake released, it indicates the brake fluid level in the reservoir is low.

If the brake fluid level in the reservoir is low:

1. Drive carefully to the nearest safe location and stop your vehicle.
2. With the motor stopped, check the brake fluid level immediately and add fluid as required (For more information, refer to the "Brake Fluid" section in chapter 9). After adding brake fluid, check all brake components for fluid leaks. If a brake fluid leak is found, or if the warning light remains on, or if the brakes do not operate properly, do not drive the vehicle. Have your vehicle inspected by an authorized HYUNDAI dealer.

Dual-diagonal braking system

Your vehicle is equipped with the dual-diagonal braking system. This means you still have braking on two wheels even if one of the dual systems fails.

With only one of the dual systems working, more than normal pedal travel and greater pedal force are required to stop the vehicle.

Also, the vehicle does not stop in a short distance if only a portion of the braking system is working.

WARNING

If the Parking Brake and Brake Fluid warning light illuminates with the parking brake released, it indicates that the brake fluid level is low.

Have your vehicle inspected by an authorized HYUNDAI dealer.

Anti-lock Brake System (ABS) Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The ABS warning light illuminates for about 3 seconds and then goes off.
- Whenever there is a malfunction with the ABS.

The hydraulic braking system still operates even if there is a malfunction with the ABS.

If the ABS warning light remains illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

Electronic Brake Force Distribution (EBD) System Warning Light



These two warning lights illuminate at the same time while driving:

When the ABS warning and Parking Brake warning lights are on simultaneously, it may indicate a problem with the Electronic Brake Force Distribution system.

If both the ABS warning light and the Parking Brake warning light remain illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

WARNING

When both ABS and Parking Brake and Brake Fluid warning lights are on, the braking system does not work normally and you may experience an unexpected and dangerous situation during sudden braking. Avoid high speed driving and abrupt braking.

Have your vehicle inspected by an authorized HYUNDAI dealer as soon as possible.

Information

When the ABS warning light is on or both ABS and Parking Brake and Brake Fluid warning lights are on, the speedometer, odometer, or tripmeter may not work. Also, the MDPS warning light may illuminate and the steering effort may increase or decrease.

Motor Driven Power Steering (MDPS) Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The Motor Driven Power Steering warning light illuminates for about 3 seconds and then goes off.
- Whenever there is a malfunction with Motor Driven Power Steering.

If the MDPS warning light remains illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

Master Warning Light



This warning light illuminates:

If a malfunction is detected in any of the following:

- Forward Collision-Avoidance Assist malfunction
- Forward Collision-Avoidance Assist radar blocked
- Blind-Spot Collision-Avoidance Assist malfunction
- Blind-Spot Collision-Avoidance Assist radar blocked
- Rear Cross-Traffic Collision-Avoidance Assist malfunction
- Rear Cross-Traffic Collision-Avoidance Assist radar blocked
- Exterior light malfunction
- LED headlight malfunction

- High Beam Assist malfunction
- Smart Cruise Control malfunction
- Smart Cruise Control radar blocked
- Lane Following Assist malfunction
- Low washer fluid (if equipped)
- Tire Pressure Monitoring System (TPMS) malfunction

If the issue is resolved, the Master Warning Light turns off.

Electronic Parking Brake (EPB) Warning Light

EPB

This warning light illuminates:

- When the Start/Stop button is in the ON position. The EPB warning light illuminates for about 3 seconds and then goes off.
- Whenever there is a malfunction with EPB.

If the EPB warning light remains illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

i Information

The Electronic Parking Brake (EPB) warning light may illuminate when the Electronic Stability Control (ESC) indicator light comes on to indicate that ESC is not working properly. This does not indicate malfunction of EPB.

Low Tire Pressure Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The low tire pressure warning light illuminates for about 3 seconds and then goes off.
- When one or more tires are significantly underinflated. (The location of the underinflated tire appears on the instrument cluster.)

For more information, refer to the "Tire Pressure Monitoring System (TPMS)" section in chapter 8.

This warning light remains ON after blinking for about 60 seconds, or repeatedly blinks ON and OFF in 3 second intervals:

When there is a malfunction with the TPMS.

If this occurs, have your vehicle inspected by an authorized HYUNDAI dealer as soon as possible.

For more information, refer to the "Tire Pressure Monitoring System (TPMS)" section in chapter 8.

⚠ WARNING

- The TPMS cannot alert you to severe and sudden tire damage caused by external factors.
- If you notice any vehicle instability, immediately take your foot off the accelerator pedal, apply the brakes gradually with light force, and slowly move to a safe position off the road.

Low washer fluid warning light



This warning light illuminates:

when the washer fluid level in the reservoir is nearly empty.

Have the washer fluid reservoir refilled.

All Wheel Drive (AWD) warning light



This warning light illuminates:

Whenever there is a malfunction with the AWD system.

If this occurs frequently, have your vehicle inspected by an authorized HYUNDAI dealer.

For more details, refer to "ALL Wheel Drive (AWD)" section in chapter 6.

Inattentive Driving Warning Light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. It illuminates for about 3 seconds and then goes off.
- Yellow: When Driver Attention Warning is disabled or a malfunction is detected.

If the yellow indicator light remains on after the front view camera has been uncovered or unblocked, have your vehicle inspected by an authorized HYUNDAI dealer.

This indicator light blinks:

- Yellow: Driver Attention Warning recommends to take a break.

For more information, refer to the "Driver Attention Warning (DAW)" section in chapter 7.

Forward Safety Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The Forward Safety warning light illuminates for about 3 seconds and then goes off.
- Yellow: When Forward Safety of Forward Collision-Avoidance Assist is deselected, disabled, or a malfunction is detected.

If the yellow warning light remains on after the sensor has been uncovered or unblocked when the Forward Safety is set, have your vehicle inspected by an authorized HYUNDAI dealer.


If the yellow warning light is still on even after removing foreign material from the front of the sensors after Forward Safety select in settings, have your vehicle inspected by an authorized HYUNDAI dealer as soon as possible.

This warning light blinks:

- Red: When Forward Safety or Forward Cross-Traffic Safety function is operating.

For more information, refer to the "Forward Collision-Avoidance Assist (FCA)" section in chapter 7.

Emergency steering warning light

 if equipped



This warning light illuminates:

- When the Start/Stop button is in the ON position. It illuminates for about 3 seconds and then goes off.
- Yellow: When Forward/Side Safety of Forward Collision-Avoidance Assist is deselected, disabled, or a malfunction is detected.

If the warning light remains on after the sensor has been uncovered or unblocked when Forward/Side Safety is set, have your vehicle inspected by an authorized HYUNDAI dealer.

This warning light blinks:

- Red: When Forward/Side Safety function is operating.

For more information, refer to the "Forward Collision-Avoidance Assist (FCA)" section in chapter 7.

Lane Following Assist indicator light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. It illuminates for about 3 seconds and then goes off.
- Green: When Lane Following Assist is operating.
- Gray: When Lane Following Assist operating conditions are not satisfied.

This indicator light blinks:

- White: When the steering wheel assist is cancelled.

For more information, refer to the "Lane Following Assist (LFA)" section in chapter 7.

Lane Safety Indicator Light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. It illuminates for about 3 seconds and then goes off.
- Gray: When Lane Keeping Assist operating conditions are not satisfied.
- Green: When Lane Keeping Assist operating conditions are satisfied.
- Yellow: When Lane Safety is deselected, disabled, or a malfunction is detected.

If the yellow warning light remains on after the sensor has been uncovered or unblocked when Lane Safety is set, have your vehicle inspected by an authorized HYUNDAI dealer as soon as possible.

This indicator light blinks:

- Green: When Lane Keeping Assist is operating.

For more information, refer to the "Lane Keeping Assist (LKA)" section in chapter 7.

LED Headlight Warning Light



This warning light illuminates:

- When the Start/Stop button is in the ON position. The LED headlight warning light illuminates for about 3 seconds and then goes off.
- Whenever there is a malfunction with the LED headlight.

If the LED headlight warning light remains illuminated while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

This warning light blinks:

Whenever there is a malfunction with a LED headlight related part.

If this occurs, have your vehicle inspected by an authorized HYUNDAI dealer.

NOTICE

Driving with the LED headlight warning light on or blinking may reduce LED headlight life.

Icy road warning light

 if equipped



This warning light is to warn the driver the road may be icy.

When the temperature on the outside temperature gauge is approximately below 4°C (40°F), the Icy Road warning light and Outside Temperature Gauge blinks and then illuminates. Also, the warning chime sounds 1 time.

You can activate or deactivate Icy Road Warning function from the Settings menu in the infotainment system. Select:

- **Setup > Cluster/Head-up Display > Cluster > Content Selection > Icy Road Warning**

i Information

- If the Icy Road warning light appears while driving, you should drive more attentively and safely refraining from over-speeding, rapid acceleration, sudden braking or sharp turning, etc.
- The infotainment system may change after software updates. For more information, refer to the user's manual provided in the infotainment system and the quick reference guide.

Door Open Indicator Light



This indicator light illuminates:

When any door or tailgate is left open.

WARNING

Before driving the vehicle, confirm the door and tailgate are fully closed.

CAUTION

The 12 V battery may discharge if you leave the vehicle with the Door Open indicator light illuminated.

Electronic Stability Control (ESC) Indicator Light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. The Electronic Stability Control indicator light illuminates for about 3 seconds and then goes off.
- Whenever there is a malfunction with ESC system.

If this occurs, have your vehicle inspected by an authorized HYUNDAI dealer.

This indicator light blinks:

While ESC is operating.

For more information, refer to the "Electronic Stability Control (ESC)" section in chapter 6.

Electronic Stability Control (ESC) OFF Indicator Light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. The Electronic Stability Control OFF indicator light illuminates for about 3 seconds and then goes off.
- When you deactivate ESC system by pressing the ESC OFF button.

For more information, refer to the "Electronic Stability Control (ESC)" section in chapter 6.

ECS SPORT Indicator Light



This indicator light illuminates:

- When ECS SPORT is activated.

For more information, refer to the "Electronic Stability Control (ESC)" section in chapter 6.

Immobilizer Indicator Light



This indicator light illuminates for up to 30 seconds:

When the vehicle detects the smart key in the vehicle with the Start/Stop button in the ACC or ON position.

- At this time, you can start the vehicle.
- The indicator light goes off after starting the vehicle.

This indicator light blinks for a few seconds:

When the smart key is not in the vehicle, you cannot start the vehicle.

This indicator light illuminates for a few seconds and goes off:

If the smart key is in the vehicle and the Start/Stop button is ON, but the vehicle cannot detect the smart key.

 
If this occurs, have your vehicle inspected by an authorized HYUNDAI dealer.

This indicator light blinks:

Whenever there is a malfunction with the immobilizer system.

If this occurs, have your vehicle inspected by an authorized HYUNDAI dealer.

Turn Signal Indicator Light



This indicator light blinks:

When you operate the turn signal lever.

If any of the following occur, there may be a malfunction with the turn signal system.

- The turn signal indicator light illuminates but does not blink.
- The turn signal indicator light blinks rapidly.
- The turn signal indicator light does not illuminate at all.

If any of these occur, have your vehicle inspected by an authorized HYUNDAI dealer.

Low Beam Indicator Light

 if equipped



This indicator light illuminates:

When the headlights are on.

High Beam Indicator Light



This indicator light illuminates:

- When the headlights are on and in the high beam position.
- When the turn signal lever is pulled into the Flash-to-Pass position.

Light ON Indicator Light



This indicator light illuminates:

When the Parking lights or headlights are on.

High Beam Assist Indicator Light



This indicator light illuminates:

When the high beam is on with the light switch in the AUTO position.

- White: When High Beam Assist is ready to operate.
- Green: When High Beam Assist is operating.

If your vehicle detects oncoming vehicles in front of you, High Beam Assist switches the high beam to low beam automatically.

For more information, refer to the "High Beam Assist (HBA)" section in chapter 5.

N Mode Indicator Light



This indicator light illuminates:

- When you select "N" mode as drive mode.

For more details, refer to "N Mode" in chapter 6.

AUTO HOLD Indicator Light



This indicator light illuminates:

- White: When you activate Auto Hold by pressing the AUTO HOLD switch.
- Green: When you stop the vehicle completely by depressing the brake pedal with Auto Hold activated.
- Yellow: Whenever a malfunction with the Auto Hold is detected.

If the AUTO HOLD indicator light remains yellow while driving, have your vehicle inspected by an authorized HYUNDAI dealer.

For more information, refer to the "Electronic Parking Brake (EPB)" section in chapter 6.

DRIFT mode indicator light



This indicator light illuminates:

- When the drive mode is in the N DRIFT Optimizer.

For more information, refer to the "N Drift Optimizer" section in chapter 6.

N Launch Control indicator light



This indicator light illuminates:

- When the vehicle is in the N Launch Control.

For more information, refer to the "N Launch Control" section in chapter 6.

Speed Limiter indicator light



This indicator light illuminates:

When the speed limiter is enabled.

For more information, refer to the "Manual Speed Limit Assist (MSLA)" in chapter 7.

Intelligent Speed Limit Assist indicator light



This indicator light illuminates:

- When the Start/Stop button is in the ON position. It illuminates for about 3 seconds and then goes off.
- Yellow: When Intelligent Speed Limit Assist is disabled, the front view camera is blocked, or a malfunction is detected.

If the yellow indicator light remains on after the front view camera has been uncovered or unblocked, have your vehicle inspected by an authorized HYUNDAI dealer.

For more information, refer to the "Intelligent Speed Limit Assist (ISLA)" section in chapter 7.

Cluster Display Messages

Shift to P

This message appears if the Start/Stop button is pressed to the OFF position without the gear in the P (Park) position.

If this occurs, the Start/Stop button goes to the ACC position.

Vehicle is in N. Press START button, shift to P and turn vehicle Off

This message appears if you try to turn off the vehicle with the gear in N (Neutral).

To turn off the vehicle:

1. Press the Start/Stop button. The Start/Stop button moves to the ON position.
2. Shift the gear to P (Park).
3. Press the Start/Stop button again, then the vehicle turns off.

Low key battery

When the Start/Stop button is pressed to the OFF position, a message may appear, indicating the internal battery of the smart key is low.

Replace the smart key battery.

Press brake pedal to start vehicle

This message appears if the Start/Stop button is pressed repeatedly without depressing the brake pedal.

Start the vehicle by depressing the brake pedal and then pressing the Start/Stop button.

Key not in vehicle

This message appears if the smart key is not in the vehicle when you have left the vehicle with the Start/Stop button in the ON or Start position.

Always turn off the vehicle before leaving your vehicle.

Press START button again

If you cannot start the vehicle after the Start/Stop button is pressed, attempt to start the vehicle by pressing the Start/Stop button again.

If the warning message appears each time you press the Start/Stop button, have your vehicle inspected by an authorized HYUNDAI dealer.

Press START button with key

This message appears if the smart key is not detected when you press the Start/Stop button after accessing with the smart key.

Check smart key system

This message is displayed when there is a problem with the smart key system. Have your vehicle inspected by an authorized HYUNDAI dealer.

Check BRAKE SWITCH fuse

This message appears if the brake switch fuse is disconnected. Replace the fuse before starting the vehicle.

If that is not possible, start the vehicle by pressing the Start/Stop button for 10 seconds in the ACC position.

Shift to P to start vehicle

This message appears if you try to start the vehicle in any other position except P (Park).

i Information

For your safety, start the vehicle with the gear shifted to P (Park).

Check regenerative brakes

These warning messages are displayed when the regenerative brake system does not work properly.


In this case, have your vehicle inspected by an authorized HYUNDAI dealer.

Check Virtual Engine Sound System

This message is displayed when there is a problem with the Virtual Engine Sound System (V ESS).

In this case, have your vehicle inspected by an authorized HYUNDAI dealer.

Battery discharging due to external electrical devices


 if equipped

This message appears if the vehicle 12 V battery voltage is low or if a current draw is detected that could drain the vehicle battery.

Do not connect any external electronic devices to the battery system or battery discharge may occur.

If this message appears on the cluster and there are no other external electronic devices connected to the vehicle, have your vehicle inspected by an authorized HYUNDAI dealer.

Door, Hood, Tailgate open indicator

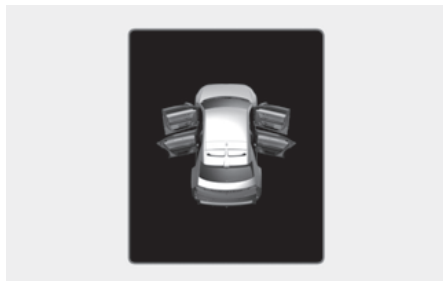


This warning appears if any door or hood or tailgate is left open. The warning indicates which door is open on the cluster display.

CAUTION

Before driving the vehicle, confirm the door, hood, and tailgate are fully closed.

Lights

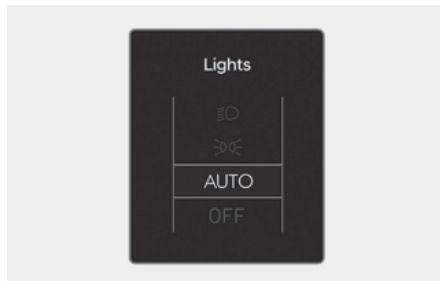

This indicator displays which exterior light is selected using the lighting control.

You can activate or deactivate Wiper/Lights display function from the infotainment system. Select **Setup > Cluster/Head-up Display > Cluster > Content Selection > Wiper/Lights Display**.

Low tire pressure



This warning message appears if the tire pressure is low. The corresponding tire on the vehicle is illuminated.


For more information, refer to the "Tire Pressure Monitoring System (TPMS)" section in chapter 8.

Wiper

Front



Rear

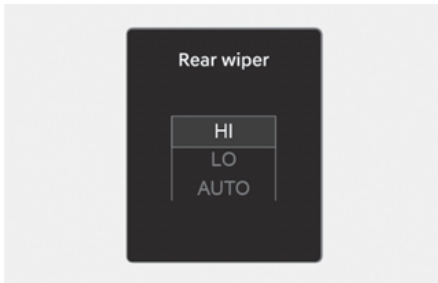

This indicator displays which wiper speed is selected using the wiper control.

You can activate or deactivate Wiper/Lights display function in the infotainment system. Select **Setup > Cluster/Head-up Display > Cluster > Content Selection > Wiper/Lights Display**.

i Information

The infotainment system may change after software updates. For more information, refer to the user's manual provided in the infotainment system and the quick reference guide.

Check turn signal

This message appears if the turn signal lights are not operating properly.

Replace the burned out bulb with a new one with the same wattage rating.

Check headlight LED

This message appears if there is a problem with the LED headlight. Have your vehicle inspected by an authorized HYUNDAI dealer.

Check Active Air Flap System

This warning message appears in the following situations:

- There is a malfunction with the actuator flap.
- There is a malfunction with the actuator air flap controller.
- The air flap does not open.

When all of the above conditions are fixed, the warning disappears.

Cluster Display

Cluster Display Control



Switch	Function
	MODE button for changing View Modes
^, v	MOVE switch for changing items
OK	SELECT/RESET button for setting or resetting the selected item

View Modes

View modes	Explanation
Driving Assist	This mode displays Driver Assistance system such as Lane Keeping Assist, Smart Cruise Control, and Lane Following Assist etc.
Turn by Turn	This mode displays the navigation guidance.
Utility	This mode displays driving information such as the trip distance, electric energy economy, etc.

The information provided may differ depending on which features are available to your vehicle.

Driving Assist view



LKA/SCC/LFA/HDA


Displays the state of Lane Keeping Assist, Smart Cruise Control, Lane Following Assist, and Highway Driving Assist. For more information, refer to each system information in Chapter 7.

Turn By Turn (TBT) view




Turn-by-turn navigation, distance/time to destination information is displayed when Turn by Turn view is selected.

Motor Temperature view

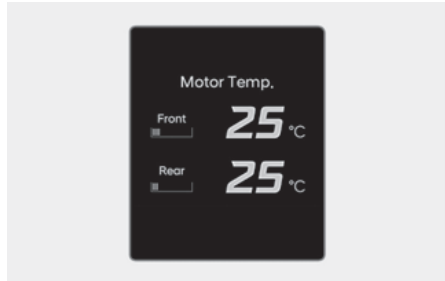

This mode displays information related to motor temperature.

Lap timer

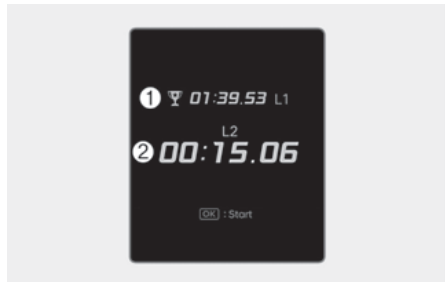

- (1) Best lap
- (2) Current lap

- To start

Press the **OK** button shortly on the steering wheel. The lap timer will start counting the current lap (2).

- To stop


Press and hold the **OK** button for more than 1 second on the steering wheel while the lap timer is counting the current lap (2).

G-Force



This mode displays the force delivered to the vehicle laterally while the vehicle is in motion.

Energy flow / Driving force distribution

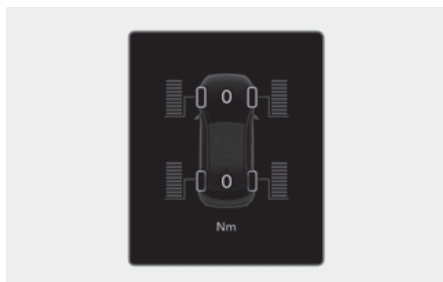


- The electric vehicle system informs the drivers its energy flow in various operating modes.
- The distribution status of the driving power of the front and rear wheels are displayed when Auto AWD mode is activated.

For more details, refer to "ALL Wheel Drive (AWD)" section in chapter 6.

Utility view

In the Utility view, using the **▲**, **▼** (UP, DOWN) switch, you may change through items in the following order.

Current Trip

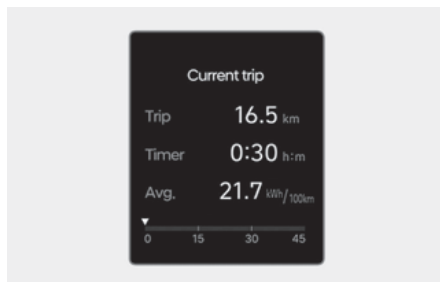


Trip distance, total driving time, average energy consumption, and instant energy consumption are displayed.

The information is combined for each ignition cycle. However, when the vehicle has been OFF for 3 minutes or longer the Current Trip screen is reset.


To reset manually, press the **OK** button on the steering wheel for more than 1 second when "Current Trip" appears.

After Recharging

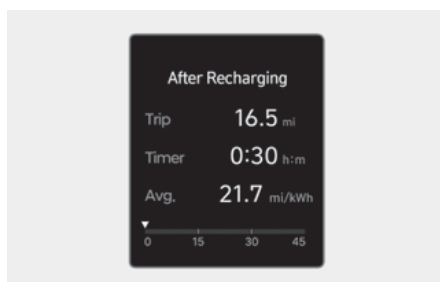

Trip distance, total driving time, average energy consumption, and instant energy consumption after the vehicle has been recharged are displayed. To reset manually, press the **OK** button on the steering wheel for more than 1 second when "After Recharging" appears.

Since Last Reset

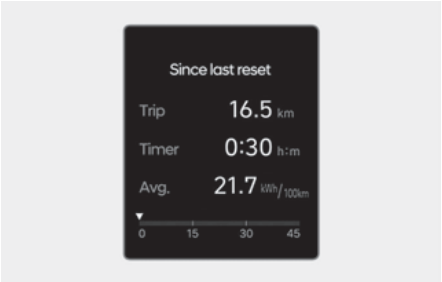

Accumulated trip distance, total driving time, and average energy economy are displayed.

The information is accumulated starting from the last reset.

To reset manually, press the **OK** button on the steering wheel for more than 1 second when "Since Last Reset" appears.

Tire pressure



The tire pressure of each tire is displayed.

For more information, refer to the "Tire Pressure Monitoring System (TPMS)" section in chapter 8.

Additional information display

Driver Assistance



The current operation condition of Manual Speed Limit Assist, Smart Cruise Control, Lane Following Assist, etc. appears.

Vehicle Settings (Infotainment System)

Vehicle Settings in the infotainment system provides user options for the settings including door lock/unlock features, convenience features, driver assistance settings, etc.

Vehicle Setup menu

- Driver Assistance
- Drive Mode
- N Active Sound+
- Climate
- Seat
- Lights
- Door
- Digital Key
- Convenience

The information provided may differ depending on which functions are available to your vehicle.

WARNING

Do not adjust the Vehicle Settings while driving. You may be distracted from the driving task and could crash.

Setting Your Vehicle



Select **Setup > Vehicle** to change the settings for features.

i Information

The infotainment system may change after software updates. For more information, refer to the user's manual provided in the infotainment system and the quick reference guide.

