

Index

A

About "Getting Started with Your Electric Vehicle"	1-9
Accessing Your Vehicle	5-5
Immobilizer System	5-10
Smart Key	5-5
Active Air Flap	6-62
Malfunction	6-62
Advanced Rear Occupant Alert (ROA)	5-29
Advanced Rear Occupant Alert Operation	5-30
Advanced Rear Occupant Alert Precautions	5-31
Advanced Rear Occupant Alert Settings	5-29
Declaration of Conformity	5-32
Air Conditioner Compressor Label	2-16
Air Conditioning System	2-14
Air Ventilation Seats	3-14
Airbag - Supplemental Restraint System	3-33
Airbag Warning Labels	3-53
How does the Airbags System Operate?	3-39
Occupant Classification System (OCS)	3-42
SRS Care	3-52
SRS Components	3-35
SRS Warning Light	3-42
What to Expect After an Airbag Inflates	3-41
Where are the Airbags?	3-36
Why didn't My Airbag Go Off in a Collision?	3-48
ALL Wheel Drive (AWD)	6-38
Emergency precautions	6-41
Appearance Care	9-46
Exterior Care	9-46
Interior Care	9-50
Automatic Climate Control System	5-76
Automatic Heating and Air Conditioning	5-77
Manual Heating and Air Conditioning	5-78
System Maintenance	5-87
System Operation	5-86
Aux. Battery Saver+	1-56

B

Battery (12 V)	9-18
Battery Capacity Label	9-19
Battery Recharging	9-19
For Best Battery Service	9-19
Reset Items	9-20
Before Driving	6-4
Before Entering the Vehicle	6-4
Before Starting	6-4
Blind-Spot Collision-Avoidance Assist (BCA)	7-34
Blind-Spot Collision-Avoidance Assist Malfunction and Limitations	7-39
Blind-Spot Collision-Avoidance Assist Operation	7-37

Blind-Spot Collision-Avoidance Assist Settings	7-36
Blind-Spot View Monitor (BVM)	7-62
Blind-Spot View Monitor Malfunction	7-64
Blind-Spot View Monitor Operation	7-63
Blind-Spot View Monitor settings	7-63
Brake Fluid	9-13
Checking the Brake Fluid Level	9-13
Braking System	6-25
Anti-Lock Brake System (ABS)	6-32
Auto Hold	6-30
Brake Assistant System (BAS)	6-37
Brake Disc Cleaning	6-31
Disc Brakes Wear Indicator	6-26
Electronic Parking Brake (EPB)	6-27
Electronic Stability Control (ESC)	6-33
Good Braking Practices	6-38
High performance brake	6-26
Hill-Start Assist Control (HAC)	6-37
Power-Assist Brakes	6-25
Vehicle Stability Management (VSM)	6-36
Bulb Wattage	2-12

C

Cabin Air Filter	9-15
Filter Inspection	9-15
Filter Replacement	9-15
Center Console Overview	2-6
Charging Your Electric Vehicle	1-14
Checking Basic Information on Charging Your Electric Vehicle	1-19
Safety Precautions for Charging Your Electric Vehicle	1-14
Stopping Charging Immediately	1-35
Using a DC Charger	1-26
Using a Portable Charger (ICCB)	1-29
Using an AC Charger	1-24
Child Restraint System (CRS)	3-25
Children Always in the Rear	3-25
Installing a Child Restraint System (CRS)	3-27
Selecting a Child Restraint System (CRS)	3-26
Climate Control Additional Features	5-91
Air Conditioner Auto-Dry	5-91
Auto Defogging System	5-91
Auto Dehumidify	5-92
Link to Climate Settings for Auto-Adjustment	5-94
Recirculating Air When Entering a Tunnel	5-93
Recirculating Air When Washer Fluid is Used	5-93
Cluster Display	4-25
Cluster Display Control	4-25
View Modes	4-25
Convenience Features	5-1
Coolant	9-11

Changing Coolant	9-13
Countermeasures for Accidents or Fire	1-68
If the Electric Vehicle Catches Fire	1-68
If the Electric Vehicle Is Submerged	1-68
If the Electric Vehicle Needs Towing	1-69
Other Precautions for Electric Vehicle Accidents	1-70

D

Declaration of Conformity	7-164
Front Corner Radar/Rear Corner Radar	7-165
Front Radar	7-164
Dimensions	2-10
Door Locks	5-21
Automatic Door Lock and Unlock Features	5-26
Electronic Child Safety Lock	5-26
Operating Door Lock/Unlock from Inside the Vehicle	5-24
Operating Door Locks from Outside the Vehicle (Electric type)	5-23
Operating Door Unlocks from Outside the Vehicle	5-21
Vehicle Auto-Shut Off Function	5-27
Drive Mode Integrated Control System	6-44
Drive Mode	6-44
Drive Mode Characteristic	6-46
Driver Assistance System	7-1
Driver Assistance System Notice	7-4
Driver Attention Warning (DAW)	7-57
Driver Attention Warning Malfunction and Limitations	7-59
Driver Attention Warning Operation	7-58
Driver Attention Warning Settings	7-57
Driving Your Electric Vehicle	1-57
Checking Electric Vehicle Driving Information	1-58
Starting and Stopping the Vehicle	1-57
Driving Your Vehicle	6-1

E

Electric Charging Door	5-58
Electric Vehicle Specifications	2-11
Electronic Limited Slip Differential	6-42
Warning Messages	6-43
Emergency Situations	8-1
Explanation of Scheduled Maintenance Items	9-10
Air Conditioning Refrigerant	9-10
Brake Discs, Pads, Calipers and Rotors	9-10
Brake Fluid	9-10
Brake Hoses and Lines	9-10
Coolant	9-10
Cooling System	9-10
Drive Shafts and Boots	9-10
Gear Fluid	9-10
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint	9-10

Suspension Mounting Bolts	9-10
Exterior Lights	5-65
Battery Saver Function	5-67
Daytime Running Light (DRL)	5-68
Headlight Delay Function	5-67
High Beam Operation	5-66
Interior Button Lights	5-68
Lighting Control	5-65
Turn Signals and Lane Change Signals	5-67
Exterior Overview (Front View)	2-2
Exterior Overview (Rear View)	2-3

F

Forward Collision-Avoidance Assist (FCA)	7-4
Forward Collision-Avoidance Assist Malfunction and Limitations	7-20
Forward Collision-Avoidance Assist Operation	7-10
Forward Collision-Avoidance Assist Settings	7-7
Forward/Reverse Parking Distance Warning (PDW)	7-115
Forward/Reverse Parking Distance Warning Malfunction and Limitations	7-118
Forward/Reverse Parking Distance Warning Operation	7-116
Forward/Reverse Parking Distance Warning Settings	7-116
Forward/Side/Reverse Parking Collision-Avoidance Assist (PCA)	7-131
Parking Collision-Avoidance Assist Malfunction and Limitations	7-135
Parking Collision-Avoidance Assist Operation	7-133
Parking Collision-Avoidance Assist Settings	7-132
Forward/Side/Reverse Parking Distance Warning (PDW)	7-120
Forward/Side/Reverse Parking Distance Warning Malfunction and Limitations	7-123
Parking Distance Warning Operation	7-121
Parking Distance Warning Settings	7-120
Fuses	9-32
Fuse/Relay Panel Description	9-35
Instrument Panel Fuse Replacement	9-33
Motor Compartment Panel Fuse Replacement	9-34

G

Gear Fluid	9-14
-------------------------	------

H

Hazard Warning Flasher	8-2
Head-Up Display	5-60
Head-Up Display Information	5-60
Head-Up Display Settings	5-60
Precautions while Using the Head-Up Display	5-61
High Beam Assist (HBA)	5-68
High Beam Assist Malfunction and Limitations	5-70
High Beam Assist Operation	5-69
High Beam Assist Settings	5-69
Highway Driving Assist (HDA)	7-88
Highway Driving Assist Malfunction and Limitations	7-96

Highway Driving Assist Operation	7-91
Highway Driving Assist Settings	7-90
Hood	5-51
Closing the Hood	5-51
Opening the Hood	5-51
Hyundai Digital Key	5-11
Digital Key (Card Key)	5-17
Digital Key (Smartphone)	5-11
Limitations of the System	5-21
Used Vehicle/Digital Key Maintenance	5-20

I

If the Vehicle Does Not Start	8-3
Confirm the EV Battery is not Low on the Charge Gauge	8-3
If You Have a Flat Tire (with Tire Mobility Kit)	8-11
Components of the Tire Mobility Kit	8-14
How to Adjust Tire Pressure	8-17
Introduction	8-12
Notes on the Safe Use of the Tire Mobility Kit	8-12
Using the Tire Mobility Kit When a Tire is Flat	8-15
Important Safety Precautions	3-2
Airbag Hazards	3-2
Always Wear Your Seat Belt	3-2
Control Your Speed	3-3
Driver Distraction	3-2
Keep Your Vehicle In Safe Condition	3-3
Never Drink or Take Drugs and Drive	3-2
Restrain All Children	3-2
In Case of an Emergency While Driving	8-2
If the Vehicle Stalls at A Crossroad or Crossing	8-2
If the Vehicle Stalls While Driving	8-2
If You Have a Flat Tire While Driving	8-3
Infotainment System	5-105
Antenna	5-105
Bluetooth® Wireless Technology	5-107
Infotainment System	5-106
Steering Wheel Remote Controls	5-106
USB Port	5-105
Voice Recognition	5-106
Instrument Cluster	4-1, 4-2
Cluster Display Messages	4-21
Gauges and Meters	4-4
Gear Shift Indicator	4-8
Instrument Cluster Control	4-4
Power/Charge Gauge	4-5
State of Charge (SOC) Gauge for High Voltage Battery	4-5
Warning and Indicator Lights	4-9
Intelligent Speed Limit Assist (ISLA)	7-51
Intelligent Speed Limit Assist Malfunction and Limitations	7-55
Intelligent Speed Limit Assist Operation	7-53

Intelligent Speed Limit Assist Settings	7-52
Interior Features	5-95
Cargo Net Holder	5-103
Cargo Security Screen	5-103
Clock	5-101
Cluster Fascia Side Panel	5-98
Coat Hook	5-101
Cup Holder	5-95
Floor Mat Anchor(s)	5-102
Power Outlet	5-96
Rear Side Window Sunshades	5-102
Sunvisor	5-96
USB Charger	5-97
Vehicle to Load (V2L)	5-101
Wireless Smartphone Charging System	5-99
Interior Lights	5-71
Ambient Light	5-72
Cargo Area Lamp	5-72
Front Lamps	5-71
Glove Box Lamp	5-72
Interior Light AUTO cut	5-71
Rear Lamps	5-71
Vanity Mirror Lamp	5-71
Interior Overview	2-4

J

Jump Starting (12 V Battery)	8-4
---	-----

L

Lane Following Assist (LFA)	7-85
Lane Following Assist Malfunction and Limitations	7-88
Lane Following Assist Operation	7-86
Lane Following Assist Settings	7-85
Lane Keeping Assist (LKA)	7-28
Lane Keeping Assist Malfunction and Limitations	7-32
Lane Keeping Assist Operation	7-30
Lane Keeping Assist Settings	7-29
Light Bulbs	9-43
Headlight, Parking Light, Turn Signal Light, Daytime Running Light (DRL) Replacement	9-44
High Mounted Stop Light Replacement	9-45
Interior Light Replacement	9-45
License Plate Light Replacement	9-45
Rear Combination Light Replacement	9-44
Side Repeater Light Replacement	9-44

M

Maintenance	9-1
Maintenance Services	9-4

Owner Maintenance Precautions	9-4
Owner's Responsibility	9-4
Manual Speed Limit Assist (MSLA)	7-49
Manual Speed Limit Assist Operation	7-49
Mirrors	5-35
Inside Rearview Mirror	5-35
Side View Mirrors	5-45
Motor Compartment	9-3
Motor Compartment Overview	2-9
Motor Number	2-16

N

N Brake Regen	6-15
N Brake Regen Limitations	6-16
N Brake Regen Optimization Mode	6-16
One Pedal Driving	6-17
Using i-PEDAL	6-18
Using N Brake regen	6-15
N Button	6-43
N Mode	6-47
Electronic Controlled Suspension (ECS)	6-61
N Active Sound+	6-50
N Battery Preconditioning	6-57
N Drift Optimizer	6-59
N e-Shift	6-48
N Grin Boost	6-55
N Launch Control	6-51
N Pedal	6-53
N Race	6-56
N Road Sense	6-61
N Torque Distribution	6-54
Performance Option Settings	6-47
Track SOC	6-60
Navigation-based Smart Cruise Control (NSCC)	7-80
Limitations of Navigation-based Smart Cruise Control	7-82
Navigation-based Smart Cruise Control Operation	7-80
Navigation-based Smart Cruise Control Settings	7-80

O

Open Source Software Notice	2-17
Over-The-Air Software Update	5-62
Approving Software Update	5-62
Downloading Software	5-62
Preparing Software Update	5-63
Updating Software	5-63
Owner Maintenance	9-5
Owner Maintenance Schedule	9-6

P

Power Tailgate	5-52
Emergency Tailgate Safety Release	5-56
Operating the Power Tailgate	5-53
Power Tailgate Operating Conditions	5-52
Resetting the Power Tailgate	5-55
Setting the Power Tailgate	5-55

R

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)	7-107
Rear Cross-Traffic Collision-Avoidance Assist Malfunction and Limitations	7-112
Rear Cross-Traffic Collision-Avoidance Assist Operation	7-109
Rear Cross-Traffic Collision-Avoidance Assist Settings	7-108
Rear View Monitor (RVM)	7-99
Rear View Monitor Malfunction and Limitations	7-102
Rear View Monitor Operation	7-100
Rear View Monitor Settings	7-99
Recommended Lubricants and Capacities	2-14
Refrigerant Label	2-16
Remote Smart Parking Assist 2 (RSPA 2)	7-139
Remote Smart Parking Assist malfunction and limitations	7-158
Remote Smart Parking Assist Operation	7-142
Remote Smart Parking Assist Settings	7-141
Reporting Safety Defects	2-17
Reverse Parking Collision-Avoidance Assist (PCA)	7-125
Reverse Parking Collision-Avoidance Assist Malfunction and Limitations	7-127
Reverse Parking Collision-Avoidance Assist Operation	7-126
Reverse Parking Collision-Avoidance Assist Settings	7-126

S

Safe Exit Assist (SEA)	7-44
Safe Exit Assist Malfunction and Limitations	7-48
Safe Exit Assist Operation	7-46
Safe Exit Assist Settings	7-45
Scheduled Maintenance Services	9-7
Maintenance Schedule	9-7
Seat Belts	3-15
Additional Seat Belt Safety Precautions	3-22
Care of Seat Belts	3-24
Seat Belt Restraint System	3-17
Seat Belt Safety Precautions	3-15
Seat Belt Warning Light	3-16
Seat Warmers	3-13
Seats	3-4
Front Seats	3-7
Head Restraint	3-11
Rear Seats	3-9
Safety Precautions	3-6
Shift By Wire	6-9

Cluster Display Messages Information	6-13
Good Driving Practices	6-14
Shift By Wire Operation	6-9
Smart Cruise Control (SCC)	7-64
Smart Cruise Control Malfunction and Limitations	7-75
Smart Cruise Control Operation	7-66
Smart Cruise Control Settings	7-65
Smart Regeneration System	6-19
Front Sensors (Front Radar)	6-21
Pausing Smart Regeneration System	6-21
Smart Regeneration Level Settings	6-20
Smart Regeneration System On/Off	6-19
Smart Regeneration System Operating Condition	6-20
Smart Regeneration System Precautions	6-22
System Check Message	6-22
Smart Tailgate	5-56
Deactivating Smart Tailgate	5-57
Detecting Area	5-57
Using Smart Tailgate	5-56
Special Driving Conditions	6-63
Driving at Night	6-64
Driving in Flooded Areas	6-64
Driving in the Rain	6-64
Hazardous Driving Conditions	6-63
Highway Driving	6-64
Hydroplaning	6-64
Rocking the Vehicle	6-63
Smooth Cornering	6-63
Start/Stop Button	6-5
Remote Start	6-8
Start/Stop Button Positions	6-6
Starting the Vehicle	6-7
Turning Off the Vehicle	6-8
Steering Wheel	5-33
Haptic Warning/Steering Wheel Vibration Warning	5-35
Horn	5-35
Motor Driven Power Steering (MDPS)	5-33
Steering Wheel Heater	5-34
Tilt/Telescopic Steering	5-33
Steering Wheel Control Overview	2-8
Storage Compartment	5-94
Center Console Storage	5-94
Glove Box	5-95
Sliding Armrest	5-95
Surround View Monitor (SVM)	7-102
Surround View Monitor Malfunction and Limitations	7-106
Surround View Monitor Operation	7-104
Surround View Monitor Settings	7-103

T

Theft-Alarm System	5-28
Tire Pressure Monitoring System (TPMS)	8-7
Changing a Tire with TPMS	8-10
Check Tire Pressure	8-7
Low Tire Pressure Position and Tire Pressure Telltale	8-9
Tire Pressure Monitoring System	8-8
TPMS (Tire Pressure Monitoring System) Malfunction Indicator	8-10
Tire Specification and Pressure Label	2-15
Tires and Wheels	2-13, 9-21
All Season Tires	9-31
Check Tire Inflation Pressure	9-22
Low Aspect Ratio Tires	9-32
Radial-Ply Tires	9-31
Recommended Cold Tire Inflation Pressures	9-21
Snow Tires	9-31
Summer Tires	9-31
Tire Care	9-21
Tire Maintenance	9-25
Tire Replacement	9-24
Tire Rotation	9-23
Tire Sidewall Labeling	9-25
Tire Terminology and Definitions	9-28
Tire Traction	9-25
Wheel Alignment and Tire Balance	9-23
Wheel Replacement	9-24
Towing	8-18
Removable Towing Hook	8-20
Towing Service	8-18
Trailer Towing	6-69

U

Understanding Your Electric Vehicle	1-10
Characteristics of Your Electric Vehicle	1-10
Other Precautions for Electric Vehicle Management	1-13
Precautions When Using the High Voltage Battery	1-12
Using Electric Vehicle Functions	1-36
Checking Energy Information	1-38
Checking the Electric Vehicle Screen Configuration	1-36
Setting a Battery Discharging Limit When Using Vehicle to Load (V2L)	1-44
Setting Electric Vehicle Specialized Functions	1-45
Setting the Next Departure Time	1-39
Setting the Options for the AC Charger	1-41
Using V2L Function	1-49
Safety Precautions When Using the V2L Function	1-49
Solving V2L Problems	1-55
Using Electricity Inside the Vehicle	1-53
Using Electricity Outside the Vehicle	1-52

V

Vehicle Certification Label	2-15
Vehicle Identification Number (VIN)	2-15
Vehicle Information and Reporting Safety Defects	2-1
Vehicle Load Limit	6-69
The Loading Information Label	6-70
Vehicle Settings (Infotainment System)	4-29
Setting Your Vehicle	4-29
Vehicle Weight and Luggage Volume	2-14

W

Washer Fluid	9-14
Checking the Washer Fluid Level	9-14
Windows	5-47
Power Windows	5-48
Windshield defrosting (Heater)	5-90
Rear Window Defroster	5-90
Windshield Defrosting and Defogging	5-88
Automatic Climate Control System	5-89
Defogging Logic	5-89
Winter Driving	6-66
Snow or Icy Conditions	6-66
Winter Precautions	6-67
Wiper Blades	9-16
Blade Inspection	9-16
Blade Replacement	9-16
Wipers and Washers	5-73
Front Windshield Washers	5-74
Front Windshield Wipers	5-73
Rear Windshield Washers	5-75
Rear Windshield Wipers	5-75